Currently, only Toyota and Yamaha keys are supported. For more details, Toyota supported keys have the 1-st page from the following set: X0

X2 X3

X4*

X4* - only european market supported.



Run the **Clone Mode** selecting the appropriate menu item:

😻 Tango	v1.75	WWW.SCORPIO-LK.COM	
File Keymaker	Tools Settings Help		
	1	Transponder Type	py machine

The next screen will appear:

🚱 Tango v1.75	WWW.SCORPIO-LK.COM	
File Keymaker Tools Settings Help		
	Transponder Type	
Original Key Data	Clone Data	
No current info	No current info	

Place an original key on the Tango and click "**Read original key**" button:

V

www.scorpio-lk.com

L	1k.com		
	Read original key		
WW	Original Key Data No current info	Clone Data No current info	

Once the TIRIS DST or DST+ transponder detected the "Decode Transponder" button appears:

Decode Transponder	
Original Key Data	Clone Data
Transponder: TIRIS DST+	Allowed transponder: TPX2

Click the "**Decode Transponder**" button. The dialog window about your intention will appear. On this dialog, click **YES** button:

	6		
Original Key Data	TIRIS DST+	Tango Decode transponde Yes No	er? transponder:

Tango will run the decoding process:

	6		
– Original Key Data ––––––––––––––––––––––––––––––––––	TIRIS DST+	Decoding	nder:

In case the decoding finishes successfully the "Write Clone" button will appears:

www.scorpio-lk.com



Now, **remove the original key** and replace it with EH2 (battery emulator) or TPX2 transponder. You are all set to make a clone. Click the "Write Clone" button and Tango will do it.

www.scorpio-lk.com

www.scorpio-lk.com

www.scorpio-lk.com