

1


APP Guide

1. Software Activation

At first, please keep network working, run NEXZDAS series APP. If you are a new customer, please register at first. Input your E-mail and set your password to complete binding.




www.obdii365.com

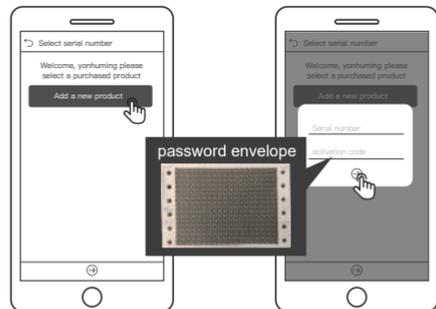

2


2. Set up Bluetooth

After enter the HOME page, click the Bluetooth icon in the top right corner to connect Bluetooth.

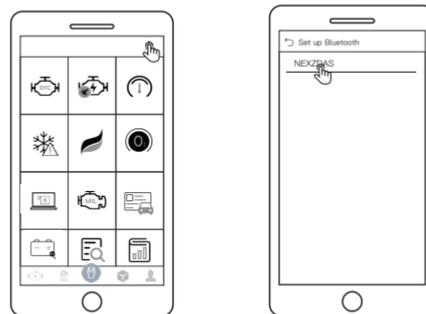

3. Software Downloads


After activation complete, click 'TOOL' module and enter App store to download the function you need.

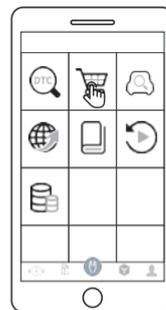

3

4. Feedback

Click the feedback button in the upper right corner of the software interface for quick feedback with text or image form. And we will respond to it as soon as possible.

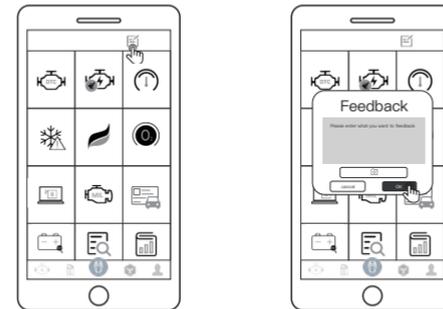



5. Product management

Click the "Switch / Add Product" button in the "Me" module to enter the product selection interface. You can switch, add and delete product. (Delete product can be done by making a left slide)



4

Vehicle OBD connector locates in different parts,see the picture as below:

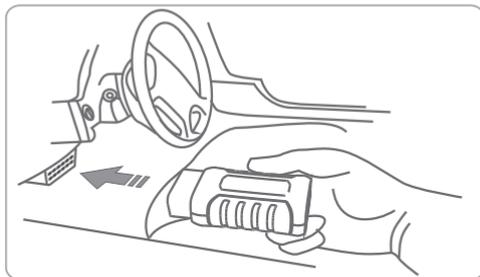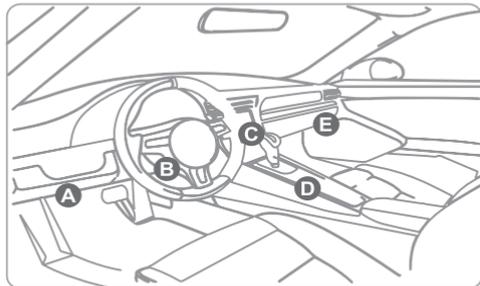

Software Downloading

Opening the website:
<http://www.humzor.com>

Home page>Support page

Then find the right software to download and install.



Specifications

Operating System	Android
Processor	ARM 32-bit Cortex processor
Communications	Bluetooth
Input Voltage	DC 9 ~ 18V
Operating Temperature	-20 to 70°C (-14-158°F) ,Relative Humidity:<90%
Storage Temperature	-40 to 85°C (-40 to 185°F) ,Relative Humidity:<90%
Dimension	150mm(5.91") * 94mm(3.70") * 40mm(1.57")
Unit Weight	NW:0.07kg(0.154lb) GW:0.166kg(0.336lb)

Warranty

Warranty Ordinance: Limited one year warranty for NEXZDAS .

No Warranty Provided in Following Conditions:

1. Warranty services not provided beyond the warranty period.
2. Product damage caused by incorrect installation or improper operation.
3. Self-modification, replacement of internal parts, and other man-made damage, etc.
4. Product damaged by natural disasters, accidents, infiltration of liquids, etc.

www.obd.com



www.humzor.com

NEXZDAS Series

Quick Start Guide



HUMZOR
 Auto Master.Master Auto