


Creader 3008 Handset

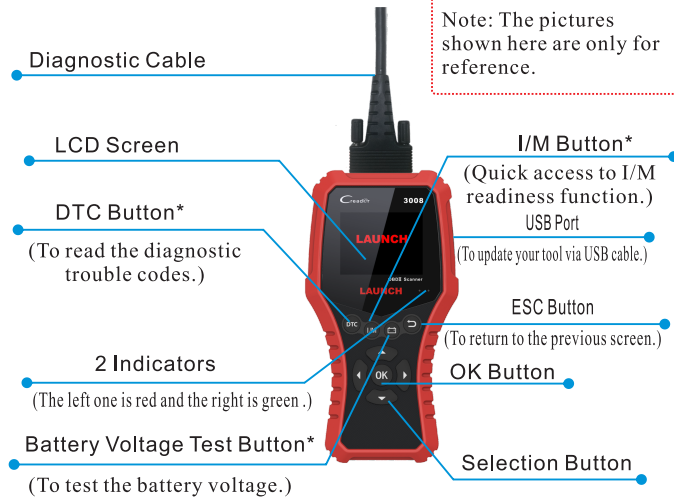

Note:

- The buttons marked with * indicate the function hot keys and only apply to Diagnostics.
- This Quick Start Guide is subject to change without written notice.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

1. Preparation & Connections

Note: To make sure the tool is running the latest available software, it is advisable to check for updates on a frequent basis. Refer to Section 3 “Register & Update” for details.


1. Preparation

- Turn the vehicle ignition on.
- Vehicle battery voltage range should be 9-18Volts.
- Throttle should be in a closed position.

2. Vehicle Connection

1. Locate vehicle's DLC socket: The DLC (Diagnostic Link Connector) is typically a standard 16-pin connector where diagnostic code readers interface with a vehicle's on-board computer. It is usually located 12 inches from the center of the steering wheel, under or around the driver's side for most vehicles.

If the DLC cannot be found, refer to the vehicle's service manual for the location.

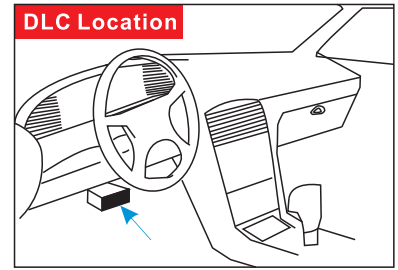

2. Connect the diagnostic cable into the vehicle's DLC socket.

2. Basic Operations

The icons in black at the bottom of the screen indicate the available actions, which can be done by pressing the corresponding buttons on the tool.

Read DTC

- Press the **DTC** button to retrieve the DTC.
- If more than one DTC was retrieved, press ◀ / ▶ to view different DTCs.
- In the case of long code definitions, use ▲ / ▼ to view the additional information.
- You can press OK button to print the test records.

Test Battery Voltage

Press the Battery Voltage Test button to test the vehicle's battery voltage.

Check I/M Readiness

Press the **I/M** button to check the I/M (Inspection & Maintenance) readiness.

Monitor Status

MIL Status	OFF
DTCs in this ECU	108
Readiness Completed	5
Readiness Not Completed	2
Readiness Not Supported	3
Datstream Supported	119

OK

DTC

P1415	1/33
FORD	Current
Air Pump Circuit Malfunction/(AIR) System Bank 1	

OK

I/M Readiness 1-5/10

Misfire monitor	N/A
Fuel system	OK
Component monitor	INC
Catalyst monitor	N/A
Heated catalyst	INC

3. Register & Update

The tool can be updated via USB cable.

Note: Make sure the PC has an Internet connection.

1. Go to <http://mycar.x431.com/> and download the update tool to the computer.
2. Decompress and install it on your computer (compatible with Windows XP, Windows 7, Windows 8 & Windows 10).
3. After installation, connect one end of the USB cable to the USB port of PC, and the other end to the tool.
4. If a newer version is found, a screen similar to Fig. A will appear.

Boot Version:
V1.00.000

Serial Number:
97289000029

Register Code:
36FFDB054753

1. USB Connected for Upgrade.
2. Press [EXIT] key to Enter Normal Mode.

5. Launch the update tool on your PC, the system starts reading the tool. Once it obtains the tool information, it will directly navigate to the update center.
6. Click [Upgrade] to start updating.
7. Once update is complete, a "Upgrade success" message box will pop up.
8. The update process is complete, your tool is now ready for use.