


Test Platform Cable User Manual

1. Wiring Connection

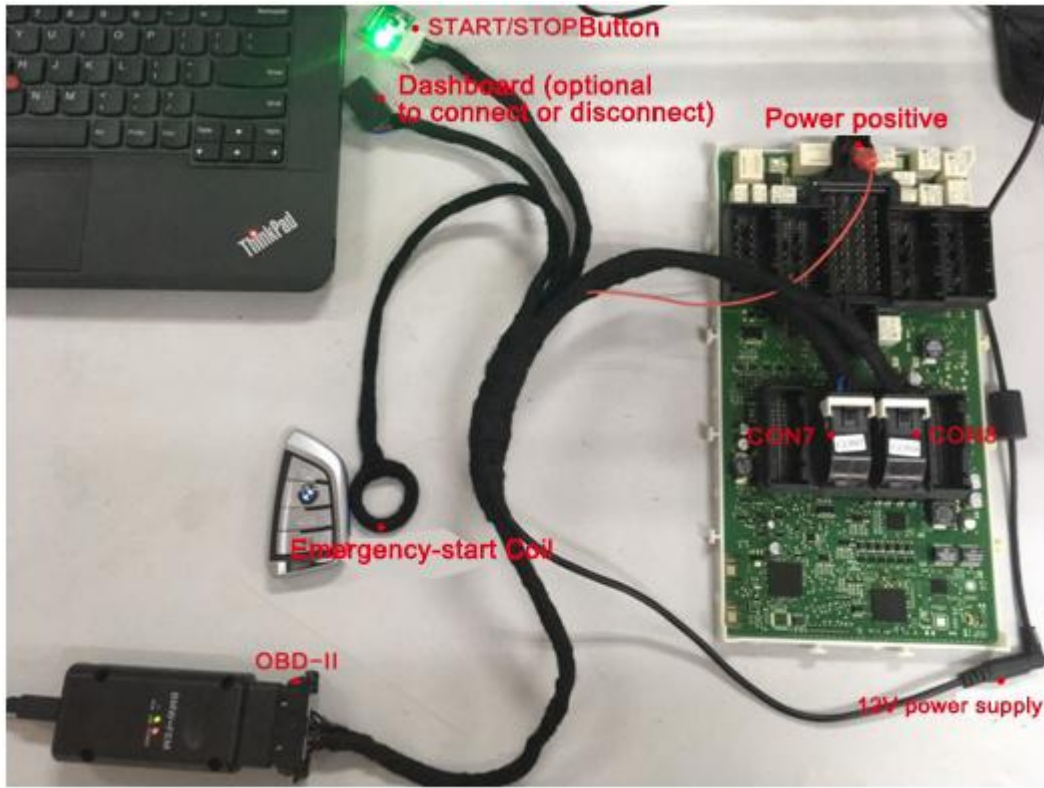

Pic. 1 Cables & adapters wiring connection diagram

二、钥匙放置

2. Key Position




Pic. 2 Emergency-Start coil position

Put the key marked with red (see above pic.2) on the coil.

三、START/STOP 按键操作

3. START/STOP button operation

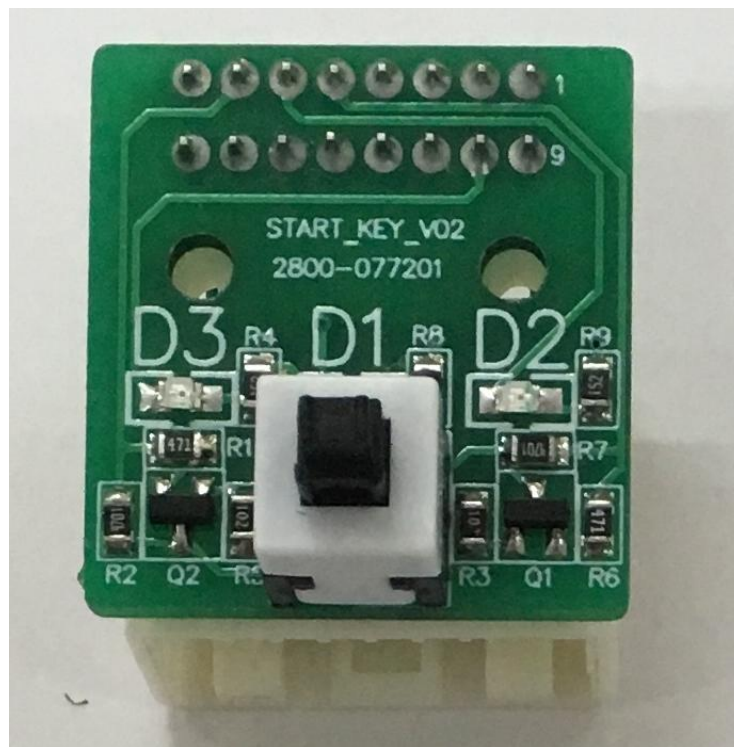

D1 为 **START/STOP 按键**状态指示灯，接上电源，指示灯点亮。

D2 为**发动机自动启停装置(MSA)** 状态指示灯。默认熄灭。

D3 为**电门**状态指示灯，可代替仪表显示电门状态。电门打开时，指示灯亮；电门关闭时，指示灯灭。

D1: START/STOP button's indicator- light on when the power supply is connected

D2: Automatic stop and start function (MSA) indicator- default status: light off

D3: Engine fire shutoff switch's indicator (to replace the dashboard and display the status of the engine fire shutoff switch)- light on when the switch is turned on and light off when the engine is turned off

打开电门操作:

将工作钥匙放在线圈上，按下按键，电门状态指示灯（D3）点亮。

若指示灯不亮，可稍等 3~5 秒再按一次。

How to turn on the engine fire shutoff switch:

Put the working key on the coil;

Press the button;

Engine fire shutoff switch indicator (D3) lights on;

(If the indicator fails to light on, wait for 3-5 seconds and press it again)

关闭电门操作:

连接三次按键, 指示灯(D3)熄灭, 则电门关闭。

How to turn off the engine fire shutoff switch:

Press it continuously for 3 times;

Engine fire shutoff switch indicator (D3) lights off- engine fire shutoff

switch is turned off