
BMW OPS/GT1 DIS operation Manuel First step:

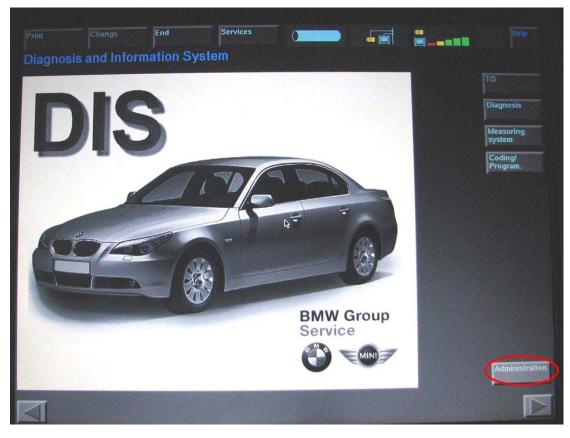

Second step:

Print	Change	End	Services	0			H	:lp
Administr			DIS Update Installation Feedback Statistics Date Time Self-test Calibrating touch screen	Admin Update Conne- setup Installa ELOS	tion	Config. System Diagnostic head Printer Online server		
CD drive all		not active : Hard disk	Language				Activate CD Deactivat CD Change CD	

www.obd365.com

Third step:

Print	Change	End	Services				Help
			ead assignm	ent			
Free di	agnostic heads	a hard	Test	100 M			
			Test				
			Coni	recting			
						DIS	
			Quit	ection 🔖			
Conne	ction via radio				~	7	
			Santa Sansara	- Picon	6		
Conne	ction via cable						
Conne	ction via dockin	n station					
		gotation					Diagnostic head Update






www.obd365.com

Fifth step:

Print	Change	End Services		
	agnostic heads	ostic head assignment		
•	DK20 192.168.68.20	Test	I	
		Солнество	I	Province of the local division of the local
		Connection configuration s	status	DIS
		0%	100%	
Conne	ection via radio	Connection configuration		7 🌭
			/ /	-
Conn	ection via cable			
Conr	ection via docking s	tation		Diagnestic
		the second se		pread Update
	and the state of the second			

Sixth step:

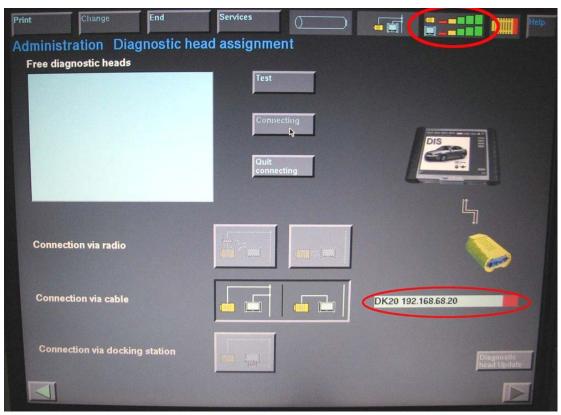

www.obd365.com