

Immobilization		
Brand	Menu	Application
TRUMPCHI	TRUMPCHI\GS5\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GS5\Smart key	Program smart key,
	TRUMPCHI\GA5\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA5\Smart key	Program smart key,
	TRUMPCHI\GA3\Immobilizer	Add key,Read key count,All key lost,
	TRUMPCHI\GA8\Immobilizer	Add key,Read key count,All key lost,
	TRUMPCHI\GS4\Immobilizer	Add key,Read key count,All key lost,
	TRUMPCHI\GA6\Immobilizer	Add key,Read key count,All key lost,
	TRUMPCHI\Extended electric vehicles\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA3\Smart key	Program smart key,
	TRUMPCHI\GA6\Smart key	Program smart key,
	TRUMPCHI\GA8\Smart key	Program smart key,
	TRUMPCHI\GS4\Smart key	Program smart key,
	TRUMPCHI\GS8\Smart key	Program smart key,
	TRUMPCHI\GS8\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA4\Immobilizer	Add key,Read key count,All key lost,
	TRUMPCHI\GA4\Smart key	Program smart key,
	TRUMPCHI\GS3\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GS3\Smart key	Program smart key,
	TRUMPCHI\GS7\Smart key	Program smart key,
	TRUMPCHI\GE3\Smart key	Program smart key,
	TRUMPCHI\GM8\Smart key	Program smart key,
	TRUMPCHI\New energy vehicles\Immobilizer	Add key,Read key count,All key lost,
	TRUMPCHI\GA3S(PHEV)\Smart key	Program smart key,
	TRUMPCHI\GS4(PHEV)\Smart key	Program smart key,
	VOLVO	VOLVO\S60\Smart key[insert start]
VOLVO\S80\2009-\Smart key[insert start]		Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
VOLVO\XC60\2009-\Smart key[insert start]		Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
VOLVO\S80\2009\Smart key[insert start]		Add key,Delete key,Read CEM security data,Key recognition & unlocking,
VOLVO\V40\Smart key[insert start]		Add key,Delete key,Read CEM security data,Key recognition & unlocking,

VOLVO	VOLVO\W60\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
	VOLVO\XC60\2009\Smart key[insert start]	Add key,Delete key,Read CEM security data,Key recognition & unlocking,
	VOLVO\W70\2009-\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
	VOLVO\XC70\2011-\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
	VOLVO\XC70\2007-2010\Smart key[insert start]	Add key,Delete key,Read CEM security data,Key recognition & unlocking,
	VOLVO\S60\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\S80\2009-\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\XC60\2009-\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\S40\Smart key	Add smart key,Delete smart key,Unlock key,
	VOLVO\S40\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,
	VOLVO\C30\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,
	VOLVO\C30\Smart key	Add smart key,Delete smart key,Unlock key,
	VOLVO\W40\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\S80\2009\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\W60\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\XC60\2009\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\XC90\Flip key	Add key,Delete key,Identify key ID,Key unlock,
	VOLVO\S80\2007\Flip key	Add key,Delete key,Identify key ID,Key unlock,
	VOLVO\C70\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,
	VOLVO\C70\Smart key	Add smart key,Delete smart key,Unlock key,
VOLVO\W70\2009-\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,	
VOLVO\XC70\2011-\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,	
VOLVO\XC70\2007-2010\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,	
VOLVO\XC70\2006\Flip key	Add key,Delete key,Identify key ID,Key unlock,	
SSANG YONG\Select from type\Immobilizer\Type 1	Program key,Delete key,	
SSANG YONG\Select from type\Remote\Type 1	Program remote,	
SSANG YONG\Select from type\Immobilizer\Type 2	Program key,	
SSANG YONG\Select from vehicle\Actyon\XDi system	Program key,Delete key,	
SSANG YONG\Select from vehicle\Chairman\XDi system	Program key,Delete key,	
SSANG YONG\Select from vehicle\Korando\XDi system	Program key,Delete key,	
SSANG YONG\Select from vehicle\Kyron\XDi system	Program key,Delete key,	
SSANG YONG\Select from vehicle\Musso\XDi system	Program key,Delete key,	

SSANG YONG	SSANG YONG\Select from vehicle\Rexton\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Stavic Rodius\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Rodius\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Rexton II \XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\New Rexton\XDi system	Program key,Delete key,
	SSANG YONG\Select from type\Immobilizer\Type 3	Program key,
	SSANG YONG\Select from vehicle\Actyon\Petrol	Program key,
	SSANG YONG\Select from vehicle\Actyon\Diesel	Program key,
	SSANG YONG\Select from vehicle\Chairman\Petrol\Immobilizer	Program key,
	SSANG YONG\Select from vehicle\Chairman\Diesel	Program key,
	SSANG YONG\Select from vehicle\Korando\Petrol	Program key,
	SSANG YONG\Select from vehicle\Korando\Diesel	Program key,
	SSANG YONG\Select from vehicle\Kyron\Petrol	Program key,
	SSANG YONG\Select from vehicle\Kyron\Diesel	Program key,
	SSANG YONG\Select from vehicle\Musso\Petrol	Program key,
	SSANG YONG\Select from vehicle\Musso\Diesel	Program key,
	SSANG YONG\Select from vehicle\Rexton\Petrol	Program key,
	SSANG YONG\Select from vehicle\Rexton\Diesel	Program key,
	SSANG YONG\Select from vehicle\Stavic Rodius\Petrol	Program key,
	SSANG YONG\Select from vehicle\Stavic Rodius\Diesel	Program key,
	SSANG YONG\Select from vehicle\Rodius\Petrol	Program key,
	SSANG YONG\Select from vehicle\Rodius\Diesel\Type 1	Program key,
	SSANG YONG\Select from vehicle\Rexton II \Petrol	Program key,
	SSANG YONG\Select from vehicle\Rexton II \Diesel	Program key,
	SSANG YONG\Select from vehicle\New Rexton\Petrol	Program key,
	SSANG YONG\Select from vehicle\New Rexton\Diesel	Program key,
	SSANG YONG\Select from type\Remote\Type 2	Program remote,
	CITROEN\Select from vehicle\C4\Immobilizer\Type 1	Program key,
	CITROEN\Select from vehicle\TRIOMPHE\Immobilizer	Program key,
	CITROEN\Select from vehicle\C5(China)\Immobilizer	Program key,
	CITROEN\Select from vehicle\QUATRE\Immobilizer	Program key,
	CITROEN\Select from vehicle\C4L\Immobilizer	Program key,

CITROEN

CITROEN\Select from vehicle\C4L\Smart key	All smart key lost,
CITROEN\Select from vehicle\C3-XR\Smart key	All smart key lost,
CITROEN\Select from type\Immobilizer\Type 1	Program key,
CITROEN\Select from type\Smart key\Type 1	All smart key lost,
CITROEN\Select from type\Immobilizer\Type 3	Program key,
CITROEN\Select from type\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\Berlingo\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\C1\Immobilizer	Program key,
CITROEN\Select from vehicle\C2\Immobilizer\Type 1(K)	Program key,
CITROEN\Select from vehicle\C3\Immobilizer\Type 1(K)	Program key,
CITROEN\Select from vehicle\C5\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\C8\Immobilizer\Type 1(K)	Program key,
CITROEN\Select from vehicle\Dispatch\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\Jumpy\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\Nemo\Immobilizer\Type 1(K)	Program key,
CITROEN\Select from vehicle\PICASSO\Immobilizer	Program key,
CITROEN\Select from vehicle\Relay\Immobilizer	Program key,
CITROEN\Select from vehicle\Relay2\Immobilizer	Program key,
CITROEN\Select from vehicle\Synergie\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\XSARA(China)\Immobilizer	Program key,
CITROEN\Select from vehicle\XSARA\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\Xantia\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\Berlingo\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\C2\Immobilizer\Type 2(CAN)	Program key,
CITROEN\Select from vehicle\C3\Immobilizer\Type 2(CAN)	Program key,
CITROEN\Select from vehicle\C5\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\C6\Immobilizer	Program key,
CITROEN\Select from vehicle\C8\Immobilizer\Type 2(CAN)	Program key,
CITROEN\Select from vehicle\Dispatch\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\Evasion\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\Jumpy\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\Nemo\Immobilizer\Type 2(CAN)	Program key,

CITROEN\Select from vehicle\Relay3\Immobilizer	Program key,
CITROEN\Select from vehicle\Synergie\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\XSARA\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\Xantia\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\C3-XR\Immobilizer	Program key,
CITROEN\Select from vehicle\C6(China)\2016-\Immobilizer	Program key,
CITROEN\Select from vehicle\ELYSEE\2012-\Immobilizer	Program key,
CITROEN\Select from vehicle\C4\Smart key	All smart key lost,
CITROEN\Select from vehicle\C6(China)\2016-\Smart key	All smart key lost,
CITROEN\Select from vehicle\C-Crosser\Petrol\Smart key	All smart key lost,
CITROEN\Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program remote key,
CITROEN\Select from vehicle\C-Crosser\Petrol\Immobilizer	Read key/remote count,Immobilization,Program remote key,
CITROEN\Select from vehicle\C-Crosser\Diesel\Immobilizer	Read key/remote count,Immobilization,Program remote key,
CITROEN\Select from vehicle\C4\Immobilizer\Type 2	Program key,
CITROEN\Select from type\Replace engine ECU\M745	Replace engine ECU,
CITROEN\Read pin code	Type 1,Type 2,Type 3,Type 4 (K line),
FORD\China\New Mondeo\ -2017\Immobilizer	Add key,All key lost,
FORD\China\New Mondeo\ -2017\Smart key	Add smart key,All smart key lost,
FORD\China\ Escort\ -2017\Immobilizer	Add key,All key lost,
FORD\China\Edge\2015-2017\Smart key	Add smart key,All smart key lost,
FORD\China\Mustang\Smart key	Add smart key,All smart key lost,
FORD\China\Escape\2005-2007\Immobilizer	All key lost,Add key,Read key count,
FORD\China\ Raptor F350\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Transit\2000-2013\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Mondeo CHIA-X\PEPS\Smart key	Smart key all lost,Add smart key,
FORD\China\Mondeo CHIA-X\IMMO\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Mondeo CHIA-X\IMMO\Type 1\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Focus\Classic Focus\Type 1\Immobilizer	Add key,All key lost,
FORD\China\Focus\New Focus\2011-2013\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Kuga\ -2015\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Ecosport\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Fiesta\IMMO\ -2013\Immobilizer	Add key,Delete key,

FORD

FORD\China\Focus\Classic Focus\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Mondeo\Immobilizer	All key lost,Read key count,
FORD\China\Ecosport\Smart key	All smart key lost,Add smart key,
FORD\China\Fiesta\PEPS\Smart key	All smart key lost,Add smart key,
FORD\China\Focus\New Focus\2014-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Explorer\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Classic Focus\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Kuga\2015\Smart key	Add key,Delete key,All key lost,Add smart key,Delete smart key,
FORD\China\Kuga\2016-\Smart key	Add smart key,All smart key lost,
FORD\China\Edge\2015\Smart key	Erase smart key,Add smart key,Read smart key count,
FORD\China\Raptor F150\2011-2014\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Raptor F150\2009-2010\Immobilizer	Add key,Delete key,Read key count,Synch PCM-PATS,
FORD\China\Raptor F250\2009-2010\Immobilizer	Add key,Delete key,Read key count,Synch PCM-PATS,
FORD\China\Everest\Smart key	Add smart key,All smart key lost,
FORD\China\Classic Focus\Type 1\Immobilizer	Add key,All key lost,
FORD\China\Explorer\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\Taurus\2015-2016\Smart key	Add smart key,All smart key lost,
FORD\China\Everest\Immobilizer	Add key,All key lost,
FORD\China\S-MAX\IMMO\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\S-MAX\IMMO\Type 1\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Focus\New Focus\2011-2013\Smart key	Add key,Delete key,All key lost,Add smart key,Delete smart key,
FORD\China\Fiesta\IMMO\2013-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\New Mondeo\2017\Smart key	Add smart key,Delete smart key,
FORD\China\Taurus\2017\Smart key	Add smart key,Delete smart key,
FORD\China\Ranger\2007-2010\Immobilizer	Read key numbers,Add key,All key lost,
FORD\China\Ranger\2015\Immobilizer	Add key,Delete key,All key lost,Read key numbers,ECU immobilization,
FORD\China\Ranger\2017\Immobilizer	Read key count,Add key,All key lost,
FORD\China\Escape\2008-2009\Immobilizer	Read key numbers,Add key,All key lost,
FORD\China\Raptor F150\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\Raptor F250\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\C-MAX\Smart key	Add key,Delete key,All key lost,Add smart key,Delete smart key,
FORD\China\Focus\New Focus\2014-\Smart key	Add smart key,All smart key lost,

FORD\China\Remote\Type 1	Remote,Delete remote,
FORD\China\Edge\2015\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Edge\2017-\Smart key	Add smart key,Delete smart key,
FORD\China\ Escort\2017\Immobilizer	Add key,Delete key,
FORD\China\ Raptor F150\2015-\Immobilizer	Add key,All key lost,
FORD\China\Transit\2013-\Immobilizer\Type 1	Add key,Delete key,All key lost,
FORD\China\Fusion\2006-2009\Immobilizer	Program key,Delete key,Key count,
FORD\China\Mustang\Immobilizer\2011-2014	Program key,All key lost,Key count,
FORD\China\Explorer\2017-\Smart key	Add smart key,Delete smart key,
FORD\China\HEC\Immobilizer	All key lost,Key count,Reset system,
FORD\China\PCM\Immobilizer	All key lost,Read key count,
PEUGEOT\Select from vehicle\308\Immobilizer\Type 1	Program key,
PEUGEOT\Select from vehicle\3008\Immobilizer	Program key,
PEUGEOT\Select from vehicle\307\Immobilizer\Type 2(CAN)	Program key,
PEUGEOT\Select from vehicle\308S\Immobilizer	Program key,
PEUGEOT\Select from vehicle\4007\Petrol\Smart key	All smart key lost,
PEUGEOT\Select from type\Immobilizer\Type 1	Program key,
PEUGEOT\Select from vehicle\207\Immobilizer\Type 1(K)	Program key,
PEUGEOT\Select from vehicle\307\Immobilizer\Type 1(K)	Program key,
PEUGEOT\Select from vehicle\508\Smart key	All smart key lost,
PEUGEOT\Select from vehicle\508\Immobilizer	Program key,
PEUGEOT\Select from vehicle\408\408(T73)\Immobilizer	Program key,
PEUGEOT\Select from vehicle\408\408(T93)\Immobilizer	Program key,
PEUGEOT\Select from type\Smart key\Type 1	All smart key lost,
PEUGEOT\Select from type\Immobilizer\Type 3	Program key,
PEUGEOT\Select from type\Immobilizer\Type 2	Program key,
PEUGEOT\Select from vehicle\1007\Immobilizer\Type 1(K)	Program key,
PEUGEOT\Select from vehicle\206\Immobilizer	Program key,
PEUGEOT\Select from vehicle\406(VF38)\Immobilizer	Program key,
PEUGEOT\Select from vehicle\607\Immobilizer\Type 1(K)	Program key,
PEUGEOT\Select from vehicle\807\Immobilizer\Type 1(K)	Program key,
PEUGEOT\Select from vehicle\Partner\Immobilizer\Type 1(K)	Program key,

PEUGEOT	PEUGEOT\Select from vehicle\1007\Immobilizer\Type 2(CAN)	Program key,
	PEUGEOT\Select from vehicle\207\Immobilizer\Type 2(CAN)	Program key,
	PEUGEOT\Select from vehicle\207CC\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\407\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\5008\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\607\Immobilizer\Type 2(CAN)	Program key,
	PEUGEOT\Select from vehicle\807\Immobilizer\Type 2(CAN)	Program key,
	PEUGEOT\Select from vehicle\Expert\2007-\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\Partner\Immobilizer\Type 2(CAN)	Program key,
	PEUGEOT\Select from vehicle\Rcz\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\208\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\2008\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\301\Immobilizer	Program key,
	PEUGEOT\Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program remote key,
	PEUGEOT\Select from vehicle\4007\Petrol\Immobilizer	Read key/remote count,Immobilization,Program remote key,
	PEUGEOT\Select from vehicle\4007\Diesel\Immobilizer	Read key/remote count,Immobilization,Program remote key,
	PEUGEOT\Select from vehicle\3008\Smart key	All smart key lost,
	PEUGEOT\Select from vehicle\4008\Smart key	All smart key lost,
	PEUGEOT\Select from vehicle\5008\Smart key	All smart key lost,
	PEUGEOT\Select from vehicle\4008\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\1007\Immobilizer\Type 3	Add key,Delete key,Reset Immo ECU,Engine ECU programming ,
	PEUGEOT\Select from vehicle\4008(China)\Smart key	All smart key lost,
	PEUGEOT\Select from vehicle\4008(China)\Immobilizer	Program key,
	PEUGEOT\Select from vehicle\308\Immobilizer\Type 2	Program key,
	PEUGEOT\Select from type\Replace engine ECU\M745	Replace engine ECU,
	PEUGEOT\Read pin code	Type 1,Type 2,Type 3,Type 4 (K line),
	LAND ROVER\Select from vehicle\Range Rover\Smart key\Smart key	Add smart key,All smart key lost,
	LAND ROVER\Select from vehicle\Freelander2\Smart key\2012	Program old smart key,Read VIN code,Program new smart key,Clear fault code,Read key count,
	LAND ROVER\Select from vehicle\Freelander\Remote\2003-2005	Program remote,
	LAND ROVER\Select from vehicle\Discovery4\Smart key	Add smart key,All smart key lost,
	LAND ROVER\Select from vehicle\Evoque\Smart key	Add smart key,All smart key lost,
	LAND ROVER\Select from vehicle\Freelander2\Smart key\2013-	Add smart key,All smart key lost,

LAND ROVER	LAND ROVER\Select from vehicle\Freelander 2\Immobilizer\2006-2012	Add old key,Add new key,Reset engine immo box,
	LAND ROVER\Select from vehicle\Freelander\Smart key	Program old smart key,Read VIN code,Program new smart key,Clear fault code,Read key count,
	LAND ROVER\Select from vehicle\Freelander\Remote	Program remote,
	LAND ROVER\Select from vehicle\Defender\Remote\2010-2014	Program remote,
	LAND ROVER\Select from type\Immobilizer\Type 1	Add old key,Add new key,Reset engine immo box,
	LAND ROVER\Select from type\Smart key\Type 1	Program old smart key,Read VIN code,Program new smart key,Clear fault code,Read key count,
	LAND ROVER\Select from type\Smart key\Type 2	Add smart key,All smart key lost,
	LAND ROVER\Select from type\Remote\Type 1	Program remote,
	LAND ROVER\Select from vehicle\Discovery 3\Immobilizer	Program key,Read VIN code,
	LAND ROVER\Select from vehicle\Evoque\Immobilizer\Type 1	Program key,Read VIN code,
	LAND ROVER\Select from vehicle\Evoque\Immobilizer\Type 2	Immobilizer,
	LAND ROVER\Select from type\Immobilizer\Type 2	Program key,Read VIN code,
	LAND ROVER\Select from type\Immobilizer\Type 3	Immobilizer,
	LAND ROVER\Select from vehicle>New LandRover(2015-)\Smart key\Type 1(FK72)	Add smart key,
	LAND ROVER\Select from vehicle>New LandRover(2015-)\Smart key\Type 2(HPLA)	Add smart key,
	LAND ROVER\Select from vehicle>New LandRover(2015-)\Smart key\Type 3(write to	Write a workable key,Read key ID,
		MAZDA\Axela\2016\Smart key
MAZDA\Atenza\2013-\Smart key		Add smark key,All smart key lost,Switch ignition on,
MAZDA\CX-5\2016\Smart key		Add smark key,All smart key lost,Switch ignition on,
MAZDA\M6\Immobilizer		Add key,All key lost,Valid backup key setting,Invalid backup key setting,
MAZDA\M6\Smart key		Add smart key,Delete smart key,
MAZDA\M3\Immobilizer\Type 1		Add key,Read key count,All key lost,
MAZDA\M2\2008-2014\Immobilizer		Add key,All key lost,
MAZDA\ New M6\Immobilizer		All key lost,
MAZDA\ New M6\Smart key		Delete & program smart key,Lost all key/smart key,Steering lock program setting,
MAZDA\M3\Immobilizer\Type 2		Add key,All key lost,
MAZDA\M5\Immobilizer\Type 2		Add key,All key lost,
MAZDA\M8\Smart key		Add key,All key lost,Add smart key,Lost all smart key,
MAZDA\M5\Immobilizer\Type 1		Add key,All key lost,Read key count,
MAZDA\M3\Smart key\Type 1		Add smark key,All smart key lost,Switch ignition on,
MAZDA\M8\Immobilizer		Add key,All key lost,Setup spare key valid,Setup spare key invalid,
MAZDA\CX-7\Immobilizer		Add key,All key lost,Setup spare key valid,Setup spare key invalid,

MAZDA

MAZDA\CX-7\Smart key	Add key,All key lost,Add smart key,Lost all smart key,
MAZDA\CX-3\2017\Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\CX-4\2016\Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\M2\2014-2016\Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\CX-9\Immobilizer\2004-2009	Add key,Read key count,All key lost,
MAZDA\CX-9\Immobilizer\2009-	Add key,All key lost,
MAZDA\MX-5\2004-2009\Immobilizer	Add key,Read key count,All key lost,
MAZDA\CX-9\With smart	Keys count,Add key,All key lost,Remotes count,Program remote,Delete remote,
MAZDA\BT50\2012-\Immobilizer	Add key,Erase key,All key lost,
MAZDA\New CX-7\Smart key	All smart key lost,Add smart key,Switch ignition on,
MAZDA\M2\2008-2014\PEPS\Type 1	Add key,Clear key,Add remote,Delete remote,Key number,Switch ignition on,
MAZDA\DEMIO\2014-\Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\Axela\2017-2018\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\CX-4\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\B series\2007-\Immobilizer	Key count,Add key,All key lost,
MAZDA\MX-5\2009-2016\Immobilizer	Keys count,Add key,All key lost,
MAZDA\New CX-9\Smart key	All smart key lost,Add smart key,Switch ignition on,
MAZDA\CX-5\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M121\Immobilizer	Key number,Delete key,Add key,
MAZDA\Atenza\2018-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\DEMIO\2001\Immobilizer	Key number,Delete key,Add key,
MAZDA\DEMIO\2002-2007\Immobilizer	Key number,Delete key,Add key,
MAZDA\DEMIO\2008-2013\Smart key	Add key,Clear key,Add remote,Delete remote,Key number,
MAZDA\DEMIO\2008-2013\Immobilizer	Key number,Delete key,Add key,
MAZDA\MX-5\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\MX-5 MIATA\2005-2013\Immobilizer	Key number,Delete key,Add key,
MAZDA\PREMACY\2005\Smart key	Key number,Delete key,Add key,
MAZDA\RX-8\2004-2009\Immobilizer	Key number,Delete key,Add key,
MAZDA\RX-8\2009\Smart key	Add key,Clear key,Add remote,Delete remote,Key number,
MAZDA\RX-8\2009\Immobilizer	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilizer\2001-2004	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilizer\2005-2008	Key number,Delete key,Add key,

	MAZDA\Tribute\Immobilizer\2009-2011	Key number,Delete key,Add key,
	MAZDA\M2\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\M3\Smart key\Type 2(2017-)	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\CX-3\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\M2\2002-2008\Mechanical key	Add key,All key lost,Valid backup key setting,Invalid backup key setting,
	MAZDA\M2\2008-2014\PEPS\Type 2	All key lost,Add key,All smart key lost,Add smart key,Switch ignition on,Clear fault code,
	MAZDA\Axela\2018-\Smart key	All smart key lost,Turn ignition ON,Add smart key,
	MAZDA\CX-5\2019\Smart key	All smart key lost,Turn ignition ON,Add smart key,
NISSAN	NISSAN\Select from type\Immobilizer\Electronic key(10)	Add key,Activate steering wheel lock,Add key(fixed code),
	NISSAN\Select from type\Immobilizer\Electronic key(E0)	Add key,
	NISSAN\Select from type\Immobilizer\Electronic key(12)	Add key,Add key(fixed code),
	NISSAN\Select from type\Immobilizer\Auto retrieve type	Add key,
	NISSAN\Select from type\Remote\Auto retrieve type	Add remote,Delete remote,
	NISSAN\Select from type\Smart key\4-digit PIN code\Without key slot-knob type 1	Program smart key,Delete smart key,Program steering lock,
	NISSAN\Select from type\Smart key\New 20-digit rolling code\Teana-VIP(2013-)\Type	Program smart key,
	NISSAN\Select from type\Smart key\New 20-digit rolling code\Cima(2013-)\Type 1(rolling	Program smart key,
	NISSAN\Select from type\Smart key\New 20-digit rolling code\JX35(2013-)\Type 1(rolling	Program smart key,
	NISSAN\Select from type\Smart key\New 20-digit rolling code\QX60(2013-)\Type 1(rolling	Program smart key,
	NISSAN\Select from type\Smart key\New 20-digit rolling code\Murano\Type 1(rolling code)	Program smart key,
	NISSAN\Select from type\Smart key\New 20-digit rolling code\Q50\Type 2(rolling code)	Program smart key,
	NISSAN\Select from type\Smart key\New 20-digit rolling code\X-Trail(2013-)\Type 3(rolling	Program smart key,
	NISSAN\Select from type\Smart key\New 20-digit rolling code\Qashqai(2015-)\Type	Program smart key,
	NISSAN\Select from type\Smart key\4-digit PIN code\without key slot-knob type 2	Program smart key,Delete smart key,
	NISSAN\Select from type\Smart key\4-digit PIN code\With key slot-button type 1	Program smart key,
	NISSAN\Select from type\Smart key\4-digit PIN code\With slot-button type 2	Program smart key,Clear fault code,
	NISSAN\Select from type\Smart key\4-digit PIN code\Without slot-button type 1	Program smart key,
	NISSAN\Select from type\Immobilizer\New 20-digit rolling code	Add key,
	NISSAN\Select from type\Immobilizer\Activate direction lock	Activate steering wheel lock,
	NISSAN\Select from type\Smart key\4-digit PIN code\Activate direction lock	Activate steering wheel lock,
	Nissan\Select from type\Smart key\12-digit PIN\All	Smart key,Key count,
	Nissan\Select from type\Immobilizer\12-digit PIN-type2(CAN)	Smart key,Key count,
Nissan\Select from type\Immobilizer\12-digit PIN-type1(KWP)	Program key,Key count,	

Nissan\Read BCM code and release directional lock(4-digit PIN)	Release steering lock,Read BCM inner code,
NISSAN\Select from type\Smart key\4-digit PIN code\Without keyslot-press-type 2	Read BCM inner code,Release steering lock,Program smart key,
NISSAN\Select from vehicle\Asia\Sunny\Smart key	Read BCM inner code,Release steering lock,Program smart key,
NISSAN\Select from vehicle\Asia\350Z\2003-\NATS 5	Add key,Add key(fixed code),
NISSAN\Select from vehicle\Asia\X-Trail\2017\With smart	Program smart key,
NISSAN\PIN calculator	Type 1,Type 2,Type 3 (20-bit rolling code/PIN),
RENAULT\Select from type\Smart key\IMMO2	Program smart key,Collision recovery,
RENAULT\Select from type\Smart key\IMMO1	Program smart key,Collision recovery,
RENAULT\Select from vehicle\Fluence\2008 -\Smart key	Immobilization,
RENAULT\Select from vehicle\Clio\1997-1999	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Clio\2000-2008 VIN with VF1*B	Immobilization,
RENAULT\Select from vehicle\Clio\2006-2012 VIN with VF1*R\With smart	Program smart key,
RENAULT\Select from vehicle\Clio\2006-2012 VIN with VF1*R\Without smart	Immobilization,
RENAULT\Select from vehicle\Espace\2002-VIN with VF1*K\2 buttons	Smart key,
RENAULT\Select from vehicle\Espace\2002-VIN with VF1*K\3 buttons	Smart key,
RENAULT\Select from vehicle\Kangoo\1999-2002\Type 1	Set IMMO unit,
RENAULT\Select from vehicle\Kangoo\1999-2002\Type 2	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Kangoo\2003-2008 VIN with VF1*C	Immobilization,
RENAULT\Select from vehicle\Koleos\2008-2010 VIN with VF1*Y	Smart key,
RENAULT\Select from vehicle\Laguna\2007\2007 VIN with VF1*G\2 buttons	Smart key,
RENAULT\Select from vehicle\Laguna\2007\2007 VIN with VF1*G\3 buttons	Smart key,
RENAULT\Select from vehicle\Laguna\2007-2011 VIN with VF1*T	Smart key,
RENAULT\Select from vehicle\Master\2003	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Master\2003-2010 VIN(VF1*D)	Immobilization,
RENAULT\Select from vehicle\Maxity	Read BCM,Program remote,Delete remote,
RENAULT\Select from vehicle\Megane\2002-2008 VIN with VF1*M	Smart key,
RENAULT\Select from vehicle\Megane\02-08(93YLM)	Smart key,
RENAULT\Select from vehicle\Megane\2008 -	Immobilization,
RENAULT\Select from vehicle\Scenic\2002-2006, VIN with VF1*M	Smart key,
RENAULT\Select from vehicle\Scenic\2006-2009, VIN with VF1*M	Smart key,
RENAULT\Select from vehicle\Scenic\2008-2011	Immobilization,
RENAULT\Select from vehicle\Modus\2004-2012 VIN with VF1*P\Without smart	Immobilization,

RENAULT\Select from vehicle\Modus\2004-2012 VIN with VF1*P\With smart	Smart key,Program remote,Delete remote,
RENAULT\Select from vehicle\Safrane\2008-VIN with VF1AB\Smart key	Smart key,
RENAULT\Select from vehicle\Scala\2011-	Read BCM,Immobilization,Program remote,Delete remote,
RENAULT\Select from vehicle\Trafic\2002-VIN with VF1*L	Immobilization,
RENAULT\Select from vehicle\Trafic\2002	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Twingo\2007 VIN with VF1*O\Type 1	Set IMMO unit,
RENAULT\Select from vehicle\Twingo\2007 VIN with VF1*O\Type 2	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Twingo\2007-VIN with VF1*N	Immobilization,
RENAULT\Select from vehicle\Velsatis\2002-2010 VIN with VF1*J\2 buttons	Smart key,
RENAULT\Select from vehicle\Velsatis\2002-2010 VIN with VF1*J\3 buttons	Smart key,
RENAULT\Select from vehicle\Wind\2010-VIN with VF1*N	Immobilization,
RENAULT\Select from vehicle\Safrane\(\KNMG4) 2009-\Ignition	Read BCM,Immobilization,Program remote,Delete remote,
RENAULT\Select from vehicle\Koleos\2010-2016 VIN with VF1*Y	Program smart key,Collision recovery,
RENAULT\Select from vehicle\Latitude	Immobilization,
RENAULT\Select from vehicle\Scenic\1999-2002	Read PIN code,Program key,
RENAULT\Select from vehicle\Scenic\2008	Program key,
RENAULT\Select from vehicle\Twingo\Twingo I Ph3.\2001-2006	Add key,
RENAULT\Select from vehicle\Symbol\Symbol.\Type 1	Add key,
RENAULT\Select from vehicle\Thalia\Thalia.\Type 1	Add key,
RENAULT\Select from vehicle\Trafic\Trafic II Ph2.	Add key,
RENAULT\Select from vehicle\Master\Master.	Add key,
RENAULT\Select from vehicle\Primastar\Primastar.	Add key,
RENAULT\Select from vehicle\Clio\Clio II Ph2.	Add key,
RENAULT\Select from vehicle\Kangoo\Kangoo I.	Add key,
RENAULT\Select from vehicle\Symbol\Symbol.\Type 2	Program key,
RENAULT\Select from vehicle\Thalia\Thalia.\Type 2	Program key,
RENAULT\Select from vehicle\Dacia\Duster\2010-2012	Program key,
RENAULT\Select from vehicle\Laguna\Laguna II.	Add key,
RENAULT\Select from vehicle\Espace\Espace IV.	Add key,
RENAULT\Select from vehicle\Velsatis\2005.	Add key,
RENAULT\Select from vehicle\Laguna\Laguna II Ph2.	Add key,
RENAULT\Select from vehicle\Espace\Espace IV Ph2.	Add key,

RENAULT

RENAULT\Select from vehicle\Velsatis\2005-.	Add key,
RENAULT\Select from vehicle\Clio\CLIO III.\Without smart	Add key,
RENAULT\Select from vehicle\Modus\Modus.\Without smart	Add key,
RENAULT\Select from vehicle\Clio\CLIO III.\With smart	Add key,
RENAULT\Select from vehicle\Trafic\Trafic II Ph3.\2010-2014	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from vehicle\Master\Master III\2010-2015	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from vehicle\Kangoo\Kangoo II.\2007-2012	Add key,
RENAULT\Select from vehicle\Twingo\Twingo II.\2007-2014	Add key,
RENAULT\Select from vehicle\Wind\2010-2013.	Add key,
RENAULT\Select from vehicle\Laguna\Laguna III.\2007-2015	Add key,
RENAULT\Select from vehicle\Megane\Megane III.\2009-2015	Add key,
RENAULT\Select from vehicle\Fluence\2009-2015.	Add key,
RENAULT\Select from vehicle\Koleos\2008 -.	Add key,
RENAULT\Select from type\All\Type 0	Add key,
RENAULT\Select from type\All\Type 1	Add key,
RENAULT\Select from type\All\Type 2	Program key,
RENAULT\Select from type\All\Type 3	Add key,
RENAULT\Select from type\All\Type 4	Add key,
RENAULT\Select from type\All\Type 5	Add key,
RENAULT\Select from type\All\Type 6	Add key,
RENAULT\Select from type\All\Type 7	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from type\All\Type 8	Add key,
RENAULT\Select from type\All\Type 9	Program key,
RENAULT\Select from type\All\Type A	Add key,
RENAULT\Select from vehicle\Scenic\Scenic	Add key,
RENAULT\Select from type\All\Type B	Read PIN code,Program key,Recover backup data,
RENAULT\Select from vehicle\Trafic\Trafic III (4A)\2014-\System 1	Read PIN code,Program key,Recover backup data,
RENAULT\Select from vehicle\Clio\Clio IV.\2012-	Program key,Recover data,
RENAULT\Select from vehicle\Captur	Program key,Recover data,
RENAULT\Select from vehicle\Symbol\2013-2018	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Avantime\2001-2003	Add key,
RENAULT\Select from vehicle\Dacia\Logan\2013-	Program key,Read PIN code,Read key count,

RENAULT\Select from vehicle\Trafic\Trafic III (4A)\2014-\System 2	Program key,
RENAULT\Select from vehicle\Twingo\Twingo III.	Read PIN code,Recover backup data,Program key,
RENAULT\Select from vehicle\Kangoo\Kangoo II.\2007-2012(VFI*W)	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from vehicle\Espace\2015-\Smart key	Program smart key,Make dealer key,
RENAULT\Select from vehicle\Megane\Megane CC.\-2008	Program key,
RENAULT\Select from vehicle\Espace\2015-\Mechanical key	Program key,Make dealer key,
RENAULT\Select from vehicle\Megane\Megane IV.\2015-\Smart key	Program smart key,Make dealer key,
RENAULT\Select from vehicle\Megane\Megane IV.\2015-	Program key,Make dealer key,
RENAULT\Select from vehicle\Scenic\Scenic IV.\2015-\Mechanical key	Program key,Make dealer key,
RENAULT\Select from vehicle\Scenic\Scenic IV.\2015-\Smart key	Program smart key,Make dealer key,
RENAULT\Select from vehicle\Dacia\Dokker\2012-	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\Duster\2013-	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\Solenza	Add key,
RENAULT\Select from vehicle\Dacia\Lodgy\2013-	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\Sandero stepway\2006-2011	Add key,
RENAULT\Select from vehicle\Dacia\Sandero\2007-2012	Add key,
RENAULT\Select from vehicle\Dacia\LOGAN\2004-2012	Add key,
RENAULT\Select from vehicle\Dacia\Sandero\2013-	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\LOGAN(MA1LS)\2006-2009	Add key,
SUZUKI\China\Swift\2005-	Lost all key programming,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 1	Lost all key programming,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 2	Program key,Obtain immoID,
SUZUKI\China\Alto\Immobilizer	Program key,Obtain immoID,
SUZUKI\China\SX4\Immobilizer	Program key,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 3	Program key,Read immoID,Program key (without PIN),
SUZUKI\China\Vitara\Smart key	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
SUZUKI\China\Alivio\Smart key	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
SUZUKI\China\Alivio\Immobilizer	Program key,Read immoID,Program key (without PIN),
SUZUKI\China\Liana\Immobilizer\Type 1	Lost all key programming,Obtain immoID,
SUZUKI\China\S-Cross\Smart key	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
SUZUKI\China\Jimny\Immobilizer\Type 1	Program key,Delete key,Register immobiliser,
SUZUKI\China\Liana\Immobilizer\Type 2	Program key,Delete key,Register immobiliser,

SUZUKI	SUZUKI\China\Jimny\Immobilizer\Type 2	Lost all key programming,Obtain immoID,
	SUZUKI\China\Swift\2012-	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
	SUZUKI\China\Swift\2015-\Type 1	Program key,Read immoID,Program key (without PIN),
	SUZUKI\China\Kizashi\Smart key	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
	SUZUKI\China\Swift\2015-\Type 2	Lost all key programming,Obtain immoID,
	SUZUKI\Suzuki(China)\New Alto	Program key,Obtain immoID,
	SUZUKI\Japan\Ignis\Immobilizer	Program key,Delete key,Register immobiliser,
	SUZUKI\USA\XL7(USA)\2007-2009\Immobilization	All key lost,
	SUZUKI\Japan\Baleno\Immobilizer\1996-2001	Immobilizer,Delete ey,
	SUZUKI\Japan\Wagon R\Immobilizer\1998-	Program key,Delete key,Register immobiliser,
	SUZUKI\Japan\Swift\Immobilizer\1996-2004	Immobilizer,Delete ey,
	SUZUKI\Japan\Alto\Immobilizer\1996-2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Grand Vitara\Immobilizer\1996-2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Grand Vitara\Immobilizer\2002-	Immobilizer,Delete ey,
	SUZUKI\Japan\Vitara\Immobilizer\1996-2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Vitara\Immobilizer\2002-	Immobilizer,Delete ey,
	SUZUKI\Japan\Jimny\Immobilizer	Immobilizer,Delete ey,
LAMBORGHINI	LAMBORGHINI\LP560\Remote	Program remote,Delete remote,
	LAMBORGHINI\LP570\Remote	Program remote,Delete remote,
	LAMBORGHINI\LP580\Key(smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
	LAMBORGHINI\LP610\Key(smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
	LAMBORGHINI\LP700\Key(smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
HYUNDAI	HYUNDAI\Select from vehicle\China\IX35\2010-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
	HYUNDAI\Select from vehicle\China\Sonata(NF)\2004-	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\2005-	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\2005-	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\2005-	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Mistra(CF)\2014-\Immobilizer	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Elantra(HDC)\2008-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
	HYUNDAI\Select from vehicle\China\Sonata(NFC)\2009-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
	HYUNDAI\Select from vehicle\China\I30(FDC)\2009-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
	HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2014-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-\Smart	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
HYUNDAI\Select from vehicle\China\Sonata(NFC)\2009-2010\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\China\IX35\2010-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\China\Elantra(HDC)\2011-2017\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\IX35\2014-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2014-	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\IX25(GC)\2014-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Sonata 9\2015-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\All New Santafe(MDC)\2012-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\All New Tucson\2015-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Mistra(CF)\2014-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\ATOZ\1998-2002\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Getz(TB)\2005-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Accent(LC)\2000-2002\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Matrix(FC)\2002-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Elantra(XD)\2001-2006\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\HD COUPE\2002-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2006\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-1\1998-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\TRAJET\1999-2007\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Veloster(FS)\2011-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Elantra(AD)\2016-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\i40(VF)\2012-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(HG)\2012-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-BUS(TQ)\2008-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Veracruz\ix55(EN)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)\2009-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2009-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Equus/Centennial(VI)\2009-2013\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)\2009-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\i40(VF)\2012-2016\Smart key\Type 1	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,

HYUNDAI\Select from vehicle\General area\Veloster(FS)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2013-2014\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Equus/Centennial(VI)\2009-2013\Smart	Program smart key,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2009-2012\Smart key\Type	Program smart key,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2009-2012\Smart key\Type	Program smart key,
HYUNDAI\Select from vehicle\General area\Veracruz/ix55(EN)\2007-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
HYUNDAI\Select from vehicle\General area\Equus/Centennial(VI)\2014-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\All New Santafe(MDC)\2012-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe\2001-2002\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe F/L\2009-\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe\2006-\Petrol\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Grand Santafe(NC)\2014-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Grand Santafe(NC)\2014-2017\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(HG)\2012-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Sonata 8(YFC)\2011-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\Sonata 8(YFC)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe F/L\2009-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Accent(MC)\2006-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe\2006-\Diesel\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(HDC)\2011-	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2010-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2014-	Program remote,
HYUNDAI\Select from vehicle\China\All New Tucson\2015-2017\Remote\Type 1	Program remote,
HYUNDAI\Select from vehicle\China\Sonata 8(YFC)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)\2009-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\China\I30(FDC)\2009-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\China\All New Santafe(MDC)\2012-\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(HG)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(AD)\2016-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(AD)\2016-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Tucson(JM)\2005-2016\Remote	Program remote,
HYUNDAI\Select from type\Immobilizer\Type 1(K)	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from type\Immobilizer\Type 2(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 3(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 4(CAN)	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from type\Immobilizer\Type 5(CAN)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Smart key\General area\Type1(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type2(with key slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type3(without key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type4(with key slot K)	Program smart key,
HYUNDAI\Select from type\Smart key\General area\Type5(without key slot K)	Program smart key,
HYUNDAI\Select from type\Smart key\General area\Type6(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type7(without key slot)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type8(without key slot)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 1(K)	Program remote,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 2(CAN)	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Verna(RC)\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 3	Program remote,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 4	Program remote,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 5(K)	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(AD)\2016-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2017-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Remote control system\10 PIN\Type 1	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2017-\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type9(without key slot)	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Accent(MC)\2005-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Accent(MC)\2005-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(HDC)\2008-	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(HDC)\2011-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\Elantra(HDC)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(HDC EV)\2017\Remote	Program remote,

HYUNDAI\Select from vehicle\China\Elantra(HDC EV)\2017\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Celesta\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Celesta\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Celesta\2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Elantra\2004-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\China\IX25(GC)\2014-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\IX25(GC)\2014-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2014-2017\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\IX35\2014-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2017-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Mistra(CF)\2014-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(LFC)\2015-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Sonata(LFC)\2015-	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(LFC)\2015-2017\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Sonata(NFC)\2009-	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(NF)\2004-2008\Remote	Program remote,
HYUNDAI\Select from vehicle\China\All New Tucson\2015-2017\Remote\Type 2	Program remote,
HYUNDAI\Select from vehicle\China\All New Tucson\2015-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2017-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2010-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2010-	Program remote,
HYUNDAI\Select from vehicle\China\Verna\2016-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Verna\2016-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Getz(TB)\2005-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Getz(TB)\2003-2005\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Getz(TB)\2003-2005\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Accent(LC)\2003-2007\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Accent(LC)\2003-2007\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Accent(MC)\2006-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Accent(RB)\2011-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Accent(RB)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Accent(RB)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,

HYUNDAI\Select from vehicle\General area\ccent Solaris(RBr)\2011-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\ccent Solaris(RBr)\2011-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ccent Solaris(RBr)\2011-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Atos(MXI)-PDF\2003-2013\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\CRETA(GS)\2015-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra Coupe(JK)\2013-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra Coupe(JK)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra Coupe(JK)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(AD)\2016-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(AD)\2016-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(ADA)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Elantra(ADA)\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(ADA)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(HD)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(HD)\2007-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Elantra(HD)\2007-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(MD)\2012-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(MD)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(MD)\2012-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(MDI)\2013-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(MDI)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(MDI)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(UD)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(UD)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(UD)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(XD)\2001-2006\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Eon(HA)\2012-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Eon(HA)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)-U.S.\2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2009-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2013-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

HYUNDAI\Select from vehicle\General area\Genesis(BH)\2013-2014\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis(BH)-U.S.\2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(BH)-U.S.\2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis(BH)-U.S.\2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(DH)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Grand Santafe(NC)\2014-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Grand i10\Xcent(BA)\2014-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Grand i10\Xcent(BA)\2014-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(HG)\2012-2016\Smart	Program smart card,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2007-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2007-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2006\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\H-BUS(TQ)\2008-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\H-BUS(TQ)\2008-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-1/iMAX/iLOAD(TQ)\2008-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\H-1/iMAX/iLOAD(TQ)\2008-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\H-1/iMAX/iLOAD(TQ)\2008-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-1/iMAX/iLOAD(TQ)\2008-	Program remote,
HYUNDAI\Select from vehicle\General area\H-100 Truck(HR)\2013-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\H-100 Truck(HR)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\H-100 Truck(HR)\2003-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\HB20(HB)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\HB20(HB)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i10(IA)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i10(IA)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i10(IA)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i10(PA)\2008-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i10(PA)\2008-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i20(GB)\2015-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i20(GB)\2015-2016\Remote	Program remote,

HYUNDAI

HYUNDAI\Select from vehicle\General area\i20(GB)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i20(IB)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i20(IB)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i20(IB)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i20(PB)\2009-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i20(PB)\2009-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i20(PB)\2013-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i20(PB)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i20(PB)\2013-2016\Smart key\with ESCL	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i20(PB)\2013-2016\Smart key\without	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-2012\Immobilizer\Petrol	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i30(GD)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\i30(GD)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i30(GD)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i30(GDe)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\i30(GDe)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i30(GDe)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i30/Elantra Neos(FD)\2008-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30/Elantra Neos(FD)\2008-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30/Elantra Neos(FD)\2008-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\i30/Elantra Neos(FD)\2008-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30/Elantra Neos(FD)\2008-	Program remote,
HYUNDAI\Select from vehicle\General area\i40(VF)\2012-2016\Smart key\Type 2	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i40(VF)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ix20(JC)\2011-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\ix20(JC)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ix20(JC)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\ix35 FCEV(LM FCEV)\2013-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,

HYUNDAI\Select from vehicle\General area\ix35(EL)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2010-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2010-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2010-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Matrix(FC)\2002-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\SANTAFE SPORT(DMA)\2014-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\SANTAFE SPORT(DMA)\2014-	Program remote,
HYUNDAI\Select from vehicle\General area\SANTAFE SPORT(DMA)\2014-	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2010-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2010-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2010-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2006-2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2006-2009\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Santafe(DM)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe(DM)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Santafe(DM)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(DMI)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe(DMI)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Santafe(DMI)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(LFHEV)\2015-	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\SANTAFE(SM)\2001-2006\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(LFHEV)-U.S.\2016\Smart	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)\2014-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)\2014-	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)\2014-	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)-U.S.\2013-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)-U.S.\2013-	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(EF)\2005-2006\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(LF)\2015-2016\Immobilizer\G	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(LF)\2015-2016\Immobilizer\G	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

HYUNDAI\Select from vehicle\General area\Sonata(LF)\2015-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(LF)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(LFA)\2015-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(LFA)\2015-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(LFA)\2015-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2007-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2007-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2007-2010\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2005-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2005-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2005-2006\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(YF)-US\2011-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(YF)-US\2011-2014\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(YF)-US\2011-2014\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(YFI)\2012-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(YFI)\2012-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(YFI)\2012-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata/i45(YF)\2011-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata/i45(YF)\2011-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata/i45(YF)\2011-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Terracan\2001-2006\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\TRAJET\1999-2007\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Tucson FFV(JM FFV)\2012-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson FFV(JM FFV)\2012-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson FFV(JM FFV)\2012-	Program remote,
HYUNDAI\Select from vehicle\General area\Tucson(JM)\2005-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson(JM)\2005-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson(JM)\2005-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson(JM)\2005-2010\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\TUCSON(TL)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\TUCSON(TL)\2016\Remote	Program remote,

HYUNDAI\Select from vehicle\General area\TUCSON(TL)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\TUCSON(TLE)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\TUCSON(TLE)\2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\TUCSON(TLE)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2010-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2010-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2010-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Veloster(FS)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Veracruz/ix55(EN)\2007-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Veracruz/ix55(EN)\2007-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Verna(RBI)\2011-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Verna(RBI)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Verna(RBI)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Accent(LC)\2003-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Accent(LC)\2003-2005\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Accent(MC)\2006-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Accent(MC)\2006-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Accent(RB)\2012-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Accent(RB)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Attitude(Mexico)\2006-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(HG)\2012-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(HG)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Azera(HG)\2012-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Azera(TG)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Azera(TG)\2007-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(TG)\2007-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Azera(TG)\2006\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(TG)\2006\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra Coupe(JK)\2013-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

HYUNDAI\Select from vehicle\USA\Elantra Coupe(JK)\2013-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra Coupe(JK)\2013-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra GT(GD)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra GT(GD)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra GT(GD)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra Touring(FD)\2009-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra Touring(FD)\2009-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(HD)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(HD)\2007-2010\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(MD)\2011-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(MD)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(MD)\2011-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(UD)\2011-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(UD)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(UD)\2011-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(XD)\2001-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(XD)\2001-2006\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Entourage(EP)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Entourage(EP)\2007-	Program remote,
HYUNDAI\Select from vehicle\USA\Equus(VI)\2014-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Equus(VI)\2011-2013\Smart key	Program smart key,
HYUNDAI\Select from vehicle\USA\Genesis Coupe(BK)\2010-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Genesis Coupe(BK)\2010-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis Coupe(BK)\2010-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\2012-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\2012-2014\Remote	Program remote,

HYUNDAI\Select from vehicle\USA\Genesis(BH)\2012-2014\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\2009-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\2009-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\2009-2011\Smart	Program smart key,
HYUNDAI\Select from vehicle\USA\Genesis(DH)\2015-2016\Smart	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2013-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe(CM)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe(CM)\2007-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe(CM)\2012\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe NC\2013-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe NC\2013-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe NC\2013-2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\SANTAFE(SM)\2006\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\SANTAFE(SM)\2001-	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata HEV(LF HEV)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata Hybrid(YFHEV)\2011-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata Hybrid(YFHEV)\2011-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata Hybrid(YFHEV)\2011-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata PHEV(LF PHEV)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\2015-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\2015-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\2015-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\2015-2016\Smart	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata(NF)\2006-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata(NF)\2006-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Sonata(NF)\2006-2010\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata(YF)\2011-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata(YF)\2011-2014\Remote	Program remote,

HYUNDAI\Select from vehicle\USA\Sonata(YF)\2011-2014\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\USA\Tiburon(GK)\2003-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Tiburon(GK)\2003-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\TUCSON FCEV(LM FCEV)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2010-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2010-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2010-2015\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2005-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2005-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2005-2009\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\TIBURON(TL)\2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2012-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2012-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Veracruz/ix55(EN)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Veracruz/ix55(EN)\2007-	Program remote,
HYUNDAI\Select from vehicle\USA\Veracruz/ix55(EN)\2007-	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
HYUNDAI\Select from vehicle\USA\XG(XG)\2001-2005\Remote	Program remote,
HYUNDAI\Select from type\Remote control system\16 PIN\Type6(K)	Program remote,
HYUNDAI\Select from type\Immobilizer\Type6(CAN)	Immobilizer,neutral mode,
HYUNDAI\Select from type\Immobilizer\Type7(CAN)	Immobilizer,neutral mode,
HYUNDAI\Select from type\Immobilizer\Type8(K)	Immobilizer,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Smart key\China\Type1(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from type\Smart key\China\Type2(with key slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
HYUNDAI\Select from type\Smart key\China\Type3(without key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\China\Type4(with key slot K)	Program smart key,
HYUNDAI\Select from type\Smart key\China\Type5(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
HYUNDAI\Select from type\Smart key\China\Type6(without key slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\USA\Type1(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from type\Smart key\USA\Type2(with key slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
HYUNDAI\Select from type\Smart key\USA\Type3(without key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\USA\Type4(with key slot K)	Program smart key,

	HYUNDAI\Select from type\Smart key\USA\Type5(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
	HYUNDAI\Select from type\Smart key\USA\Type6(without key slot CAN)	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
	HYUNDAI\Select from type\Smart key\General area\Type10(without key slot	Program smart card,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
	HYUNDAI\Read PIN code	46 smart card,8A smart card,47 smart card,Read 46 chip PIN,PIN code calculator(-2007),
	MITSUBISHI\Select from type\Immobilizer\Type 1	Lost all key programming,Register pin code,
	MITSUBISHI\Select from type\Remote\Type 1	Program remote,
	MITSUBISHI\Select from type\Smart key\Type 1	Program smart key,
	MITSUBISHI\Select from type\Immobilizer\Type 2	Program key,
	MITSUBISHI\Select from type\Remote\Type 2	Program remote,
	MITSUBISHI\Select from type\Smart key\Type 2	Program smart key,
	MITSUBISHI\Select from type\Immobilizer\Type 3	Program key,
	MITSUBISHI\Select from type\Remote\Type 3	Program remote,
	MITSUBISHI\Select from type\Remote\Type 4	Program remote,
	MITSUBISHI\Select from type\Immobilizer\Type 4	Program key,
	MITSUBISHI\Select from vehicle\China\Lancer-ex\Smart key\Type 1	Program smart key,
	MITSUBISHI\Select from vehicle\China\Lancer-ex\Immobilizer\Type 1	Lost all key programming,Register pin code,
	MITSUBISHI\Select from vehicle\China\Lancer-ex\Remote\Type 1	Program remote,
	MITSUBISHI\Select from vehicle\China\Outlander\2013\Smart	Program smart key,
	MITSUBISHI\Select from vehicle\China\ASX\Smart key\Type 2	Program smart key,
	MITSUBISHI\Select from vehicle\China\ASX\Immobilizer\Type 4	Program key,
	MITSUBISHI\Select from vehicle\China\ASX\Remote\Type 4	Program remote,
	MITSUBISHI\Select from vehicle\China\TRITON\	Program key,
	MITSUBISHI\Select from vehicle\China\TRITON\	Program key,
	MITSUBISHI\Select from vehicle\China\TRITON\2010\Remote\Type 2	Program remote,
	MITSUBISHI\Select from vehicle\China\TRITON\2010\Remote\Type 3	Program remote,
	MITSUBISHI\Select from vehicle\China\TRITON\2011-	Program key,
	MITSUBISHI\Select from vehicle\China\TRITON\2011-	Program key,
	MITSUBISHI\Select from vehicle\China\Pajero Sport\2010-	Program key,
	MITSUBISHI\Select from vehicle\China\Pajero Sport\2010-	Program remote,
	MITSUBISHI\Select from type\Immobilizer\Type 5	Add key,
	MITSUBISHI\Select from vehicle\China\V73\Immobilizer\Type 5	Add key,
	MITSUBISHI\Select from vehicle\China\V97\Immobilizer\Type 5	Add key,

MITSUBISHI\Select from vehicle\China\Galant\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\Grandis\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\	Add key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\	Program key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\	Program remote,
MITSUBISHI\Select from vehicle\China\Pajero v93\2011-	Add key,
MITSUBISHI\Select from type\Immobilizer\Type 6	Program key,
MITSUBISHI\Select from type\Remote\Type 5	Program remote,
MITSUBISHI\Select from type\Remote\Type 6	Program remote,
MITSUBISHI\Select from vehicle\China\Lancer\Immobilizer	Program key,
MITSUBISHI\Select from vehicle\China\Lancer\Remote	Program remote,
MITSUBISHI\Select from vehicle\Australia\ASX\With smart	Program smart key,
MITSUBISHI\Select from vehicle\Australia\ASX\Without smart	Program key,
MITSUBISHI\Select from vehicle\Australia\EVO\Type 2	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer(CAN)	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer(sport)\Without smart	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer Sport back	Program key,
MITSUBISHI\Select from vehicle\Australia\Mirage\2012-Without smart	Program smart key,
MITSUBISHI\Select from vehicle\Australia\CJ Lancer\Sedan	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ Lancer\Sportback	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ Ralliart\Sedan	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ Ralliart\Sportback	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ Evolution	Program key,
MITSUBISHI\Select from vehicle\Australia\Outlander(CAN)\Without	All key lost,Program remote,
MITSUBISHI\Select from vehicle\Australia\Outlander\With smart\2013	Program smart key,
MITSUBISHI\Select from vehicle\Australia\1999-\Type 3	Program key,
MITSUBISHI\Select from vehicle\Africa\Lancer\2006-2012	Program key,
MITSUBISHI\Select from vehicle\America\USA\Lancer\Type 2(CAN)	Program key,
MITSUBISHI\Select from vehicle\America\USA\Mirage\2012	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Outlander\2014	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Outlander(Sport)\With	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Outlander(Sport)\Witho	Program key,

MITSUBISHI\Select from vehicle\America\USA\Rvr\Without smart-	Program key,
MITSUBISHI\Select from vehicle\America\USA\Rvr\Without	Program key,
MITSUBISHI\Select from vehicle\America\South America\ASX	Program key,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Program smart key,
MITSUBISHI\Select from vehicle\America\South America\Rvr\2012	Program key,
MITSUBISHI\Select from vehicle\Europe\ASX\With smart	Program smart key,
MITSUBISHI\Select from vehicle\Europe\ASX\Without smart	Program key,
MITSUBISHI\Select from vehicle\Europe\EVO\Type 2	Program key,
MITSUBISHI\Select from vehicle\Europe\L200\CAN\2011-	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer Sportback	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer\CAN]	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer sport	Program key,
MITSUBISHI\Select from vehicle\Europe\Mirage\2013\With smart	Program smart key,
MITSUBISHI\Select from vehicle\Europe\Outlander\With smart\2013	Program smart key,
MITSUBISHI\Select from vehicle\Europe\Outlander\CAN]	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\L200\2011	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\cy/Sport/X	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\Outlander\CAN]\With	Program smart key,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacewagon\With	Program smart key,
MITSUBISHI\Select from vehicle\Asia\Other\Delica\2007-2015	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 10\Immobilization\200	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 10\Smart key	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\CY	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016-\Type 1	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016-\Type 2	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Outlander\2005-2012	Program key,
MITSUBISHI\Select from vehicle\Middle East\Lancer\cy/X/Sport/Sport back	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\2011-\Remote\Type 2	Program remote,
MITSUBISHI\Select from vehicle\China\TRITON\2011-\Remote\Type 3	Program remote,
MITSUBISHI\Select from vehicle\China\Outlander\2014-\Smart	Program smart key,
MITSUBISHI\Select from type\Immobilizer\Type 7	All key lost,

MITSUBISHI\Select from type\Immobilizer\Type 8	Add key,
MITSUBISHI\Select from type\Immobilizer\Type 9	All key lost,Key count,
MITSUBISHI\Select from type\Immobilizer\Type 10	All key lost,Key count,
MITSUBISHI\Select from type\Smart key\Type 3	Program smart key,
MITSUBISHI\Select from type\Smart key\Type 4	Add smart key,Key count,
MITSUBISHI\Select from type\Remote\Type 7	Program remote,
MITSUBISHI\Select from type\Remote\Type 8	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 1	Program key,
MITSUBISHI\Select from vehicle\China\Mirage\With smart\2014	Add smart key,Key count,
MITSUBISHI\Select from vehicle\China\Mirage\Without smart	Add key,Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 12	Immobilization,
MITSUBISHI\Select from type\Immobilizer\Type 13	Immobilization,
MITSUBISHI\Select from vehicle\China\Outlander\2013\Immobilizer	Immobilizer,
MITSUBISHI\Select from vehicle\China\Outlander\2013\Remote	Remote,
MITSUBISHI\Select from vehicle\Australia\3000gt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Airtrek	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Colt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Challenger\1999-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Express\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Express	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\EVO\Type 1	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Galant	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Lancer\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer\2003-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer SW\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Mirage\1996-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Mirage\1996-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Mirage\2004-2012	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Nimbus\1998-1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Nimbus\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Outlander\Without smart	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Australia\Pajero\1996-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Pajero\2000-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Pajero IO\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Star Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\1999-\Type PIN 1\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\1999-\Type PIN 2\1999-	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Verada\1996-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Africa\L200 Triton\2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Africa\Outlander\2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Africa\Pajero\1999-2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Africa\Shogun\2001-2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\USA\Diamante\2000-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Eclipse\1996-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Eclipse[CAN]\2006-	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Endeavor	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\USA\Endeavor[CAN]\2006-	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\EVO	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\USA\Galant\2000-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Galant[CAN]\2006-2009	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Galant[PIN1]\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Galant[PIN1]\2000-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Galant[PIN2]\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Galant[PIN2]\2000-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Lancer\Type 1	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Montero\1999-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Montero\2001-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Montero Sport\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Outlander\2000-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Outlander\2004-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Outlander[CAN]\2007-	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South America\Diamonte	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Eclipse	Add key,Reset immo ECU,

MITSUBISHI

MITSUBISHI\Select from vehicle\America\South America\Eclipse[CAN]	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South America\Endeavor	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South America\EVO	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Galant	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Galant[CAN]	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South America\Lancer	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Lancer[CAN]	Program key,
MITSUBISHI\Select from vehicle\America\South America\Montero	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South America\Outlander	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\3000gt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Carisma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Colt Lander	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\EVO\Type 1	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Galant Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Galant\1996-2004	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\l-miev	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\L200	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\L400	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Lancer	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Lancer Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Magnum	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Outlander\Without smart	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Pajero\1999-2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Pajero PININ	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Shogun	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Space Wagon	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Asia\Japan\Carisma\1996-2004	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Colt\1996-2000	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Eclipse\1996-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Galant[PIN1]\1996-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Galant[PIN2]\1996-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\1996-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\2003-2006	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer SW\1996-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\L200\1999-2006	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero\1999-2000	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero\2001-2006	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero IO\1999-	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero Sport\1999-2004	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Nativa\2001-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\1999-2000	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\2000-2005	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero IO\1999-	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero PININ\1999-	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero sport\1999-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun\1996-2000	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun\2000-2005	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun PININ\1999-	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun Sport\1999-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Gear\1996-	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Runner\1998-1999	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Runner\1999-2002	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Start[PIN1]\1999-	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Start[PIN2]\1999-	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Wagon\1998-1999	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Wagon\1999-2002	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\3000 GT\1996-2001	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Israel\Carisma	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Asia\Israel\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\EclipseDis mmna	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Endeavor	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Galant\1994-2004	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\GT3000	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\L400	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\ck/cs/sw/Sport	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Mirage	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Magnum	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Nativa	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Outlander\2013	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Pajero	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacewagon\Without	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Space\Star/gear	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Strada	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 8	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 9	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\CS	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016-\Type 3	All key lost,
MITSUBISHI\Select from vehicle\Asia\Other\Pajero\CK\2000-2010	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Greece\Carisma\1996-2004	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Colt\1996-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Colt New\2002-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Galant\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Lancer\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Lancer SW\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\L200\1999-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero\1996-2000	Add key,Reset immobiliser,

MITSUBISHI\Select from vehicle\Greece\Pajero New\2000-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero PININ\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero sport\1999-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Gear\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Runner\1998-1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Runner\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Start\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\3000gt\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Middle East\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Eclipse Dic mmna	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Endeavor	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\GT3000	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Galant\E50/EA/DJ1/DJ2/DJ3	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Lancer\ck/cs/sw	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\L200\2007	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Magna	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Nativa	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Outlander\cu/cw	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Pajero\Q/CK/BK/IO/Sport	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Strada	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Space\Star/gear/wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\China\Pajero Sport\2017-\Smart key	Program smart key,
MITSUBISHI\Select from vehicle\China\TRITON\2017-\Smart key	Program smart key,
MITSUBISHI\Select from vehicle\China\Attraga\2015-\Smart key	Program smart key,
MITSUBISHI\Select from vehicle\Australia\Outlander(CAN)\Without	Program remote,Add key,
MITSUBISHI\Select from vehicle\Australia\Outlander(CAN)\With smart\	Program smart key,
MITSUBISHI\Select from vehicle\Australia\Outlander(CAN)\With	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Galant\2004-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Galant\2006-	All key lost,Key count,
MITSUBISHI\Select from vehicle\China\Attraga\2015\Smart key	Program smart key,

	MITSUBISHI\Select from vehicle\China\Attraga\2015\Immobilizer	All key lost,
	MITSUBISHI\Select from vehicle\China\Attraga\2015\Remote	Program remote,
	MITSUBISHI\Select from vehicle\China\Phantom\Without	All key lost,
	MITSUBISHI\Select from vehicle\China\Phantom\Without	Program remote,
	MITSUBISHI\Select from vehicle\China\Phantom\With smart\-	Program smart key,
	MITSUBISHI\Select from vehicle\China\Phantom\With smart\2015-	Program smart key,
	MITSUBISHI\Select from vehicle\China\Phantom\With smart\2015-	Program remote,
	MITSUBISHI\Select from vehicle\China\Outlander\2016-\Immobilizer	Add key,
	MITSUBISHI\Select from vehicle\China\Outlander\2016-\Remote	Program remote,
	MITSUBISHI\Select from vehicle\China\Outlander\2014-\Immobilizer	Add key,
	MITSUBISHI\Select from vehicle\China\Outlander\2014-\Remote	Program remote,
HONDA	HONDA\Select from type\Immobilizer\16 PIN\IMMO1	Add one key,All key lost,Reset key,
	HONDA\Select from type\Immobilizer\16 PIN\IMMO2	Add one key,All key lost,Reset key,
	HONDA\Select from type\Immobilizer\16 PIN\IMMO3	Add key,All key lost,Reset immobiliser,
	HONDA\Select from type\Immobilizer\16 PIN\Check IMMO type	Immo type,
	HONDA\Select from type\Immobilizer\3-pin connector\Check IMMO type	Search IMMO type,
	HONDA\Select from type\Immobilizer\3-pin connector\IMMO1	Add 1 key,All key lost,Reset key,
	HONDA\Select from type\Immobilizer\3-pin connector\IMMO2	Add one key,All key lost,Reset key,
	HONDA\Select from type\Immobilizer\3-pin connector\IMMO3	Add key,All key lost,Odometer adjustment,
	HONDA\Select from type\Immobilizer\16 PIN\IMMO5	Read key count,All key lost,
	HONDA\Select from type\Smart key\Knob type	Add one key,All key lost,Detect smart key,
	HONDA\Select from type\Smart key\Button type 1	Add one key,All key lost,
	HONDA\Select from type\Remote\IMMO9	Add remote,Delete remote,
	HONDA\Select from type\Immobilizer\16 PIN\IMMO4	Reset immobox,Reset ECM,
	HONDA\Select from type\Smart key\Button type 2	Add 1 key,All key lost,
	HONDA\Select from type\Smart key\Button type 3	Add 1 key,All key lost,
	HONDA\Select from type\Immobilizer\3-pin connector\IMMO4	Reset immobox,Reset ECM,
DS	DS\Select from vehicle\DS4\Smart key	All smart key lost,
	DS\Select from type\Immobilizer\Type 1	Program key,
	DS\Select from type\Smart key\Type 1	All smart key lost,
	DS\Select from type\Immobilizer\Type 3	Program key,
	DS\Select from type\Immobilizer\Type 2	Program key,

DS	DS>Select from vehicle\DS5\Immobilizer\Type 2	Program key,
	DS>Select from vehicle\DS5\Immobilizer\Type 3	Program key,
	DS>Select from vehicle\DS3\Immobilizer	Program key,
	DS>Select from vehicle\DS4\Immobilizer	Program key,
	DS>Select from vehicle\DS5\Immobilizer\Type 1	Program key,
	DS>Select from vehicle\DS6\Immobilizer	Program key,
	DS>Select from vehicle\DS5\Smart key	All smart key lost,
	DS>Select from vehicle\DS6\Smart key	All smart key lost,
	DS>Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program remote key,
	DS>Select from type\Replace engine ECU\M745	Replace engine ECU,
	DS\Read PIN code	Type 1,Type 2,Type 3,Type 4 (K line),
BENTLEY	BENTLEY\Flying Spur\2012 \Immobilizer	Learn key,Read PIN code,
	BENTLEY\Mulsanne\6.8 liter\Immobilizer\Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
SMART	SMART\BR451\Immobilizer	Program key,
	SMART\BR450\2002\Immobilizer	Program key,
	SMART\BR453\Immobilizer	Read PIN code,Program key,Recover configured data,Test(disable),
	SMART\BR452\2003-2006\Immobilizer	Program key,Read key count,
	SMART\BR454\2004-2006\Immobilizer	Program key,
	SMART\BR450\2002-\Immobilizer	Program key,Read key count,
LUXGEN	LUXGEN\7 SUV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete
	LUXGEN\5 SEDAN\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete
	LUXGEN\7 MPV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete
	LUXGEN\MASTER CEO\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete
	LUXGEN\U6 SUV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete
	LUXGEN\New 7 MPV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete
	LUXGEN\New 7 SUV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete
	LUXGEN\LUXGEN 5(new)\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete
BUICK	BUICK\Excele\2014\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	BUICK\Excele\2014\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
	BUICK\Envision\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	BUICK\Encore\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	BUICK\GL8\2011-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,

BUICK

BUICK\Lacrosse\2010-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Regal\2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Verano\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Encore\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\GL8\2011-2016\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\Lacrosse\2010-2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\Regal\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\Verano\2015\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\Excelle\2015\Immobilizer	All key lost,Add key,
BUICK\Excelle\2015\Smart key	All smart key lost,Add smart key,
BUICK\Excelle\2013\Immobilizer\Type 1	Program key,Delete key,Read key count,
BUICK\Lacrosse\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
BUICK\Allure\2005-2008\Immobilizer	Lost all key,Read key count,
BUICK\Enclave\Immobilizer	Lost all key,Read key count,
BUICK\Lucerne\Immobilizer	Lost all key,Read key count,
BUICK\Park Avenue\2005\Immobilizer	Lost all key,Read key count,
BUICK\Terraza\Immobilizer	Lost all key,Read key count,
BUICK\Excelle\2012\Immobilizer	Program key,Turn to neutral mode,
BUICK\GL8\2004-2010\Immobilizer	All key lost,
BUICK\Excelle\2012\Remote\Type 1	Program remote,
BUICK\Excelle\2013\Remote	Program remote,Read remote count,
BUICK\Enclave\Remote	Program remote,Delete remote,
BUICK\Park Avenue\Remote	Program remote,Delete remote,
BUICK\Lacrosse\Remote	Program remote,
BUICK\Century\Remote	Program remote,
BUICK\Regal\2016\Remote	Program remote,
BUICK\FirstLand\Remote	Program remote,
BUICK\Royaum\Immobilizer	Program key,
BUICK\GL8\2017\Smart key\Type 1	Read key count,All smart key lost,Add smart key,
BUICK\Envision\Smart key\2017	Add smart key,All smart key lost,Read smart key count,
BUICK\Lacrosse\2005-2009\Immobilizer	All key lost,
BUICK\Excelle\2012\Remote\Type 2	Remote,

BUICK\Excelle\2013-\Immobilizer\Type 2	All key lost,Add key,
BUICK\GL8\2011-2016\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,
BUICK\Envision\Smart key\2017-	All smart key lost,Add smart key,Read smart key count,Clear fault code,
BUICK\Excelle\2017-\Immobilizer	Read key count,All key lost,Add key,
BUICK\Regal\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
BUICK\GL8\2017-\Smart key\Type 2(2.5L)	All smart key lost,Add smart key,Read smart key count,Clear fault code,
BUICK\Verano\2017-\Immobilizer	All key lost,Clear fault code,Read key count,
BUICK\Verano\2017-\Smart key	All smart key lost,Add smart eky,Read smart key count,
BUICK\Park Avenue\2004\Immobilizer	All key lost,
BUICK\Lesabre\2000-2005\Immobilizer	All key lost,
BUICK\Rendezous\2002-2004\Immobilizer	All key lost,
BUICK\Sail\Immobilizer	Clear fault code,Program key,Delete key,
BUICK\Read PIN code	Read pin code type1,Read pin code type2,Read pin code type3,Read pin code type4,Read pin code type5,Read pin code
CADILLAC\ATS\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\ATSL\2015-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\SRX\2010-2014\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\SRX\2015-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\XTS\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\ATS\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CADILLAC\ATSL\2015-2016\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault code,
CADILLAC\SRX\2010-2014\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault code,
CADILLAC\SRX\2015-\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CADILLAC\CT6\2016\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\CTS\2013-\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\Escalade\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\CT6\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CADILLAC\XT5\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CADILLAC\CTS\2008-2012\One-click\Immobilizer	Lost all key,Read key count,
CADILLAC\DT5\2006-2013\Immobilizer	Lost all key,Read key count,
CADILLAC\Escalade\Immobilizer	Lost all key,Read key count,
CADILLAC\SRX\2004-2009\Immobilizer	Lost all key,Read key count,
CADILLAC\SLS\2005-2009\Immobilizer	All key lost,

CADILLAC

CADILLAC

CADILLAC\SLS\2013\Immobilizer	All key lost,
CADILLAC\SLS\2009-\Immobilizer	All key lost,
CADILLAC\Escalade\Remote	Program remote,Delete remote,
CADILLAC\CTS\Remote	Program remote,
CADILLAC\CTS\2003-2007\Immobilizer	All key lost,
CADILLAC\CTS\2008-2012\Knob type\Smart key	All key lost,
CADILLAC\ATSL\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CADILLAC\XTS\2016-\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\XTS\2015\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\SRX\2010-2014\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,
CADILLAC\ATSL\2015-2016\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,
CADILLAC\XTS\2018\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CADILLAC\Catera\1997-2002\Immobilizer	Clear fault code,Program key,Delete key,
CADILLAC\CTS\2008-2013(Prox)\Immobilizer	All key lost,
CADILLAC\Deville\2003\Immobilizer	All key lost,
CADILLAC\Deville STS\Immobilizer	All key lost,
CADILLAC\STS\2007-2012\Immobilizer	All key lost,
CADILLAC\XLR\2004-2009\Immobilizer	All key lost,
CADILLAC\Read PIN code	Read pin code type1,Read pin code type2,Read pin code type3,Read pin code type4,Read pin code type5,Read pin code
CHEVROLET\China\Aveo\Type 2\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Cruze\2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Malibu\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Trax\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Aveo\Type 2\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Cruze\2013\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Malibu\2015\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Trax\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Malibu\2016-\Smart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Lova\2016\Immobilizer	All key lost,Add key,
CHEVROLET\China\Lova\2016\Smart key	All smart key lost,Add smart key,
CHEVROLET\China\Epica\2013-\Immobilizer	Program key,Delete key,Read key count,
CHEVROLET\China\Captiva\IMMO\Without smart\Type 2	Lost all key,Read key count,

CHEVROLET

CHEVROLET\China\Captiva\IMMO\Without smart\Type 1	Program key,
CHEVROLET\China\Aveo\Type 1\Immobilizer	Program key,Turn to neutral mode,
CHEVROLET\China\Lova\2015\Immobilizer	Program key,Turn to neutral mode,
CHEVROLET\China\Epica\2012\Immobilizer	All key lost,-09 Epica read PIN code,
CHEVROLET\China\Lova\2015\Remote	Program remote,
CHEVROLET\China\Sail\Remote	Program remote,Read key count,
CHEVROLET\China\Epica\2013-\Remote	Program remote,Read remote count,
CHEVROLET\China\Captiva\Remote\Type 1	Program remote,Delete remote,
CHEVROLET\China\Captiva\Remote\Type 2	Program remote,Delete remote,
CHEVROLET\China\Malibu\2007-2011\Remote	Program remote,Delete remote,
CHEVROLET\China\Sail 3\Remote	Program remote,Read remote count,
CHEVROLET\China\Lumina\2006-2011\Immobilizer	Program key,
CHEVROLET\China\Lova\2016\Remote	Program remote,Read remote count,
CHEVROLET\China\Sail\IMMO	Clear fault code,Program key,Delete key,
CHEVROLET\China\Captiva\IMMO\With smart\Smart key	All key lost,
CHEVROLET\China\Cavalier\Immobilizer	Read key count,All key lost,Add key,
CHEVROLET\China\Camaro\2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2013\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2016-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CHEVROLET\China\Malibu XL\2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Malibu XL\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Malibu XL\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CHEVROLET\China\Aveo\Immobilizer	Program key,Turn to neutral mode,
CHEVROLET\China\Zafira\99-	Immobilizer,Erase key,
CHEVROLET\China\Colorado\IMMO\Without smart	All key lost,Clear fault code,Read key count,Add key,
CHEVROLET\China\Colorado\IMMO\With smart	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Cruze\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CHEVROLET\China\Cruze\2014-2016\Smart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Cruze\2014-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2014-2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2014-2015\Smart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Equinox\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,

	CHEVROLET\China\Read PIN code	Read pin code type1,Read pin code type2,Read pin code type3,Read pin code type4,Read pin code type5,Read pin code
BAIC	BAIC\Immobilizer\D50	Detect key count,Add key,Delete key,
	BAIC\Immobilizer\X25	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X35	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X55	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X65	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\E series	Program key,Delete key,Check key status,Check immo lock,
	BAIC\Immobilizer\D20	Program key,Delete key,Check key status,Check immo lock,
	BAIC\Immobilizer\BJ40	Program key,
	BAIC\Immobilizer\BJ80	Program key,
	BAIC\Immobilizer\S3	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Smart key\BJ80	Program key,
	BAIC\Smart key\CC(C60F)	Program key,
	BAIC\Smart key\D280	Program key,
	BAIC\Smart key\D50(C50E)	Program key,
	BAIC\Smart key\D60	Program key,
	BAIC\Smart key\D61	Program key,
	BAIC\Smart key\D70(C70G)	Program key,
	BAIC\Smart key\D80(C80G)	Program key,
	BAIC\Smart key\X55	Program key,
	BAIC\Smart key\X65	Program key,
	BAIC\Immobilizer\S50	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\S3L	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Immobilizer\S2	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Immobilizer\H2	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Immobilizer\H6	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Smart key\BJ40	Program key,
	BAIC\Smart key\H3	Program smart key,Program ESCL,
	BAIC\Smart key\H3F	Program smart key,Program ESCL,
	BAIC\Smart key\S3L	Program smart key,
	BAIC\Smart key\S6	Program smart key,
	BAIC\Smart key\H2	Program smart key,

	BAIC\Remote\BJ40L	Program remote,
	BAIC\Remote\S6	Program remote,
	BAIC\Immobilizer\BJ40L\Type 1	Read key count,Program key,Delete key,
	BAIC\Immobilizer\EX200	Program key,Delete key,
	BAIC\Immobilizer\EX260	Program key,Delete key,
	BAIC\Immobilizer\EU220	Add key,Delete key,
	BAIC\Immobilizer\EU260	Add key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV160	Program key,Delete key,
	BAIC\Immobilizer\EV200	Program key,Delete key,
	BAIC\Smart key\S50	Program key,
	BAIC\Smart key\S5	Program smart key,Program ESCL,
	BAIC\Smart key\D230	Program key,
	BAIC\Immobilizer\BJ20	Program key,
	BAIC\Smart key\BJ20	Program key,
BAOJUN	BAOJUN\Immobilizer\560	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Immobilizer\330	Check key count,Program key,Delete key,
	BAOJUN\Smart key\560	Add key,All key lost,
	BAOJUN\Immobilizer\310	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Immobilizer\730	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Immobilizer\630	Read key count,Program key,Delete key,Program remote,
	BAOJUN\Immobilizer\610	Read key count,Program key,Delete key,Program remote,
	BAOJUN\Immobilizer\510	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Smart key\730	Add key,All key lost,
	BAOJUN\Smart key\510	Add key,All key lost,
	BAOJUN\Smart key\310 Wagon	Add key,All key lost,
YEMA AUTO	YEMA AUTO\T70\IMMO	Add key,Delete key,Replace ECM,Replace IMMO,Replace IMMO & ECM,Read key info.,
	YEMA AUTO\T70\PEPS	Program smart key,Program EMS(Delphi),Program ESCL,Program PEPS,Reset EMS(Delphi),Reset PEPS,Reset EMS(UMC),Program
	YEMA AUTO\T70\BCM	Program remote,Read remote count,
QOROS	QOROS\Smart key	Program 1 smart key,Program 2 smart keys,

JAC\IMMO\Heyue RS\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Heyue sedan\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Yueyue\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Sunray\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Refine S3\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Tongyue\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Heyue RS\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Heyue sedan\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Yueyue\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Heyue A30\MT\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Sunray\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Refine S5\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Heyue A30\CVT\Smart PEPS	Read key count,ESCL learning,Add key,Program engine ECU,
JAC\Remote\16 PIN\RS\Type 1	Program remote,
JAC\Remote\16 PIN\Tongyue	Program remote,
JAC\Remote\16 PIN\Binyue	Program remote,
JAC\Remote\16 PIN\Sunray	Program remote,
JAC\Remote\16 PIN\Three-ring remote	Program remote,
JAC\Remote\16 PIN\Refine M5	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S2	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S3	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S5	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine M5	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\RS A30(CVT)	Program remote,Delete remote,Remote count,
JAC\IMMO\Refine S5\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\Remote\16 PIN\Refine M3	Program remote,
JAC\Remote\16 PIN\IEV5(EV)	Program remote,
JAC\IMMO\Refine S2\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Refine S2\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Heyue M3\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Heyue A30\CVT\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\Remote\10 PIN\Type 1	Program remote,

JAC

JAC\Remote\10 PIN\Type 2	Program remote,
JAC\IMMO\Refine S3\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Refine A60\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Refine S2\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Refine S2 mini\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Refine S3\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Refine S5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Refine S5\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset
JAC\IMMO\Refine S7\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Refine S7\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Refine M4\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Refine M5\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Sunray\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\Remote\16 PIN\Refine M4	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S2 mini	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S7	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\6S EV	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\RS\Type 2	Program remote,
ROEWE\IMMO\350\2013-	Add key,Delete key,Check lock time,
ROEWE\IMMO\360\Without smart	Add key,Delete key,Check lock time,
ROEWE\IMMO\W5\2013-	Add key,Delete key,Check lock time,
ROEWE\IMMO\550\2012	Delete key,Add key,
ROEWE\IMMO\RX5\With smart	Delete key,Add key,Read key count,
ROEWE\IMMO\RX5\Without smart	Delete key,Add key,Read key count,
ROEWE\Remote\360	Add remote,Delete remote,
ROEWE\Remote\750	Enable remote,Disable remote,Program remote,Clear fault code,
ROEWE\IMMO\ERX5\With smart	Delete key,Add key,Read key count,
ROEWE\IMMO\950\Without smart\Type 1	All key lost,Read key count,Clear fault code,Add key,
ROEWE\IMMO\950\With smart	All smart key lost,Read smart key count,Clear fault code,Add smart key,
ROEWE\IMMO\350\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\W5\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\550\2013-	Add key,Delete key,The rest unlock time,

ROEWE

ROEWE\IMMO\i6\With smart	Delete key,Read key count,Add key,
ROEWE\Remote\W5	Program remote,
ROEWE\IMMO\360\With smart\2017	Add key,Delete key,
ROEWE\IMMO\950\Without smart\Type 2	All key lost,Add key,Read key count,Clear fault code,
ROEWE\Read PIN code\550\2013-	Read PIN code,
ROEWE\IMMO\750(new)\-2012	Delete key,Add key,
ROEWE\IMMO\750(new)\2013-	Add key,Delete key,The rest unlock time,
ROEWE\IMMO\ERX5\Without smart	Delete key,Add key,Read key count,
ROEWE\IMMO\E50\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\E50\2013-	Add key,Delete key,Check lock time,
ROEWE\IMMO\RX3\Without smart	Add key,Delete key,Read key count,
ROEWE\Read PIN code\950\2012-	Read pin code type6 (via BCM),
ZOTYE \A1\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE \Z100\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE \Z300\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE \Langyue\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE \Langjun\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE \Z300\IMMO\Lianchuang IMMO	Clear fault code,Read key count,Add key,Delete key,Detect key,Reset immo box,Immobilization,Program whole system,Write
ZOTYE \Domy X5\Remote	Remote count,Program remote,Delete remote,
ZOTYE \SR7\Remote	Remote count,Program remote,Delete remote,
ZOTYE \T600\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z500\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z700\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z100\Remote	Delete remote,Program remote,
ZOTYE \Langyue\Remote	Delete remote,Program remote,
ZOTYE \Langjun\Remote	Delete remote,Program remote,
ZOTYE \Domy X5\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete
ZOTYE \T600\PEPS\Naen(Magotan-type key)	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete
ZOTYE \SR7\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete
ZOTYE \Z500\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete
ZOTYE \Z700\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete
ZOTYE \5008\PEPS	Program remote A,Program remote B,Program smart key A,Program smart key B,

ZOTYE	ZOTYE \T200\PEPS	Program remote A,Program remote B,Program smart key A,Program smart key B,	
	ZOTYE \Langlang\PEPS	Program remote A,Program remote B,Program smart key A,Program smart key B,	
	ZOTYE \Z200\PEPS	Program remote A,Program remote B,Program smart key A,Program smart key B,	
	ZOTYE \T600\PEPS\Huofu(Hyundai-type key)	Program new key,Program old key,Program PEPS,Program IMMO,Program ESCL,Write PIN code,	
	ZOTYE \Z300\Remote\Type 1	Program remote,Delete remote,	
	ZOTYE \Z300\Remote\Type 2	Remote count,Program remote,Delete remote,	
	ZOTYE \2008\PEPS	Program remote A,Program remote B,Program smart key A,Program smart key B,	
	ZOTYE \T600\IMMO	Program key,Delete key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobilizer,Lock immobilizer,Check key,Check	
	ZOTYE \SR9\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete	
	ZOTYE\E30\Remote	Remote count,Program remote,Delete remote,	
	ZOTYE\X7\Remote	Remote count,Program remote,Delete remote,	
	ZOTYE\X7\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete	
	ZOTYE\SR9\Remote	Remote count,Program remote,Delete remote,	
	ZOTYE\T300\Atech BCM	Remote count,Program remote,Delete remote,	
	ZOTYE\T300\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete	
	ZOTYE\T300\BCM	Remote count,Program remote,Delete remote,	
	ZOTYE\T700\PEPS	Program whole system,Replace BCM,Replace engine EMS,Replace ESCL,Check key,Delete key,Add key,Re-program all keys,Write VIN	
	ZOTYE\E200\PEPS	Program smart key,Delete smart key,Setup PSN,Setup VIN,Write BASE ID,Write AES SK,	
	ZOTYE\Z360\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,	
	ZOTYE\Z360\IMMO\Lianchuang IMMO	Clear fault code,Read key count,Add key,Delete key,Detect key,Reset immo box,Immobilization,Program whole system,Write	
	ZOTYE\Z360\Remote\Type 1	Program remote,Delete remote,	
	ZOTYE\Z360\Remote\Type 2	Remote count,Program remote,Delete remote,	
	ZOTYE\Z360\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete	
	ZOTYE\Z560\Remote	Remote count,Program remote,Delete remote,	
	ZOTYE\Z560\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete	
	ZOTYE\Z300\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete	
	ZOTYE\T500\Remote	Remote count,Program remote,Delete remote,	
	ZOTYE\T500\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete	
	MERCEDES-BENZ	MERCEDES-BENZ\Key system\System 1	Disable key,
		MERCEDES-BENZ\Tail box controlling\C series\204	Trunk control,
MERCEDES-BENZ\Tail box controlling\CLK series\204		Trunk control,	
MERCEDES-BENZ\Tail box controlling\E series\212		Trunk control,	

	MERCEDES-BENZ\Tail box controlling\S series\221	Trunk control,
	Mercedes-Benz\Tail box controlling\E series\213.148 E300 SEDAN(2017)	Trunk control,
	Mercedes-Benz\Remote\163-ML Class	Remote,Reset ECU,
FAW RED FLAG	FAW RED FLAG>Select from type\PEPS\Type 1	Smart key registration,Program remote,Reset immobiliser,
	FAW RED FLAG>Select from vehicle\HQ300\Type 1	Smart key registration,Program remote,Reset immobiliser,
	FAW RED FLAG>Select from type\PEPS\Type 2	Delete smart key,Add smart key,
	FAW RED FLAG>Select from vehicle\H7\Type 2	Delete smart key,Add smart key,
	FAW red flag>Select from type\IMMO \VW IMMO	Program key,
	FAW red flag>Select from vehicle\Ming Shi\VW IMMO	Program key,
JMC	JMC\S350	Program key,
	JMC\S330	Program key,
ZHENGZHOU MAZDA	ZHENGZHOU MAZDA\IMMO\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
ISUZU	ISUZU\D-MAX\Key\Type 1 (46 chip)	Program key,Delete key,Clear fault code,Clear fault code,Reset IMMO,Reset ECU,Program immo ECU (TransTron),Program immo
	ISUZU\MU-7\Immobilizer\46 chip	Program key,Delete key,Clear fault code,Clear fault code,Reset IMMO,Reset ECU,Program immo ECU (TransTron),Program immo
	ISUZU\D-MAX\Key\Type 2	Passive access control programming and start system functions,Reset steering lock ECU,Reset engine ECU,Reset passive
	ISUZU\MU-X\Smart key\Type 1	Passive access control programming and start system functions,Reset steering lock ECU,Reset engine ECU,Reset passive
	ISUZU\D-Max\Smart key	Add smart key,Delete smart key,
	ISUZU\MU-X\Smart key\Type 2	Add smart key,Delete smart key,
	ISUZU\D-MAX\Remote	Program remote,Delete remote,
	ISUZU\TF\IMMO 2008-2012	Add key,Delete key,Clear fault code,
	ISUZU\D-Max\Immobilizer\Type 3(48 chip)	Program key,Delete key,Read key data,Clear fault code,
	ISUZU\MU-7\Immobilizer\48 chip	Program key,Delete key,Read key data,Clear fault code,
	ISUZU\MU-X\Remote	Program remote,Delete remote,
	ISUZU\Rodeo\Immobilizer\46 chip	Program key,Delete key,Clear fault code,Reset IMMO,Reset ECU,Program immo ECU (TransTron),Program immo ECU
	ISUZU\Rodeo\Immobilizer\48 chip	Program key,Delete key,Read key data,Clear fault code,
IVECO	IVECO\Power Daily\Immobilizer	Learn key,Write VIN,Replace IMMO,
	IVECO\Exceed\Immobilizer	Learn key,Write VIN,Replace IMMO,
	IVECO\Power Daily\Remote	Learn remote,Write VIN,
	IVECO\Exceed\Remote	Learn remote,Write VIN,
	IVECO\Daily\2012-	Key info,Program key,Read PIN ocde,Make dealer key,
	IVECO\Daily\2007-2012	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
	IVECO\Eurocargo\2007-2012	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make

WULING MOTORS	WULING MOTORS\S1\Immobilizer	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	WULING MOTORS\S3\Immobilizer	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
SOUEAST MOTORS	SOUEAST MOTORS\DX7\PEPS	Program key,Read pin code,
	SOUEAST MOTORS\DX3\PEPS	Read pin code,Program key,
	SOUEAST MOTORS\V6\PEPS	All key lost,Learning status,Clear PEPS,Clear EMS,Delete ESCL(electronic steering column lock),Read PIN code,Remote
	SOUEAST MOTORS\V3\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	SOUEAST MOTORS\GALANT\Mitsubishi-IMMO	Clear fault code,Read key count,Program key,Reset immo ECU,
	SOUEAST MOTORS\SOVERAN\Mitsubishi-IMMO	Clear fault code,Read key count,Program key,Reset immo ECU,
	SOUEAST MOTORS\DX3\Mechanical key\IMMO(CAN)	Program key,Read PIN code,
	SOUEAST MOTORS\DX3\Mechanical key\Remote(CAN)	Program remote,
TIANJIN FAW	TIANJIN FAW\IMMO\Vela(MT34 Delphi) key \Reset immo(4C chip)	Reset immobox(4C chip),
	TIANJIN FAW\IMMO\Xenia S80	Add key,
	TIANJIN FAW\IMMO\N5	Add key,
	TIANJIN FAW\IMMO\N5(new)	Add key,
	TIANJIN FAW\IMMO\N7	Add key,
	TIANJIN FAW\IMMO\D60	Add key,
	TIANJIN FAW\IMMO\Vizhi V5\ECU IMMO initialization	Type 1,Type 2,Type 3,
	TIANJIN FAW\PEPS\D60	Program ESCL,Program PEPS,Delete smart key,Read key count,Program smart key,
	TIANJIN FAW\Remote\D60	Program remote,Read remote count,Delete remote,
	TIANJIN FAW\IMMO\Vizhi V5\IMMO	Add key,
	TIANJIN FAW\IMMO\Vizhi(MT34 Delphi) key	Reset immobox(4C chip),
	TIANJIN FAW\IMMO\Vizhi V5\Replace ignition coil and program key	Replace immobilizer coil to program key,
	TIANJIN FAW\IMMO\Vela(MT34 Delphi) key \Sync engine and immo(CAN)	Sync engine and IMMO (CAN),
	TIANJIN FAW\IMMO\Vizhi V2\Sync engine and immo(CAN)	Sync engine and IMMO (CAN),
	TIANJIN FAW\IMMO\A70	All key lost,
FAW JIABAO	FAW JIABAO\V80\V80L/T80\Integrated IMMO	Program engine ECU,Program key,Delete key,Immo ECU reset,
	AEOLUS\S30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine
	AEOLUS\H30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine
	AEOLUS\H30 Cross\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine
	AEOLUS\A60\A60-HR16,MR20\BCM	Activate steering wheel lock,
	AEOLUS\A60\A60-HR16,MR20\IMMO\Type 1	Add key,Activate steering wheel lock(all key lost),
	AEOLUS\A60\A60-HR16,MR20\IMMO\Type 2	Add key,Activate steering wheel lock(all key lost),

AEOLUS	AEOLUS\A60\A60-HR16,MR20\PEPS\Type 1	Program smart key,
	AEOLUS\A60\A60-HR16,MR20\PEPS\Type 2	Program smart key,
	AEOLUS\H30\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	AEOLUS\H30 Cross\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	AEOLUS\S30\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	AEOLUS\A30\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	AEOLUS\AX3\AX3(DFM A15 MT22.1)[key start]\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	AEOLUS\AX3\AX3(DFM A14T MT62.1)[key start]\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	AEOLUS\A60\A60-A16\BCM	Program key,
	AEOLUS\A60\A60-A14T\BCM	Program key,
	AEOLUS\AX7\BCM	Program key,
	AEOLUS\A60\A60-A16\PEPS	Program key,
	AEOLUS\AX3\AX3(DFM A14T MT62.1)[button start]\PEPS	Program key,
	AEOLUS\AX7\PEPS	Program key,
	AEOLUS\A30\BCM	Replace OBC & program remote,Program remote,
	AEOLUS\L60\IMMO	Program key,
	AEOLUS\AX3\AX3(DFM A15 MT22.1)[key start]\BCM	Program remote key,
	AEOLUS\AX3\AX3(DFM A14T MT62.1)[key start]\BCM	Program remote key,
	AEOLUS\MX5\BCM	Program key,
	DONGFENG FENGXING\Joyear\B11\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
DONGFENG FENGXING\Joyear\B12\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Joyear\BH5/BH5 LV/BH5A\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Joyear\BX5/BX5A\Lianchuang	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Joyear\BX3\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Joyear\XV\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Joyear\S50\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Joyear\SX5/X5\Lianchuang	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Joyear\SX6\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Lingzhi\CM7/CV7/CM7A\Lianchu	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Fengxing series\CM7\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\Fengxing series\S500\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	
DONGFENG FENGXING\F600/L series\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine	

DONGFENG
FENGXING

DONGFENG FENGXING\Joyear\BX5\BX5A\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\Joyear\S50\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\Joyear\XV\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\Joyear\SX5\X5\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\Joyear\SX6\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\Lingzhi\CM7\CV7\CM7A\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\Fengxing series\CM7\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\Fengxing series\S500\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\F600/L series\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
DONGFENG FENGXING\Joyear\BX5\BX5A\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
DONGFENG FENGXING\Joyear\S50\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
DONGFENG FENGXING\Joyear\XV\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
DONGFENG FENGXING\Joyear\SX5\X5\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
DONGFENG FENGXING\Joyear\SX6\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
DONGFENG FENGXING\Fengxing series\CM7\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
DONGFENG FENGXING\Fengxing series\S500\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
DONGFENG FENGXING\F600/L series\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
DONGFENG FENGXING\Joyear\BX5\BX5A\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\S50\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\XV\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\SX5\X5\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\SX6\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Fengxing series\CM7\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Fengxing series\S500\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\F600/L series\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\B11\1.8T Lianchuang IMMO(K4)	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
DONGFENG FENGXING\Joyear\B12\1.8T Lianchuang IMMO(K4)	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
DONGFENG FENGXING\Joyear\BH5\BH5 LV\BH5A\1.8T Lianchuang IMMO(K4)	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
DONGFENG FENGXING\Joyear\BX3\1.8T Lianchuang IMMO(K4)	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
DONGFENG FENGXING\Joyear\B11\PIN code	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\B12\PIN code	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\BH5\BH5 LV\BH5A\PIN code	DIAS/UMC - PIN code reading,

	DONGFENG FENGXING\Jyear\BS3\PIN code	DIAS/UMC - PIN code reading,
	DONGFENG FENGXING\Jyear\BX3\PIN code	DIAS/UMC - PIN code reading,
	DONGFENG FENGXING\Jyear\BX5\BX5A\PIN code	DIAS/UMC - PIN code reading,
	DONGFENG FENGXING\Jyear\S50\PIN code	DIAS/UMC - PIN code reading,
	DONGFENG FENGXING\Jyear\SX6\PIN code	DIAS/UMC - PIN code reading,
	DONGFENG FENGXING\Jyear\XV\PIN code	DIAS/UMC - PIN code reading,
	DONGFENG FENGXING\Jyear\BS3\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
	DONGFENG FENGXING\Jyear\BS3\UAES BCM	Delete remote,Program remote,
	DONGFENG FENGXING\Jyear\BS3\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO)
LEOPAARD	LEOPAARD\CS7\IMMO\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
	LEOPAARD\CS7\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immo
	LEOPAARD\CS6\IMMO\Petrol\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LEOPAARD\CS6\IMMO\Diesel\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LEOPAARD\CS7\IMMO\Integrated IMMO	PIN code setup,After-sales immobiliser replacement,After sale EMS replacement,After sale key replacement,Offline
	LEOPAARD\CS7\BCM\BCM	Program remote,Delete remote,Read remote count,
	LEOPAARD\CS10\Integrated IMMO(CAN)	Program key,Program immobiliser or EMS,
	LEOPAARD\CS10\Narn PEPS	Add smart key,Delete smart key,Smart key count,
	LEOPAARD\CS4\IMMO\Integrated IMMO	PIN code setup,After-sales immobiliser replacement,After sale EMS replacement,After sale key replacement,Offline
	LEOPAARD\CS9\Narn PEPS	Add smart key,Delete smart key,Smart key count,
LANDWIND	LANDWIND\Fashion\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LANDWIND\Funwa\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LANDWIND\X6\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LANDWIND\X8\2016\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LANDWIND\X9\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LANDWIND\X5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,
	LANDWIND\X8\2016\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,
	LANDWIND\X9\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,
	LANDWIND\X5\TungThih PEPS	Clear fault code,Program EMS,Reset EMS,Program ESCL,Program old PEPS,Program new PEPS,Program key,
	LANDWIND\X5\Kuwe PEPS	Program ESCL,Program old PEPS,Program key,Clear fault code,Program new PEPS,Reset to factory mode,
	LANDWIND\X7\2016\TungThih PEPS	Clear fault code,Program EMS,Reset EMS,Program ESCL,Program old PEPS,Program new PEPS,Program key,
	LANDWIND\X8\2016\Delphi PIN code	Delphi anti-theft PIN code reading,
	LANDWIND\X8\2016\Siemens PIN code	Read Siemens PIN code,

LANDWIND\X9\Siemens PIN code	Read Siemens PIN code,
LANDWIND\Funwa\Siemens PIN code	Read Siemens PIN code,
LANDWIND\Fashion\Siemens PIN code	Read Siemens PIN code,
LANDWIND\X7\2017-\TungThih PEPS	Program key,
LANDWIND\X8\2017-\TungThih PEPS	Program key,
LANDWIND\X2\PEPS	Program smart key,Program EMS (UMC),Program EMS (Delphello),Program smart immo box,
CHERY\IMMO\Industrial Traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
CHERY\IMMO\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
CHERY\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset
CHERY\IMMO\Autonomous IMMO	Program new key,Program old key,Delete key,Program engine ECU,ECU immobilization,
CHERY\PEPS\Type 1	Add new smart key,Add old smart key,Delete smart key,
CHERY\PEPS\Type 2	Program smart key,
CHERY\Remote\A1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Cowin 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\QQ3	Read key count,Program remote,Clear fault code,
CHERY\Remote\QQ6	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich M1\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich M2	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich M3	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich M5	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich X1	Read key count,Program remote,Clear fault code,
CHERY\Remote\V5 series\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Elegant series	Read key count,Program remote,Clear fault code,
CHERY\Remote\Eastar\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Tiggo 3\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\EQ	Read key count,Program remote,Clear fault code,
CHERY\Remote\Tiggo Facelift \Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\New QQ	Read key count,Program remote,Clear fault code,
CHERY\Remote\A3	Clear fault code,Program remote,Delete remote,
CHERY\Remote\H5 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\X5 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\H3 series	Clear fault code,Program remote,Delete remote,

CHERY

CHERY\Remote\FENGYUN 2	Clear fault code,Program remote>Delete remote,
CHERY\Remote\New Eastar	Clear fault code,Program remote>Delete remote,
CHERY\Remote\A5\Type 1(Atech)	Clear fault code,Remote count,Program remote,
CHERY\Remote\Qiyun 3\Type 1(Atech)	Clear fault code,Remote count,Program remote,
CHERY\Remote\E5	Clear fault code,Remote count,Program remote,
CHERY\Remote\A5\Type 2(kostal)	Program remote,Clear fault code,
CHERY\Remote\Qiyun 3\Type 2(kostal)	Program remote,Clear fault code,
CHERY\Remote\Cowin 5\Type 3	Read remote count,Program remote,Clear fault code,
CHERY\Remote\Rich M1\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\G3\Type 1	Read remote count,Program remote,Clear fault code,
CHERY\Remote\V5 series\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\Eastar\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\Arrizo M7	Read remote count,Program remote,Clear fault code,
CHERY\Remote\QQme series	Read remote count,Program remote,Clear fault code,
CHERY\Remote\G2	Program remote,
CHERY\Remote\G3\Type 2	Program remote,
CHERY\Remote\G5	Program remote,
CHERY\Remote\G6	Program remote,
CHERY\Remote\Tiggo 3\Type 2	Program remote,Clear fault code>Delete remote,
CHERY\Remote\Tiggo Facelift \Type 2	Program remote,Clear fault code>Delete remote,
CHERY\Remote\E3	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo 3	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo 7	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo M7(PHEV)	Program remote>Delete remote,Remote count,
CHERY\Remote\Tiggo 5	Program remote>Delete remote,Remote count,
CHERY\Remote\Cowin C3	Program remote>Delete remote,Remote count,
CHERY\Remote\Cowin C3R	Program remote>Delete remote,Remote count,
CHERY\Remote\M16PHEV	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo 5	Read remote count,Program remote,
CHERY\Remote\Karry K50	Program remote,Read remote count,
CHERY\IMMO\PIN code	Delphi anti-theft PIN code reading,Industrial traffic anti-theft PIN code reading,Lianchuang anti-theft PIN code reading,
CHERY\Remote\Tiggo 7	Program remote>Delete remote,Remote count,

CHERY\Remote\Cowin	Program remote,Remote sync mode,
CHERY\Remote\Cowin 2	Program remote,Remote sync mode,
CHERY\Remote\Cowin 5\Type 1	Program remote,Remote sync mode,
CHERY\Remote\V5 series\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Eastar\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Tiggo 3\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Tiggo Facelift\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Cowin 5\Type 2	Read key count,Program remote,Clear fault code,
GREAT WALL MOTOR\Great Wall\Peri\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Great Wall\Florid\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Great Wall\Phelex\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Great Wall\C30\2011-2014\Mechanical key\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Great Wall\C50\2012\Mechanical key\Industrial	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Great Wall\C20R\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Hover\H1\IMMO system\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Hover\H6-2012\Mechanical key\IMMO\Industrial traffic	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Hover\M1\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Hover\M4\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Great Wall\Cowry\Delphi petrol IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle\Delphi petrol IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle6\Delphi petrol IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\V80\Delphi petrol IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H3\Delphi petrol IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H5\Delphi petrol IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H5 (commemorative) \Delphi petrol IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Coolbear\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole
GREAT WALL MOTOR\Hover\M2\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole
GREAT WALL MOTOR\Great Wall\Wingle\Delphi diesel(Bosch 2.8TC)	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H3\Delphi diesel(Bosch 2.8TC) IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H5\Delphi diesel(Bosch 2.8TC) IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle\Delphi diesel(Delphi 4D20)	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle6\Delphi diesel(Delphi 4D20)	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN

GREAT WALL
MOTOR

GREAT WALL MOTOR\Hover\H5\Delphi diesel(Delphi 4D20) IMMO	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle\Delphi diesel(Bosch 4D20) IMMO	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle6\Delphi diesel(Bosch 4D20)	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H5\Delphi diesel(Bosch 4D20) IMMO	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H5 (commemorative) \Delphi diesel(Bosch	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle\Delphi petrol IMMO (JAES)	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle\Delphi (Bosch EDC17C63)	Read key count,Reset PIN code,Program key,Delete all keys,Program engine ECU,Program immo ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H2\Keyless Entry(PEPS)	Program key,Clear ESCL learn status,Clear EMS learning status,Clear CAPE learning status,Offline key programming,
GREAT WALL MOTOR\Hover\H6 coupe\2017\Keyless Entry(PEPS)	Program key,Clear ESCL learn status,Clear EMS learning status,Clear CAPE learning status,Offline key programming,
GREAT WALL MOTOR\Great Wall\C30\2015\Mechanical key\Remote(CAN)	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\C50\2012\Mechanical key\Remote	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\Wingle6\Remote	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H1\Body control system\Type 1	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6\2012\Mechanical key\Remote\Type 1	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\C30\2015\Smart key\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Great Wall\C50\2013\Smart key\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Hover\H6\2013-2018\Smart key\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Hover\H7\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Hover\H1\Body control system\Type 2	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H3\Remote	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H5\Remote	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6\2012\Mechanical key\IMMO\Xiamen	Key detecting,Reset engine ECU,Reset immo ECU,Delete key,Add old key,Add new key,ECU immobilization,Program engine ECU,Clear
GREAT WALL MOTOR\Hover\H8\Button-type PEPS	Read key count,Program smart key,Go to recover EOL learning mode,Replace PEPS,Replace EMS,EOL offline learn,Replace
GREAT WALL MOTOR\Hover\H9\Button-type PEPS	Read key count,Program smart key,Go to recover EOL learning mode,Replace PEPS,Replace EMS,EOL offline learn,Replace
GREAT WALL MOTOR\PIN code	Read pin code(Lianchuang),Read pin code(Shanghai industrial),Read PIN code(Delphi),
GREAT WALL MOTOR\Great Wall\C10\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi petrol IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi diesel(Bosch	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi diesel(Delphi	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi diesel(Delphi	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi petrol IMMO	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi (Bosch	Read key count,Reset PIN code,Program key,Delete all keys,Program engine ECU,Program immo ECU,Program engine VIN

GREAT WALL MOTOR\Hover\H2S\PEPS	Delete/program smart key,All smart key lost,Add smart key,
GREAT WALL MOTOR\Great Wall\C50\2013\Smart key\Switch-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Hover\H6\2013-2018\Smart key\Switch-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Hover\H7\Switch-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Hover\H6\2012\Mechanical key\Remote\Type 2	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\C30EV\Remote(CAN)	Program immo and remote,
GREAT WALL MOTOR\Hover\H2S\Mechanical	Program remote,
GREAT WALL MOTOR\Hover\H5(Ann. edition)\Remote(CAN)	Program remote,
GREAT WALL MOTOR\Hover\H3\Delphi-Remote(CAN)	Program remote,
GREAT WALL MOTOR\Hover\H6(bluesign)\UAES-	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6(bluesign)\Delphi-	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key/bar key\Remote(CAN)	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H2S\Mechanical key\Industrial	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GREAT WALL MOTOR\Hover\H4\Keyless Entry(PEPS)	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,
GREAT WALL MOTOR\Hover\M6\2018\PEPS	Add key,All key lost,
GREAT WALL MOTOR\Great Wall\CHB025A\PEPS	Delete/learn after-sales key,All key lost,
GREAT WALL MOTOR\Great Wall\CHB025A\Mechanical key\Remote(CAN)	Program immo and remote,
GREAT WALL MOTOR\Hover\H6\2018\PEPS	Add key,All key lost,
GREAT WALL MOTOR\Hover\H6 coupe\2017\PEPS	Program key after deleting,All key lost,Add key,
GREAT WALL MOTOR\Hover\M6\2018\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Great Wall\C50\2014-2015\Smart key\Switch-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Great Wall\C50\2014-2015\Smart key\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key
GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key/bar key\IMMO\Delphi	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key/bar key\IMMO\Delphi	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
GREAT WALL MOTOR\Hover\H6\2013-2018\Mechanical key\Remote\Type 1	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6\2013-2018\Mechanical key\Remote\Type 2	Program remote,Unlocking OBC,
CHANGAN AUTO\Benni Mini\Remote	Read remote count,Program remote,
CHANGAN AUTO\New Benni\Remote	Read remote count,Program remote,
CHANGAN AUTO\Alsvin\V3/V5\Integrated BCM(B501)\Type 2	Read remote count,Program remote,
CHANGAN AUTO\Alsvin\V3/V5\Integrated BCM(B501)\Type 1	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Benni\Integrated BCM(A301)	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX20\Integrated BCM(B501)	Read remote count,Program remote,Delete remote,

CHANGAN AUTO\CX30\Integrated BCM(B501)	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Benni\Chongqing integrated IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Reset engine,Program engine,Immobilization,
CHANGAN AUTO\Jiexun\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
CHANGAN AUTO\Raimondi\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
CHANGAN AUTO\CM8\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
CHANGAN AUTO\CV7\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
CHANGAN AUTO\CV9\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
CHANGAN AUTO\AIsvin\V3/V5\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Zhi Xiang\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Honor\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\B301\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX20\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX30\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\AIsvin\V7\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Eado XT\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Raeton\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\CS15\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\CS75\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\AIsvin\V7\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\Raeton\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\CS15\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\CS75\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\AIsvin\V7\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Raeton\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS15\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS35\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS75\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Zhi Xiang\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset
CHANGAN AUTO\Honor\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset
CHANGAN AUTO\CX30\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset
CHANGAN AUTO\Oulove\Remote	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CS35\Delphi BCM\2014-2015	Program key,Program remote,Delete key,Delete remote,

CHANGAN AUTO

CHANGAN AUTO\CS35\Delphi BCM\2016-	Program key,Program remote,Delete key,Delete remote,
CHANGAN AUTO\New Benni EV\Integrated BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CS95\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\C207\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\V301\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Eado EV\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Eado\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\Eado\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\Eado XT\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\CS95\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\C207\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\V301\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\Eado EV\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
CHANGAN AUTO\Eado\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS95\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\C207\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\V301\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Eado EV\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CX70\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Auchan\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Zun Xing\Lianchuang IMMO	Clear fault code,Add key,Delete key,Detect key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine
CHANGAN AUTO\CX70\Remote	Read remote count,Program remote,
CHANGAN AUTO\Auchan\Remote	Delete remote,Program remote,OBC locked,Unlocking OBC,
CHANGAN AUTO\CS35\Delphi BCM\2014	Program key,Delete key,Program remote,Delete remote,
CHANGAN AUTO\Eado\Integrated BCM(C201)	Read remote count,Program remote,Delete remote,Read remote PIN code,
CHANGAN AUTO\CS55\BCM	Read remote count,Program remote,Clear fault code,
CHANGAN AUTO\CS55\Smart key	Read key count,Smart key,Delete smart key,
CHANGAN AUTO\Linmax\Integrated BCM	Read remote count,Program remote,Clear fault code,
CHANGAN AUTO\Linmax\Smart key	Read key count,Program smart key,Clear fault code,
GEELY/ENGLON/MAPLE\GEELY\Vision\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\GEELY\Free Cruiser\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\GEELY\Eagle\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault

GEELY/ENGLON/MAPLE\Gleagle\Panda\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\GX718\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\GX720\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\GX7\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\GC7\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\GX2\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\GX9\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Emgrand \EC7(EC7RS) series \Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Emgrand \EC820\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Emgrand \EC825\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Emgrand \EX8\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Emgrand \FC-2\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Emgrand \GS\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Emgrand \GL\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\MAPLE\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\ENGLON\SC5\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\ENGLON\SC6\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\ENGLON\SC7\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\ENGLON\SX7\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\ENGLON\LG-1(CROSS)\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\GX718\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\Gleagle\GX7\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\Emgrand \EC820\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\Emgrand \EC825\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\ENGLON\SX7\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\Gleagle\GX7\Hai La PEPS(-2015 6-digit PIN)	After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key
GEELY/ENGLON/MAPLE\Gleagle\GX9\Hai La PEPS(-2015 6-digit PIN)	After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key
GEELY/ENGLON/MAPLE\Emgrand \EC825\Hai La PEPS(-2015 6-digit PIN)	After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key
GEELY/ENGLON/MAPLE\Emgrand \EV8\Hai La PEPS(-2015 6-digit PIN)	After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key
GEELY/ENGLON/MAPLE\ENGLON\SX7\Hai La PEPS(-2015 6-digit PIN)	After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key
GEELY/ENGLON/MAPLE\Gleagle\GX7\Hai La PEPS(2015- 32-digit ESK)	Program key,Read key count,
GEELY/ENGLON/MAPLE\Gleagle\GX9\Hai La PEPS(2015- 32-digit ESK)	Program key,Read key count,

GEELY/ENGLON/MAPLE\Emgrand \EC825\Hai La PEPS(2015- 32-digit ESK)	Program key,Read key count,
GEELY/ENGLON/MAPLE\Emgrand \EV8\Hai La PEPS(2015- 32-digit ESK)	Program key,Read key count,
GEELY/ENGLON/MAPLE\Emgrand \GC9\Hai La PEPS(2015- 32-digit ESK)	Program key,Read key count,
GEELY/ENGLON/MAPLE\Emgrand \GL\Hai La PEPS(2015- 32-digit ESK)	Program key,Read key count,
GEELY/ENGLON/MAPLE\Emgrand \GS\Hai La PEPS(2015- 32-digit ESK)	Program key,Read key count,
GEELY/ENGLON/MAPLE\ENGLON\SX7\Hai La PEPS(2015- 32-digit ESK)	Program key,Read key count,
GEELY/ENGLON/MAPLE\Emgrand \EC7(EC7RS) series \Continental PEPS(-	PEPS learning,Read key count,Program key,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS
GEELY/ENGLON/MAPLE\Emgrand \EVI\Continental PEPS(-2015 free PIN)	PEPS learning,Read key count,Program key,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS
GEELY/ENGLON/MAPLE\Emgrand \HEV\Continental PEPS(-2015 free PIN)	PEPS learning,Read key count,Program key,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS
GEELY/ENGLON/MAPLE\Emgrand \EC7(EC7RS) series \Continental	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read
GEELY/ENGLON/MAPLE\Emgrand \EV\Continental PEPS(2015- 32-digit ESK)	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read
GEELY/ENGLON/MAPLE\Emgrand \HEV\Continental PEPS(2015- 32-digit ESK)	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read
GEELY/ENGLON/MAPLE\Emgrand \EC820\LEAR BCM(CANBUS)	Program remote,
GEELY/ENGLON/MAPLE\Emgrand \EC825\LEAR BCM(CANBUS)	Program remote,
GEELY/ENGLON/MAPLE\Emgrand \EC820\UAES BCM(UDS)	Program remote,
GEELY/ENGLON/MAPLE\Emgrand \EC820\Mitsubishi IMMO	Add key,
GEELY/ENGLON/MAPLE\Emgrand \EC825\Mitsubishi IMMO	Add key,
GEELY/ENGLON/MAPLE\Emgrand \GL\Continental BCM	Program remote,
GEELY/ENGLON/MAPLE\Emgrand \GS\Continental BCM	Program remote,
GEELY/ENGLON/MAPLE\Emgrand \X6\UAES BCM	Delete key,Add key,
GEELY/ENGLON/MAPLE\Emgrand \X6\Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY/ENGLON/MAPLE\Emgrand \NL- 3\PEPS	Delete key,Program old key,Program new key,
GEELY/ENGLON/MAPLE\ENGLON\TX4\Inte grated IMMO(with Delphi engine)	Program engine ECU,Reset engine ECU,Reset immo ECU,Program key,ECU immobilization,Program new system,
GEELY/ENGLON/MAPLE\ENGLON\SC3\Inte grated IMMO (with joint electric)	Program engine ECU,Reset engine ECU,Reset immo ECU,Program key,ECU immobilization,Program new system,
GEELY/ENGLON/MAPLE\Gleagle\GX720\Co ntinental BCM	Program remote,
GEELY/ENGLON/MAPLE\GEELY\New Vision\Continental PEPS(2015- 32-digit ESK)	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read
GEELY/ENGLON/MAPLE\ENGLON\Ocean View\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\GX2\IMM O(with joint EMS)	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\Gleagle\Panda\IM MO(with joint EMS)	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\GEELY\New Free Cruiser\IMMO(with joint EMS)	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\ENGLON\New Ocean View\IMMO(with joint EMS)	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE\ENGLON\GX725\I ndustrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault

GEELY/ENGLON/
MAPLE

GEELY/ENGLON/MAPLE/ENGLON\CROSS\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE/ENGLON\CROSS2 / Englon C5\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE/ENGLON\CROSS3 \Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE/ENGLON\GX725\Continental BCM	Program remote,
GEELY/ENGLON/MAPLE/Emgrand \X3\Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY/ENGLON/MAPLE/ENGLON\GX725\Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY/ENGLON/MAPLE/Emgrand \S1\UAES PEPS	Key count,Program key,Delete key,Write ESK code,Erase ESK code,Program ESCL,Reset ESCL,
GEELY/ENGLON/MAPLE/Emgrand \S1\IMMO	Program immo ECU,Reset immo ECU,
GEELY/ENGLON/MAPLE/Emgrand \X1\BCM	Program remote,Remote count,
GEELY/ENGLON/MAPLE/Emgrand \X3\BCM	Program remote,Remote count,
GEELY/ENGLON/MAPLE/Emgrand \X3\PEPS	Program remote,Offline key programming,
GEELY/ENGLON/MAPLE/ENGLON\SC3\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE/ENGLON\SC7\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE/Emgrand \New Emgrand \Continental PEPS(2015- 32-digit	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read
GEELY/ENGLON/MAPLE/Emgrand \New Emgrand \Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE/ENGLON \New ocean view \Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE/ENGLON \SX718 \Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE/ENGLON \SX718 \LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE/ENGLON \SX718 \Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY/ENGLON/MAPLE/ENGLON \SX720 \Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE/ENGLON \SX720 \Continental BCM	Program remote,
GEELY/ENGLON/MAPLE/ENGLON \SX720 \Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY/ENGLON/MAPLE/Gleagle \GX718 \Continental BCM	Program remote,
GEELY/ENGLON/MAPLE/Gleagle \GX718 \Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY/ENGLON/MAPLE/Gleagle \GX725 \Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
GEELY/ENGLON/MAPLE/Gleagle \GX725 \Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY/ENGLON/MAPLE/Gleagle \GX725 \Continental BCM	Program remote,
GEELY/ENGLON/MAPLE/Gleagle \GX9 \Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY/ENGLON/MAPLE/GEELY \New Free Cruiser \Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE/Gleagle \Panda \Read PIN of Shanghai Industrial IMMO	Read PIN code,
GEELY/ENGLON/MAPLE/GEELY \Vision \Read PIN of Shanghai Industrial IMMO	Read PIN code,
GEELY/ENGLON/MAPLE/Gleagle \GC7 \Read PIN of Shanghai Industrial IMMO	Read PIN code,

	GEELY/ENGLON/MAPLE/ENGLON/SC7\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/CROSS\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/CROSS\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/CROSS2 /Englon C5\Read PIN of Shanghai Industrial	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/CROSS3 \Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/SC6\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/Gleagle/GX718\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/Gleagle/GX720\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/Gleagle/GX725\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/Gleagle/GX2\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/Gleagle/GX9\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/Emgrand\EX8\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/MAPLE\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/SC5\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/Emgrand\EC820\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/Emgrand\EC825\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/SX718\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/SX720\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON/SX725\Read PIN of Shanghai Industrial IMMO	Read PIN code,
	GEELY/ENGLON/MAPLE/ENGLON\Cross\Steel mate PEPS(4-digit PIN)	Read program result,Reset PEPS,Reset ignition lock module,Program new system,Replace ignition lock,Program
	GEELY/ENGLON/MAPLE/ENGLON/SC6\Steel mate PEPS(4-digit PIN)	Read program result,Reset PEPS,Reset ignition lock module,Program new system,Replace ignition lock,Program
	GEELY/ENGLON/MAPLE/Emgrand\EC825\Steel mate PEPS(4-digit PIN)	Read program result,Reset PEPS,Reset ignition lock module,Program new system,Replace ignition lock,Program
	GEELY/ENGLON/MAPLE/Emgrand\EC820\Steel mate PEPS(4-digit PIN)	Read program result,Reset PEPS,Reset ignition lock module,Program new system,Replace ignition lock,Program
	GEELY/ENGLON/MAPLE/Gleagle/GC7\Steel mate PEPS(4-digit PIN)	Read program result,Reset PEPS,Reset ignition lock module,Program new system,Replace ignition lock,Program
SAIC MAXUS	SAIC MAXUS\G10\PEPS	Add smart key,Delete smart key,
	SAIC MAXUS\G10\BCM	Delete remote,Add remote,Delete key,Add key,
	SAIC MAXUS\A80\BCM	Add key,Delete remote,Add remote,Delete key,
	SAIC MAXUS\EV80\BCM	Add key,Delete remote,Add remote,Delete key,
	SAIC MAXUS\V80\BCM	Add key,Delete remote,Add remote,Delete key,
HAIMA\IMMO	Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	Lianchuang IMMO(old)	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine
	UAES IMMO(M3)	Replace immo ECU,Program engine,Detect key,Reset engine ECU,Delete key,Add old key,Add new key,Read key count,Clear fault

HAIMA	HAIMA\IMMO\UAES IMMO(M5/M7/S7)	Replace immo ECU,Program engine,Detect key,Reset engine ECU,Delete key,Add old key,Add new key,Read key count,Clear fault
	HAIMA\IMMO\IMMO controller(M6/S5)	Reset ECM,Adjust ECMPIN,Key testing,Lock ECU,Adjust ECMSK2,Make SK2,Write PIN code,Write VIN code,Reset ECU
	HAIMA\PEPS\M8\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\PEPS\S5\FuxinDer PEPS	Reset PEPS,Program PEPS & IMMO,Program PEPS & ESCL,Program PEPS,Program key,
	HAIMA\Remote\M3\TungThih BCM	Program remote,
	HAIMA\Remote\M5\Steel Mate body ECU	Program remote,
	HAIMA\Remote\M3\Kingdom BCM	Program remote,
	HAIMA\IMMO\UAES IMMO(M8/V70)	Clear fault code,Replace immo ECU,Replace engine ECU,Reset engine ECU,Read key status,Add old key,Add new key,Delete key,
	HAIMA\Remote\M6\Kingdom BCM	Program remote,
	HAIMA\Remote\S5\Kingdom BCM	Program remote,
	HAIMA\PEPS\M6\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\PEPS\M5\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\PEPS\M3\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\PEPS\S7\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\PEPS\S5\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\PEPS\V70\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\Remote\V70\Steel Mate body ECU	Program remote,
	HAIMA\PIN code	Industrial traffic PIN code reading,
	HAIMA\IMMO\Lianchuang IMMO(S7)	Add key,Delete key,Program new system,Immo ECU programming,Reading the amount of keys,Engine ECU
	MG	MG\Immobilizer\GT
MG\IMMO\MG3\2011-		Add key,Delete key,Check lock time,
MG\Immobilizer\MG5\2013-		Add key,Delete key,Check lock time,
MG\Immobilizer\MG7\2013-		Add key,Delete key,Check lock time,
MG\Immobilizer\MG6\2012		Delete key,Add key,
MG\Remote\MG7		Enable remote,Disable remote,Program remote,Clear fault code,
MG\Remote\Old MG3		Add remote,Clear remote,Read VIN code,Read immo emergency code,
MG\IMMO\MG3\2011		Add key,Delete key,Check lock time,
MG\Immobilizer\MG5\2012		Add key,Delete key,Check lock time,
MG\Immobilizer\MG6\2013-		Add key,Delete key,The rest unlock time,
MG\Immobilizer\GS\2016 \With smart		Add key,Delete key,
MG\Immobilizer\GS\2016 \Without smart		Add key,Delete key,
MG\Immobilizer\GS\2017\Without smart		Delete key,Add key,Read key count,

MG\Remote\MG TF	Add remote,Clear remote,Read VIN code,Read immo emergency code,
MG\Read PIN code\MG6\2013-	Read PIN code,
MG\Remote\MG7-L	Enable remote,Disable remote,Program remote,Clear fault code,
MG\IMMO\ZS\Without smart	Add key>Delete key,Key number,
MG\IMMO\ZS\With smart	Add smart key,Clear smart key,Key number,
MG\IMMO\MG6\2018-	Add key>Delete key,
FIAT\China\Viaggio\Fobik	Backup immo data,Make dealer key,Program key,Key identification,
FIAT\China\Ottimo\Smart key	Program smart key,Read pin code,
FIAT\China\Viaggio\Smart key	Program smart key,Read pin code,
FIAT\China\Ottimo\Fobik	Backup immo data,Make dealer key,Program key,Key identification,
FIAT\China\Palio\Immobilizer	Backup immo data,Make dealer key,Program key,Program remote,
FIAT\China\Siena\Immobilizer	Backup immo data,Make dealer key,Program key,Program remote,
FIAT\China\Bravo\Immobilizer	Backup immo data,Program key,Make dealer key,Program remote,
FIAT\China\Perla\Immobilizer	Backup immo data,Make dealer key,Program key,Program remote,
FIAT\China\Freemont\Smart key	Read PIN code,Add smart key>Delete smart key,
FIAT\Africa\Siena\2002-2008	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Asia\Fiorino\2008-	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Europe\500\2007-2016(312)	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Europe\Albea\2002-(172)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Europe\Bravo\2007(198)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Europe\Croma\2005-2007(194)	Key info,Program key,
FIAT\Europe\Doblo\2009-(263)	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Europe\Ducato\2006-2012(250)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Europe\Ducato\2012-(250)	Key info,Program key,Read PIN code,Make dealer key,
FIAT\Europe\Fiorino\2008-(225)	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\South America\Punto\2008-2014	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\South America\Stilo\2002-2006	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\South America\Doblo\2000-	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\South America\Fiorino\2014-2015	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\South America\Idea\2004-2012	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\South America\Linea\2004-2012	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\South America\Palio\2000-2003	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make

FIAT

FIAT\South America\Palio\2004-2012	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT>Select from type\Immobilizer\Type 1	Immobilizer,
FIAT>Select from type\Immobilizer\Type 2	Immobilizer,
FIAT>Select from type\Immobilizer\Type 3	Immobilizer,
FIAT>Select from type\Immobilizer\Type 4	Program key,
FIAT>Select from type\Immobilizer\Type 5	Key info,Program key,
FIAT>Select from type\Immobilizer\Type 6	Key count,Immobilizer>Delete key,
FIAT>Select from type\Immobilizer\Type 7	Key count,Immobilizer>Delete key,
FIAT>Select from type\Immobilizer\Type 8	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT>Select from type\Immobilizer\Type 9	Immobilizer>Delete key,
FIAT>Select from type\Immobilizer\Type 10	Program key>Delete key,Obtain immo ID,
FIAT>Select from type\Smart key\Type 1	Add smart key>Delete smart key,Read PIN code,
FIAT>Select from type\Smart key\Type 2	Add smart key>Delete smart key,Read PIN code,
FIAT\Asia\500	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Asia\Linea	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Asia\Punto	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Asia\Punto grande\2006-2011	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Asia\Viaggio\2013-	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Europe\500X\2014-(334)	Add smart key>Delete smart key,Read PIN code,
FIAT\Europe\Freemont\Smart key	Add smart key>Delete smart key,Read PIN code,
FIAT\Europe\Idea\2003-2012(135)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Europe\Linea\2007-(323)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Europe\Palio(178)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Europe\Panda\2005-2011(169)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Europe\Panda\2011-(312)	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Europe\Punto\2000-2006(188)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
FIAT\Europe\Punto\2006-2011(199)	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Europe\Qubo\2008-(300)	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
FIAT\Europe\Scudo\2007(220)\Type 1	Immobilizer,
FIAT\Europe\Scudo\2007(220)\Type 2	Immobilizer,
FIAT\Europe\Scudo\2007(220)\Type 3	Immobilizer,
FIAT\Europe\Scudo\2008-(270)	Program key,

	FIAT\Europe\Sedici\Petrol\2010	Key count,Immobilizer,Delete key,
	FIAT\Europe\Stilo\2000-2006(192)	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
	FIAT\Europe\Ulysee\2002-2010(179)	Program key,
	FIAT\Europe\Viaggio\2012-	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
	FIAT\Middle East\500\2007-	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
	FIAT\Middle East\Doblo\2009	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
	FIAT\South America\500\2010-2012	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
	FIAT\South America\Bravo\2007-	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
	FIAT\South America\Siena\2008-2012	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
	FIAT\South America\Strada\2000-2003	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
	FIAT>Select from type\Immobilizer\Type 11	Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
	FIAT\Europe\Sedici\Diesel\2006-2010	Add new key,Add old key,Delete key,
	FIAT\Europe\Sedici\Diesel\2010-	Program key,
	FIAT\Europe\Phedra\2005-	Program key,
	FIAT\Europe\Ulysse\2002-2005(179)	Program key,
	FIAT\Europe\Ulysse\2005-2010(179)	Program key,
	FIAT\Europe\500L\2012-(199)	Key info,Program key,Read PIN code,Make dealer key,
	FIAT\Europe\Doblo\2005-2009(223)	Program key,Key count,Program remote,Remote count,Read PIN code,Make dealer key,
CHANGHE SUZUKI	CHANGHE SUZUKI\Wagon R\IMMO\TungThih IMMO	Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU
	CHANGHE SUZUKI\Splash\IMMO\TungThih IMMO	Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU
	CHANGHE SUZUKI\Splash\IMMO\TungThih IMMO	Program engine ECU,ECU immobilization,Program key,Reset EMS,
	CHANGHE SUZUKI\Liana\IMMO 1	Program key,Delete key,Register immobiliser,
	CHANGHE SUZUKI\Liana\Keyless access	Learn new PEPS,Learn old PEPS,Key(keyless enter) programming,Key(immobiliser)programming,Learn SLU (steering
	CHANGHE SUZUKI\Liana\TungThih IMMO	Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU
ZHENGZHOU NISSAN	ZHENGZHOU NISSAN\IMMO\Succe 1.5\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	ZHENGZHOU NISSAN\IMMO\Reach\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	ZHENGZHOU NISSAN\IMMO\Odin diesel\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	ZHENGZHOU NISSAN\IMMO\Succe 1.6/2.0\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
	ZHENGZHOU NISSAN\IMMO\NV200\Type 2	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\PEPS\NV200\Smart key(4C)	Program smart key,Delete smart key,Program steering lock,
	ZHENGZHOU NISSAN\PEPS\Dongfeng MX6\Smart key(4C)	Program smart key,Delete smart key,Program steering lock,
	ZHENGZHOU NISSAN\IMMO\Dongfeng MX6	Add key,Activate steering wheel lock,

	ZHENGZHOU NISSAN\IMMO\NV200\Type 1	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\Read PIN code\Succe 1.6\2.0\Read PIN of Lianchuang IMMO	Read PIN code,
	ZHENGZHOU NISSAN\Release directional lock	Release steering lock,
	ZHENGZHOU NISSAN\PEPS\Dongfeng MX5\Smart key	Add smart key,
HAFEI	HAFEI\Saibao\Remote	Program remote,
	HAFEI\Simbo\Remote	Program remote,
	HAFEI\Hafei 8\Mitsubishi IMMO	Add key,
	HAFEI\Simbo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
	HAFEI\Lobo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine
BORGWARD	BORGWARD\IMMO system	Add key,Delete key,Program EMS,Program PEPS,Program TBOX,Program new system,Write ESCL PIN code,
LIFAN	LIFAN\Sedan\520\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine
	LIFAN\Sedan\620\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine
	LIFAN\Sedan\X60\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine
	LIFAN\Minicar\Feng Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine
	LIFAN\Minicar\Xing Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine
	LIFAN\Minicar\Fu Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine
	LIFAN\Sedan\520\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LIFAN\Sedan\620\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LIFAN\Sedan\X60\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LIFAN\Minicar\Feng Shun\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LIFAN\Minicar\Xing Shun\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LIFAN\Minicar\Fu Shun\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault
	LIFAN\Sedan\Marvell\PEPS	Add smart key,Delete smart key,Program ESCL(electronic steering column lock),Delete ESCL(electronic steering column lock),
	LIFAN\Sedan\820\Remote	Program remote,Delete remote,
	LIFAN\Sedan\720\Remote	Program remote,Delete remote,Synchronize remote,Immobilization,Delete immobilizer,Reprogram
	LIFAN\Sedan\820\PEPS	Smart key,Program ESCL,Program engine ECU,Program immo ECU,
	LIFAN\Sedan\620 (2nd gen)\Remote	Program remote,Program immo chip,Program immo ECU,
	LIFAN\Sedan\620EV\Remote	Program remote,Program immo chip,Program immo ECU,
	LIFAN\Sedan\Shiner\Remote	Program remote,Immobilization,
	LIFAN\Sedan\Shiner\IMMO	Immobilizer,Program PEPS,
LIFAN\Sedan\320\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,	
LIFAN\Sedan\530\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,	

	LIFAN\Sedan\630\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
	LIFAN\Sedan\X50\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
	LIFAN\Sedan\620CNG\CJAE IMMO(Delphi)	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine
	LIFAN\Sedan\330\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
	LIFAN\Sedan\Lotto\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
	LIFAN\Sedan\X70\IMMO	Immobilizer,Program ESCL,Program engine ECU,
HIMIKO	HIMIKO\IMMO system	Add key,Delete key,
ZX AUTO	ZX AUTO\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immo
	ZX AUTO\IMMO\Delphi diesel(Bosch 2.8TC) IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN
DONGFENG FENGGUANG	DONGFENG FENGGUANG\370\PEPS	Program smart key,
	DONGFENG FENGGUANG\580\PEPS\Old model	Program smart key,
	DONGFENG FENGGUANG\370\BCM	Read key count,Program key,Key clear,Program remote,
	DONGFENG FENGGUANG\580\BCM	Read key count,Program key,Key clear,Program remote,
FOTON	FOTON \Savanna\Remote\Type 1	Read remote count,Program remote,Clear remote,
	FOTON \Tunland(2015)\Remote	Read remote count,Program remote,Clear remote,
	FOTON \Tunland\Remote	Read remote count,Program remote,Clear remote,
	FOTON\Sauvana\Remote\Type 2	Read remote count,Program remote,Clear remote,
ZD	ZD\ZD2\PEPS system	Program new system,Program PEPS controller,Program key,Delete key,Read key status,Program ESCL,Program EMS,Reset
	BRILLIANCE AUTO\Zhonghua\Greur \Delphi IMMO	Read key count,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program
	BRILLIANCE AUTO\Zhonghua\Junjie\Delphi IMMO	Read key count,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program
	BRILLIANCE AUTO\Zhonghua\Coupe\Delphi IMMO	Read key count,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program
	BRILLIANCE AUTO\Jinbe\Delphi IMMO	Read key count,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program
	BRILLIANCE AUTO\Zhonghua\Greur \Siemens IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\Greur \Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\Junjie\Siemens IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\Junjie\Brilliance	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\Coupe\Siemens IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\Coupe\Brilliance	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\FRV\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\FSV\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\Cross\Brilliance	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\Wagon\Brilliance	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine

BRILLIANCE AUTO	BRILLIANCE AUTO\Zhonghua\H530\Brilliance IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\V5\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\H230\Brilliance IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\H320\Brilliance IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\H330\Brilliance IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\H220\Brilliance IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\V3\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Jinbe\Brilliance IMMO(hiace H2)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine
	BRILLIANCE AUTO\Zhonghua\FSV\PEPS(new)	Clear fault code,Program smart key,Program new system,Reset engine ECU,Reset immo ECU,
	BRILLIANCE AUTO\Zhonghua\H330\PEPS	Clear fault code,Program smart key,Program new system,Reset engine ECU,Reset immo ECU,
	BRILLIANCE AUTO\Zhonghua\H530\PEPS	Program new system,Program smart key,Program new smart key,Program PEPS,Reset PEPS,Program ESCL,
	BRILLIANCE AUTO\Zhonghua\V5\PEPS	Program new system,Program smart key,Program new smart key,Program PEPS,Reset PEPS,Program ESCL,
	BRILLIANCE AUTO\Zhonghua\V3\PEPS	Program key,Program new PEPS,Program new ESCL,Program new EMS,Program new system,Read FOB status,Reset EMS,Reset
	BRILLIANCE AUTO\Huasong\Huasong 7\IMMO	Program key,Delete & add key,Engine programming,
	BRILLIANCE AUTO\Huasong\Huasong 7\Remote	Lost all remote,Add remote,
	BRILLIANCE AUTO\Zhonghua\Zhonghua(old)\Mitsubishi	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\Greur \Mitsubishi IMMO	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\Junjie\Mitsubishi IMMO	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\Coupe\Mitsubishi IMMO	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\FRV\Mitsubishi IMMO	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\FSV\Mitsubishi IMMO	Add key,Reset immo ECU,Clear fault code,
BRILLIANCE AUTO\Zhonghua\H330\Mitsubishi IMMO	Add key,Reset immo ECU,Clear fault code,	
BRILLIANCE AUTO\Zhonghua\H3\PEPS	Program key,Program new PEPS,Program new ESCL,Program new EMS,Program new system,Read FOB status,Reset EMS,Reset	
BRILLIANCE AUTO\Zhonghua\H3\Brilliance IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine	
BRILLIANCE AUTO\Zhonghua\FSV\PEPS(old)	Program smart key,	
CHANGHE AUTO	CHANGHE AUTO\Q25\BCM	Clear fault code,Read key count,Program key,Delete key,Unlock BCM,Replace BCM,Replace EMS,Unlock EMS,Read PIN code,
	CHANGHE AUTO\Q35\BCM	Clear fault code,Read key count,Program key,Delete key,Unlock BCM,Replace BCM,Replace EMS,Unlock EMS,Read PIN code,
HANTENG AUTO	HANTENG AUTO\X7\PEPS	Read key learn status,Program key,Delete key,Reset EMS,Program PEPS,Program ESCL,Program EMS,Program entire new
	ALFA ROMEO \Select from vehicle\IMMO\159\Immobilizer	Key info.,Program key,Backup immo data,Make dealer key(46 chip),
	ALFA ROMEO \Select from vehicle\IMMO\Spider\Immobilizer	Key info.,Program key,Backup immo data,Make dealer key(46 chip),
	ALFA ROMEO \Select from vehicle\IMMO\Brera\Immobilizer	Key info.,Program key,Backup immo data,Make dealer key(46 chip),
	ALFA ROMEO \Select from vehicle\IMMO\147\Immobilizer	Read key count,Program key,Read remote count,Program remote,

ALFA ROMEO	ALFA ROMEO \Select from vehicle\IMMO\GT\Immobilizer	Read key count,Program key,Read remote count,Program remote,
	ALFA ROMEO \Select from vehicle\IMMO\Mito\Immobilizer	Read key count,All key lost,Read PIN code,Make dealer key,
	ALFA ROMEO \Select from type\Type 1	Key info.,Program key,Backup immo data,Make dealer key(46 chip),
	ALFA ROMEO \Select from type\Type 2	Read key count,Program key,Read remote count,Program remote,
	ALFA ROMEO \Select from type\Type 3	Read key count,All key lost,Read PIN code,Make dealer key,
	ALFA ROMEO \Select from type\Type 4	Key count,Immobilizer,Delete key,
	ALFA ROMEO\Select from vehicle\IMMO\Giulietta\2013-\Immobilizer	Read key count,All key lost,Read PIN code,Make dealer key,
	ALFA ROMEO\Select from vehicle\IMMO\Giulietta\2010-	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
	ALFA ROMEO \Select from type\Type 5	Key count,Immobilizer,Delete key,
	ALFA ROMEO \Select from type\Type 6	Immobilizer,Delete key,
	ALFA ROMEO \Select from type\Type 7	Program key,Delete key,Obtain immo ID,
	ALFA ROMEO \Select from type\Type 8	Key info,Program key,
	ALFA ROMEO \Select from type\Type 9	Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
	LANCIA	LANCIA\IMMO\Thesis\02-09\Immobilizer
LANCIA\IMMO\Ypsilon\2003-2006\Immobilizer		Read key count,Program key,
LANCIA\IMMO\Phedra\2005-\Immobilizer		Program key,
LANCIA\IMMO\Phedra\Type 1		Immobilizer,
LANCIA\IMMO\Z\Type 1		Immobilizer,
LANCIA\IMMO\Delta		Key count,Add key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
LANCIA\IMMO\Musa		Key count,Add key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
LANCIA\IMMO\Phedra\Type 2		Immobilizer,
LANCIA\IMMO\Phedra\Type 3		Immobilizer,
LANCIA\IMMO\Z\Type 2		Immobilizer,
LANCIA\IMMO\Z\Type 3		Immobilizer,
LANCIA\IMMO\Ypsilon\2013-\Immobilizer		Key count,Program key,Read PIN code,Make dealer key,Clear fault code,
LANCIA\IMMO\Ypsilon\2007-2012\Immobilizer		Key count,Program key,Remote count,Program remote,Read PIN code,Backup EEPROM,Recover EEPROM,Backup FLASH,Make
MERCURY	MERCURY \Cougar\1999-2002\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Gr.Marqui\03-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Marauder\2003-2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Monterey\2004-2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY \M.Taineer[PCM]\01-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Sable\2000-2003\Immobilizer	Read key count,Program key,Delete key,

MERCURY	MERCURY\Gr.Marqui\2005-2010\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2005-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Montego\2005-2006\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Monterey\2006-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\M.Taineer\2004-2005\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Sable\2004-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2008-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Milan\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\M.Taineer\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Montego\2007-\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Sable\2008-\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Milan\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\M.Taineer\2010-\Immobilizer	Read key count,Program key,Delete key,
VENUCIA	VENUCIA\VENUCIA\BCM	Release steering lock,Read BCM inner code,
	VENUCIA\VENUCIA\Immobilizer\Type 1(KWP)	Add key,
	VENUCIA\VENUCIA\Remote\Type 2(CAN)	Add key,
	VENUCIA\VENUCIA\Smart key	Program smart key,Replace engine ECU,
WEY	WEY\VV5\VV5c\2017\PEPS	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,
	WEY\VV5\VV5s\2017\PEPS	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,
	WEY\VV7\VV7c\2017\Kstar button-type PEPS	Program engine ECU,Program PEPS system,Program ESCL,Program smart key,All key lost,Program PEPS & EMS,T-Box
	WEY\VV7\VV7s\2017\Kstar button-type PEPS	Program engine ECU,Program PEPS system,Program ESCL,Program smart key,All key lost,Program PEPS & EMS,T-Box
	WEY\VV5 series\VV5c\2017-IPEPS	Program key after deleting,All key lost,Add key,
	WEY\VV5 series\VV5s\2017-IPEPS	Program key after deleting,All key lost,Add key,
	WEY\VV7 series\VV7c\2017-IPEPS	Program key after deleting,All key lost,Add key,
	WEY\VV7 series\VV7s\2017-IPEPS	Program key after deleting,All key lost,Add key,
SAAB	SAAB\9-7\2006-2008\Immobilizer	Lost all key,Read key count,
TRAUM	TRAUM\S70\Remote	Remote count,Program remote,Delete remote,
	TRAUM\S70\PEPS	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete
	JAGUAR>Select from vehicle\XF\2012\Smart key	Add smart key,All smart key lost,
	JAGUAR>Select from vehicle\S-Type\Immobilizer	All key lost,
	JAGUAR>Select from vehicle\XF\2012\Smart key	Delete smart key,Add smart key,

JAGUAR	JAGUAR\Select from vehicle\S-Type\Remote	Program remote,Delete remote,
	JAGUAR\Select from vehicle\X-TYPE\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\SOVERIGN\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\XJ6\2003-2007\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\XJ8\2003-2007\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\XJR\2004-\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\XK\2006-2014\Smart remote	Program remote,Remote count,
	JAGUAR\Select from vehicle\XKR\2006-2014\Smart remote	Program remote,Remote count,
	JAGUAR\Select from type\Immobilizer\Type 1	All key lost,
	JAGUAR\Select from type\Smart key\Type 1	Delete smart key,Add smart key,
	JAGUAR\Select from type\Smart key\Type 2	Add smart key,All smart key lost,
	JAGUAR\Select from type\Remote\Type 1	Program remote,Remote count,
	JAGUAR\Select from type\Remote\Type 2	Program remote,Delete remote,
	JAGUAR\Select from vehicle\XF\2013-\Smart key	Add smart key,All smart key lost,
	JAGUAR\Select from vehicle\XJ\Smart key	Add smart key,All smart key lost,
	JAGUAR\Select from vehicle\F-type\Smart key	Add smart key,All smart key lost,
	JAGUAR\Select from type\Smart key\Type 3	Add smart key,All smart key lost,
	JAGUAR\Select from type\Smart key\Type 4	Add smart key,All smart key lost,
	JAGUAR\Select from vehicle\New Jaguar(2015-)\Smart key\Type 1(FK72)	Add smart key,
	JAGUAR\Select from vehicle\New Jaguar(2015-)\Smart key\Type 2(HPLA)	Add smart key,
JAGUAR\Select from vehicle\New Jaguar(2015-)\Smart key\Type 3(write to	Write a workable key,Read key ID,	
SUBARU\Select from type\Smart key\Type C	Add smart key,Delete smart key,Register smart ECM,Register engine EMC,Clear engine fault code,Program steering angle,Read	
SUBARU\Select from type\Smart key\Type D(XV)	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate	
SUBARU\Select from type\Immobilizer\Type 2(XV)	Add key,Delete key,Detect key count,ECM registration,Register engine EMC,Program remote,	
SUBARU\Select from type\Remote\Type 1	Add remote,Clear remote,	
SUBARU\Select from type\Remote\Type 2	Add remote,Type 3(to be deleted),	
SUBARU\Select from type\Immobilizer\Type 6(4D 82G chip)	Check key count,Add key,All key lost,Delete key,Register dashboard ECM,Register engine ECU,Program remote,	
SUBARU\Select from vehicle\Baja\2005-2007	All key lost,Delete key,	
SUBARU\Select from vehicle\Crosstrek\2014-\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECM,Register engine ECU,Program remote,	
SUBARU\Select from vehicle\Crosstrek\2014-\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate	
SUBARU\Select from vehicle\Forester\2013 -\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECM,Register engine ECU,Program remote,	
SUBARU\Select from vehicle\Forester\2013 -\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate	

SUBARU

SUBARU\Select from vehicle\Impreza\Without smart\2012(4D	All key lost,Delete key,
SUBARU\Select from vehicle\Impreza\With smart\2013-	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate
SUBARU\Select from vehicle\Legacy\Without smart\4D 60/62 chip	All key lost,Delete key,
SUBARU\Select from vehicle\Outback\Without smart\2005-2012	All key lost,Delete key,
SUBARU\Select from vehicle\Sti	All key lost,Delete key,
SUBARU\Select from vehicle\Tribeca\Without smart\Type 1	All key lost,Delete key,
SUBARU\Select from vehicle\XV\2013-\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECM,Register engine ECU,Program remote,
SUBARU\Select from vehicle\XV\2013-\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate
SUBARU\Select from vehicle\XV Crosstrek\2013-\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECM,Register engine ECU,Program remote,
SUBARU\Select from vehicle\XV Crosstrek\2013-\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate
SUBARU\Select from vehicle\WRX\2013\Without smart\4D 60/62 chip	All key lost,Delete key,
SUBARU\Select from vehicle\WRX\2014-\Without smart\4D 82G chip	Check key count,Add key,All key lost,Delete key,Register dashboard ECM,Register engine ECU,Program remote,
SUBARU\Select from vehicle\WRX\2014-\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate
SUBARU\Select from type\Immobilizer\Type 1	All key lost,Delete key,
SUBARU\Select from type\Immobilizer\Type 3	Add key,Read PIN code,
SUBARU\Select from type\Immobilizer\Type 4	Key count,Add key,
SUBARU\Select from type\Immobilizer\Type 5	Key count,Add key,Delete key,Add remote,Delete remote,
SUBARU\Select from type\Smart key\Type 3	Key count,Add key,Delete key,Add remote,Delete remote,
SUBARU\Select from type\Smart key\Type 4	Key count,Add key,
SUBARU\Select from type\Remote\Type 3	Add remote,
SUBARU\Select from type\Smart key\Type 5	Add smart key,Delete smart key,
SUBARU\Select from vehicle\B4\2009-	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,
SUBARU\Select from vehicle\Brz\2013-2015\Without smart	Key count,Add key,Delete key,Add remote,Delete remote,
SUBARU\Select from vehicle\Brz\2013-2015\With smart	Add smart key,Delete smart key,
SUBARU\Select from vehicle\Impreza\Without smart\2013-(4D 82G	Check key count,Add key,All key lost,Delete key,Register dashboard ECM,Register engine ECU,Program remote,
SUBARU\Select from vehicle\Impreza\With smart\2012	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,
SUBARU\Select from vehicle\Legacy\With smart	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,
SUBARU\Select from vehicle\Levorg\2015-\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate
SUBARU\Select from vehicle\Outback\Without smart\2013-	Add key,Read PIN code,
SUBARU\Select from vehicle\Tribeca\Without smart\Type 2(North America)	Key count,Add key,Delete key,Add remote,Delete remote,
SUBARU\Select from vehicle\Tribeca\With smart(North America)	Add smart key,Delete smart key,
BESTURN\IMMO\Old besturn(CAN)	Read key count,Add key,All key lost,

BESTURN	BESTURN\IMMO\B30	All key lost,
	BESTURN\PEPS\B70	Program key,Program PEPS,
	BESTURN\PEPS\B90	Program key,Program PEPS,
	BESTURN\PEPS\X80	Program key,Program PEPS,
	BESTURN\Remote\New B70	Program remote,
	BESTURN\Remote\B90	Program remote,
	BESTURN\Remote\X80	Program remote,
	BESTURN\Remote\Oley	Automatic,Manual,
	BESTURN\IMMO\New besturn(B50)- 2015	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\New besturn(B70)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\B70(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\X80(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\B90(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\Oley	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\New besturn(B50)\2015 -	All key lost,
GMC	GMC\Savana\IMMO\2008-2013\Immobilizer	Lost all key,Read key count,
	GMC\Sierra\IMMO\2007-2013\Immobilizer	Lost all key,Read key count,
	GMC\Yukon\IMMO\2007-2013\Immobilizer	Lost all key,Read key count,
	GMC\Acadia\IMMO\2007-2014\Immobilizer	Lost all key,Read key count,
	GMC\Canyon\IMMO\2008-2012\Immobilizer	All key lost,
	GMC\Canyon\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Sierra\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Sierra\IMMO\2015\Smart key	Add smart key,All smart key lost,Read smart key count,
	GMC\Sierra 1500\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Sierra 2500\IMMO\2014-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Sierra 3500\IMMO\2014-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Yukon\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Yukon\IMMO\2015\Smart key	Add smart key,All smart key lost,Read smart key count,
	GMC\Terrain\2010-2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Acadia\Remote\2007-2014	Program remote,Delete remote,
	GMC\Savana\Remote\2008-2013	Program remote,Delete remote,
	GMC\Yukon\Remote\2007-2013	Program remote,Delete remote,

	GMC\Sierra\Remote\2007-2013	Program remote,Delete remote,
	GMC\Yukon\Remote\2015	Add remote,Clear fault code,
	GMC\Sierra 1500\Remote\2014-2015	Add remote,Clear fault code,
	GMC\Sierra 2500\Remote\2014-	Add remote,Clear fault code,
	GMC\Sierra 3500\Remote\2014-	Add remote,Clear fault code,
YOUNG LOTUS	YOUNG LOTUS \IMMO system\Joint electronics IMMO system	Write immo VIN code,Write engine VIN code,Engine ECU detection,Reset engine ECU,Program engine ECU,Program whole
	YOUNG LOTUS \IMMO system\Siemens IMMO system	Immobilization,Program engine,Reset engine,Reset immobiliser,Program key,Delete key,Reset PIN code,Clear fault
	YOUNG LOTUS \IMMO system\Orginal IMMO system	Clear fault code,Program key,Delete key,
PROTON	PROTON\Select from type\Type 2	Program key,Delete key,
	PROTON\Select from type\Type 4	Add key,Delete key,Odometer adjustment,Reset engine,Program,Program immobilizer,
	PROTON\Select from vehicle\Gen-2	Program key,Delete key,
	PROTON\Select from vehicle\Impian	Program key,Delete key,
	PROTON\Select from vehicle\Jump back\Type 2	Program key,Delete key,
	PROTON\Select from type\Type 1	Add key,Reset IMMO ECU,
	PROTON\Select from type\Type 3	Add key,Delete key,Key count,
	PROTON\Select from type\Type 5	Program key,Program remote,
	PROTON\Select from vehicle\Savvy	Add key,Reset IMMO ECU,
	PROTON\Select from vehicle\Jump back\Type 1	Add key,Reset IMMO ECU,
	PROTON\Select from type\Type 6	Add key,Delete key,Program remote,Key count,
	PROTON\Select from type\Type 7	Add one key,Add two keys,Program remote,Key count,
	PROTON\Select from type\Type 8	Add key,Delete key,Program remote,Key count,
SATURN	SATURN\Aura\2006-2009\Immobilizer	Lost all key,Read key count,
	SATURN\Outlook\2006-2008\Immobilizer	Lost all key,Read key count,
	SATURN\Replay\2005-2007\Immobilizer	Lost all key,Read key count,
	SATURN\Sky\2008-2009\Immobilizer	Lost all key,Read key count,
	SATURN\Vue\2008-2009\Immobilizer	Lost all key,Read key count,
	SATURN\Astra\2008-2009\Immobilizer	All key lost,
MASERATI	MASERATI\Smart key(-2016)\Smart key	Add smart key,Delete smart key,
	MASERATI\Flip key\Immobilizer	Program key,Backup immo data,Program remote,Make dealer key,Read PIN code(disable),Program remote(disable),
	MASERATI\Smart key(-2016)\Read PIN code	Read pin code,
	MASERATI\Smart key(2016-)\Smart key	Add smart key,Delete smart key,Backup immo data,Backup data(OBD),
	AUDI \A6L\2009 \Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,

AUDI	AUDI \Q7\2009 \Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
	AUDI\Remote\Central locking(1281)	Add remote>Delete remote,
	AUDI\Remote\Central module(1281)	Add remote>Delete remote,
	AUDI \A6L\2009-\Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
	AUDI \IMMO5\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
	AUDI \Q7\2009-\Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
	AUDI \A3\TT\R8-CDC32XX+24C32\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo data,Restore immo data,Make dealer key>Delete key,Directly add key,Reset
	AUDI\Q3\2013\Immobilizer	Unlock key,Backup EEPROM,Recover EEPROM,Make dealer key,Learn key(OBD),Directly add key>Delete key,Reset
	Audi\A1\Immobilizer	Backup EEPROM,Recover EEPROM,Make dealer key,Key learn(OBD),Directly add key>Delete key,Reset odometer,Odometer
	AUDI\A4L\Immobilizer/ Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
	AUDI\Q3\2017\Immobilizer	Make dealer key,Learn key(OBD),Backup EEPROM,Recover EEPROM>Delete key,Directly add key,Reset dashboard,Odometer
	LINCOLN	LINCOLN\MKS\Smart key
LINCOLN\MKT\Smart key		Erase smart key,Add smart key,Read smart key count,
LINCOLN\MKX\Smart key\2011-2015		Erase smart key,Add smart key,Read smart key count,
LINCOLN\MKX\Smart key\2016-		Add smart key,All smart key lost,
LINCOLN\MKS\Immobilizer		Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Petrol\2007-2010		Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Petrol\2010-2012		Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Hybrid		Program key,All key lost,Key count,
LINCOLN\MKC\Smart key		Add smart key,All smart key lost,
LINCOLN\MKZ\Smart key\2013-2017		Add smart key,All smart key lost,
LINCOLN\Navigator\Immobilizer\2010-2014		Add key,All key lost,
LINCOLN\Town Car\2005-2010\Immobilizer		Program key,
LINCOLN\Continental\Smart key		Add smart key,All smart key lost,
LINCOLN\Navigator\Remote		Remote>Delete remote,
LINCOLN\Aviator\2003-2005\Immobilizer		Program key,All key lost,Key count,
LINCOLN\Blackwood\2002\Immobilizer		Program key,All key lost,Key count,
LINCOLN\Continental\Immobilizer\1998-2002		Program key,All key lost,Key count,
LINCOLN\LS\2000-2006\Immobilizer		Program key,All key lost,Key count,
LINCOLN\Mark LT\2005-2007\Immobilizer		Program remote,All key lost,Key count,
LINCOLN\Mark LT\2008-\Immobilizer		Program key,All key lost,Key count,
LINCOLN\Mark VIII\1997-1998\Immobilizer	Delete key,Key count,	

	LINCOLN\MKZ\Immobilizer\2007-2010	Program key,All key lost,Key count,
	LINCOLN\MKZ\Immobilizer\2010-2013	Program key,All key lost,Key count,
	LINCOLN\MKZ\Immobilizer\2013-	Add key,All key lost,
	LINCOLN\MKZ\Smart key\2011-	Erase smart key,Add smart key,Read smart key count,
	LINCOLN\Navigator\Immobilizer\1997-1998	Delete key,Key count,
	LINCOLN\Navigator\Immobilizer\1999-2002	Program key,All key lost,Key count,
	LINCOLN\Navigator\Immobilizer\2003-2004	Program key,All key lost,Key count,
	LINCOLN\Navigator\Immobilizer\2005-2006	Program remote,All key lost,Key count,
	LINCOLN\Navigator\Immobilizer\2007-2009	Program key,All key lost,Key count,
	LINCOLN\Navigator\Smart key\2015	Erase smart key,Add smart key,Read smart key count,
	LINCOLN\Town Car\1998-2002\Immobilizer	Program key,All key lost,Key count,
	LINCOLN\Town Car\2003-2004\Immobilizer	Program key,All key lost,Key count,
	LINCOLN\Zephyr\2006\Immobilizer	Program key,All key lost,Key count,
	LINCOLN\PCM IMMO\Immobilizer	All key lost,Read key count,
HUMMER	HUMMER\H2\Immobilizer	Lost all key,Read key count,
	HUMMER\H2\Remote\Type 1	Program remote>Delete remote,
	HUMMER\H3\Immobilizer	Lost all key,Read key count,
	HUMMER\H2\Remote\Type 2\2008-2009	Program remote>Delete remote,
	HUMMER\H2\Remote program method\2003-2007	Remote program method,
	HUMMER\H2\Remote program method\2008-2009	Remote program method,
	HUMMER\H3\Remote	Program remote,
	KIA\Select from vehicle\China\Optima(MSC)\2004-	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\China\Sportage(KMC)\2007-	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\China\Sportage(KMC)\2007-	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Picanto(SA)\2006-	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Cerato(LD)\2003-2006\Immobilizer	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Carens(FJ)\2003-2005\Immobilizer	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Carens(FJ)\2006-	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Carens(FJ)\2006-	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Immobilizer\Diesel	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Sportage(KM)\2006-	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Sportage(KM)\2006-	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Sportage(KM)\2006-	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General area\Sportage(KM)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Optima/Magentis(MG)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(BL)\2002-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(BL)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival/Sedona(GQ)\1998-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K3(YDC)\2012-\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K3(YD)\2014-\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens/Rondo(RP)\2014-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(UM)\2015-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Clarus/Forte(TD)\2009-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Sportage(KMC)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Sportage R(SLC)\2010-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\K5(TFC)\2011-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\K5(TFC)\2013-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\K2(QBC)\2011-\Immobilizer\Type 1	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Forte/Forte koup(TD)\2009-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Carens(UN)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Carnival/Sedona(VQ)\2006-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2009-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sorento(XM)\2009-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sorento(XM)\2013-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\K5 HEV\2013-\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Cadenza(VG)\2010-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Cadenza(VG)\2013-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\AMANTI(GH)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Clarus/Forte(TD)\2009-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Soul(AM)\2011-2014\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Forte/Forte koup(TD)\2009-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Sorento(XM)\2009-2012\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2009-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Cadenza(VG)\2010-2012\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\China\K5(TFC)\2011-2012\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,

KIA\Select from vehicle\China\K5 HEV\2013-\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\China\Sportage(KMC)\2013-	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K2(QBC)\2011-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sorento(XM)\2013-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K4(PFC)\2015-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K5(TFC)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K3(YDC)\2012-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K3(YD)\2014-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\KX3(KC)\2015-\Smart key\Type 1	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Carens/Rondo(RP)\2014-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sorento(UM)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Cadenza(VG)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\KX3(KC)\2015-\Smart key\Type 2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\Sportage(KMC)\2007-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Picanto(SA)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Rio(JB)\2005-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens(FJ)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens(UN)\2007-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Optima/Magentis(MG)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2009-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2013-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2013-	Program remote,
KIA\Select from vehicle\China\Sportage R(SLC)\2015-\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Sportage R(SLC)\2015-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\Sportage R(SLC)\2010-2014\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\China\K2(QBC)\2011-\Remote	Program remote,
KIA\Select from vehicle\China\K3(YD)\2014-\Remote	Program remote,
KIA\Select from vehicle\China\K3(YDC)\2012-\Remote\Type 1	Program remote,
KIA\Select from vehicle\China\K5(TFC)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\China\K5(TFC)\2011-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Clarus/Forte(TD)\2009-2013\Remote	Program remote,

KIA\Select from vehicle\General area\Carens(UN)\2007-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Soul(AM)\2011-2014\Remote	Program remote,
KIA\Select from vehicle\China\Optima(MSC)\2004-	Program remote,
KIA\Select from type\Immobilizer\Type 3(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 4(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 5(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 6(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 1(CAN)	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from type\Immobilizer\Type 2(CAN)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Smart key\China\Type 1(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from type\Smart key\China\Type 2(with slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from type\Smart key\China\Type 4(without slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\China\Type 3(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
KIA\Select from type\Smart key\China\Type 5(without slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\China\Type 6(without slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Remote system\16 PIN\Type 1(K)	Program remote,
KIA\Select from type\Remote system\16 PIN\Type 2(CAN)	Program remote,
KIA\Select from type\Remote system\16 PIN\Type 3	Program remote,
KIA\Select from type\Remote system\16 PIN\Type 4	Program remote,
KIA\Select from type\Remote system\16 PIN\Type 5(K)	Program remote,
KIA\Select from vehicle\China\K2(QBC)\2011-\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX5(QLC)\2016-\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX7(QMC)\2017-\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX5(QLC)\2016-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Remote system\10 PIN\Type 1	Program remote,
KIA\Select from type\Remote system\20 PIN\Type 1	Program remote,
KIA\Select from vehicle\China\Optima(MSC)\2004-	Program remote,
KIA\Select from vehicle\China\Sportage(KMC)\2007-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2013-	Program remote,
KIA\Select from vehicle\China\Sportage(KMC)\2013-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2013-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2007-	Program remote,

KIA\Select from vehicle\China\Sportage(KMC)\2007-	Program remote,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Immobilizer\Petrol\	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Immobilizer\Petrol\	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(KM)\2006-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(KM)\2006-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(KM)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Remote	Program remote,
KIA\Select from vehicle\General area\Soul(AM)\2011-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\K4(PFC)\2015-\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K4(PFC)\2015-\Remote	Program remote,
KIA\Select from vehicle\China\K3(YDC)\2012-\Remote\Type 2	Program remote,
KIA\Select from vehicle\USA\Forte/Forte koup(TD)\2009-2013\Remote	Program remote,
KIA\Select from vehicle\China\KX3(KC)\2015-\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX3(KC)\2015-\Remote	Program remote,
KIA\Select from vehicle\China\KX5(QLC)\2016-\Remote	Program remote,
KIA\Select from vehicle\China\KX7(QMC)\2017-\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(SA)\2006-2011\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(SA)\2003-2005\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Picanto(SA)\2003-2005\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(JB)\2005-2011\Remote	Program remote,
KIA\Select from vehicle\General area\Cerato(LD)\2003-2006\Remote	Program remote,
KIA\Select from vehicle\General area\Cerato(LD)\2007-2009\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cerato(LD)\2007-2009\Remote	Program remote,
KIA\Select from vehicle\General area\Carens/Rondo(RP)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Carens(FJ)\2003-2005\Remote	Program remote,
KIA\Select from vehicle\General area\Carens(FJ)\2006-2007\Remote	Program remote,
KIA\Select from vehicle\General area\Carens(UN)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima/Magentic(MG)\2006-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima/Magentic(MG)\2006-	Program remote,
KIA\Select from vehicle\General area\Optima/Magentic(MG)\2006-2010\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Carnival/Sedona(VQ)\2006-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

KIA\Select from vehicle\General area\Carnival/Sedona(VQ)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival/Sedona(VQ)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival/Sedona(VQ)\2006-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Carnival/Sedona(VQ)\2006-	Program remote,
KIA\Select from vehicle\General area\Sorento(BL)\2002-2005\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(BL)\2006-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(BL)\2006-2009\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(XM)\2009-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(XM)\2013-2015\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(UM)\2015-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2009-	Program remote,
KIA\Select from vehicle\General area\Cadenza(VG)\2010-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(VG)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\China\K5(JFC)\2015-2018\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5(JFC)\2015-2018\Remote	Program remote,
KIA\Select from vehicle\China\K5(JFC)\2015-2018\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Remote	Program remote,
KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\Sportage R(SLC)\2015-\Remote	Program remote,
KIA\Select from vehicle\China\Sportage R(SLC)\2010-2014\Remote	Program remote,
KIA\Select from vehicle\China\Forte(TDC)\2009-\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Forte(TDC)\2009-\Remote	Program remote,
KIA\Select from vehicle\China\Forte(TDC)\2009-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\China\Rio(LCC)\2004-2008\Remote	Program remote,
KIA\Select from vehicle\China\Rio(JBC)\2007-2014\Remote	Program remote,
KIA\Select from vehicle\China\Cerato(LDC)\2005-	Program remote,
KIA\Select from vehicle\China\Soul(AMC)\2012-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Soul(AMC)\2012-2015\Remote	Program remote,
KIA\Select from vehicle\China\Soul(AMC)\2012-2015\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\China\Soul(AMC)\2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Soul(AMC)\2010\Remote	Program remote,

KIA

KIA\Select from vehicle\General area\Cadenza(YG)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cadenza(YG)\2017\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(YG)\2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Carnival/Sedona(GQ)\2002-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival/Sedona(GQ)\2002-	Program remote,
KIA\Select from vehicle\General area\Carnival/Sedona(YP)\2015-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival/Sedona(YP)\2015-	Program remote,
KIA\Select from vehicle\General area\Carnival/Sedona(YP)\2015-2016\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Cee'd(ED)\2006-2013\Immobilizer\Type	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Cee'd(ED)\2006-2013\Immobilizer\Type	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cee'd(ED)\2006-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Cee'd(JD)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cee'd(JD)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Cee'd(JD)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Clarus/Forte(YD)\2013-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Clarus/Forte(YD)\2013-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Clarus/Forte(YD)\2013-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\2013-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\2013-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\2013-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\2013-	Program remote,
KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\2004-	Program remote,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2017\Immobilizer\	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2017\Immobilizer\	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2017\Remote	Program remote,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Immobilizer\Type	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Immobilizer\Type	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Remote	Program remote,
KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Immobilizer\Type	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Immobilizer\Type	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Remote	Program remote,
KIA\Select from vehicle\General area\Optima HEV(JF HEV)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Remote	Program remote,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Optima(JF)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Optima(JF)\2016\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(JF)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2014-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2014-2015\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(TF)\2014-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(TF)\2011-2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Optima/Magentis(MS)\2001-	Program remote,
KIA\Select from vehicle\General area\Optima/Magentis(MS)\2003-	Program remote,
KIA\Select from vehicle\General area\Picanto(TA)\2012-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Picanto(TA)\2012-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(TA)\2012-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Pregio(FP)\2006\Immobilizer\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Quoris(KH)\2013-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Shuma/Spectra(SD)\2002\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Shuma/Spectra(SD)\2003-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Shuma/Spectra(SD)\2003-2004\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Immobilizer	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Soul EV(PS EV)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Soul(AM)\2009-2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Soul(AM)\2009-2010\Remote	Program remote,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(QL)\2016-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(QL)\2016-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(QL)\2016-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(QLE)\2016-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(QLE)\2016-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(QLE)\2016-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SL)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SL)\2011-2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Remote	Program remote,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,

KIA\Select from vehicle\USA\AMANTI(GH)\2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\AMANTI(GH)\2009\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Borrego(HM)\2009-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Borrego(HM)\2009-2011\Remote	Program remote,
KIA\Select from vehicle\USA\Borrego(HM)\2009-2011\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Cadenza(VG)\2014-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Cadenza(VG)\2014-	Program remote,
KIA\Select from vehicle\USA\Cadenza(VG)\2014-2016\Smart	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Forte(YD)\2014-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Forte(YD)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\USA\Forte(YD)\2014-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\K900(KH)\2015-2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2014-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Remote	Program remote,
KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2011-2012\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(JF)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(JF)\2016\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(JF)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Optima(JFA)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(JFA)\2016\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(JFA)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2010\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2010\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2010\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2009\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2007-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(MG)\2007-2008\Remote	Program remote,

KIA\Select from vehicle\USA\Optima(MG)\2006\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(MG)\2006\Remote	Program remote,
KIA\Select from vehicle\USA\OPTIMA(MS)\2003-	Program remote,
KIA\Select from vehicle\USA\OPTIMA(MS)\2001-	Program remote,
KIA\Select from vehicle\USA\Optima(TF/QF)\2014-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Optima(TF/QF)\2014-	Program remote,
KIA\Select from vehicle\USA\Optima(TF/QF)\2014-	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Optima(TF/QF)\2011-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Optima(TF/QF)\2011-	Program remote,
KIA\Select from vehicle\USA\Optima(TF/QF)\2011-	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\USA\RIO(BC)\2003-2005\Remote	Program remote,
KIA\Select from vehicle\USA\RIO(JB)\2006-2012\Remote	Program remote,
KIA\Select from vehicle\USA\Rio(UB)\2012-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Rio(UB)\2012-2017\Remote	Program remote,
KIA\Select from vehicle\USA\Rio(UB)\2012-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Rondo(UN)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Rondo(UN)\2007-2010\Remote	Program remote,
KIA\Select from vehicle\USA\Sedona(VQ)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sedona(VQ)\2006\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sedona(YP)\2015-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sedona(YP)\2015-2016\Remote	Program remote,
KIA\Select from vehicle\USA\Sedona(YP)\2015-2016\Smart	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Sorento(BL)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sorento(BL)\2007-2009\Remote	Program remote,
KIA\Select from vehicle\USA\Sorento(BL)\2003-2006\Remote	Program remote,
KIA\Select from vehicle\USA\Sorento(UMA)\2016-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sorento(UMA)\2016-	Program remote,
KIA\Select from vehicle\USA\Sorento(UMA)\2016-2017\Smart	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Sorento(XM)\2014-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sorento(XM)\2014-2015\Remote	Program remote,
KIA\Select from vehicle\USA\Sorento(XM)\2014-2015\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Sorento(XM)\2011-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

KIA\Select from vehicle\USA\Sorento(XM)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\USA\Sorento(XM)\2011-2013\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Soul EV(PS EV)\2015-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\USA\Soul(AM)\2011-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2010\Remote	Program remote,
KIA\Select from vehicle\USA\Soul(PS)\2014-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Soul(PS)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\USA\Soul(PS)\2014-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Spectra(LD)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Spectra(LD)\2007-2009\Remote	Program remote,
KIA\Select from vehicle\USA\Spectra(LD)\2004-2006\Remote	Program remote,
KIA\Select from vehicle\USA\Sportage(KM)\2007-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sportage(KM)\2007-	Program remote,
KIA\Select from vehicle\USA\Sportage(KM)\2005-	Program remote,
KIA\Select from vehicle\USA\Sportage(QL)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sportage(QL)\2017\Remote	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\2014-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sportage(SL)\2014-	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\2014-2016\Smart	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Sportage(SL)\2011-	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sportage(SL)\2011-	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\2011-2013\Smart	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from type\Immobilizer\Type 7(K)	Immobilizer,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 8(CAN)	Immobilizer,neutral mode,
KIA\Select from type\Immobilizer\Type 9(CAN)	Immobilizer,neutral mode,
KIA\Select from type\Smart key\General area\Type 1(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from type\Smart key\General area\Type 2(with slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from type\Smart key\General area\Type 3(without slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\General area\Type 4(without slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,

KIA\Select from type\Smart key\USA\Type 1(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from type\Smart key\USA\Type 2(with slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from type\Smart key\USA\Type 3(without slot CAN)	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\USA\Type 4(without slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from type\Remote system\16 PIN\Type 6(K)	Program remote,
KIA\Select from vehicle\USA\Sportage(QL)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China(Dongfeng Yueda)\KX7(QMC)\2017-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Read PIN code	46 smart card,8A smart card,47 smart card,Read 46 chip PIN,PIN code calculator(-2007),
LEXUS\Select from vehicle\IS300\Smart key	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\GS300\2006-2007\Smart key\Type 1	Smart key registration,Delete smart key,Reset immobox,
LEXUS\All smart key lost\All key lost	Backup EEPROM,Generate SKE,Bind SKE,Add smart key,Delete smart key,Generate LKE,
LEXUS\Select from vehicle\CT200H\2010\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\ES300\2002-2003\Mechanical key	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\ES300\2002-2003\Remote programming method	Remote program method,
LEXUS\Select from vehicle\ES300H\2012-2015\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\ES330\2003-2006\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\GS300\1998-2001\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\GS300\2002-2005\Mechanical key\IMMO	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\GS300\2002-2005\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\GS300\2006-2007\Smart key\Type 2	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\GS350\2006-2008\Smart key\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\GS350\2006-2008\Smart key\Type 2	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\GS350\2009-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\GS430\2001-2005\Mechanical key\IMMO	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\GS430\2001-2005\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\GS430\2005-2006\Smart key	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\GS430\2006-2010\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\GS450H\2007-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\GS450H\2008-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\GS460\2008-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\GX460\2003-2009\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\GX460\2010-2013\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start

LEXUS

LEXUS\Select from vehicle\GX470\2003-2009\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\GX470\2003-2009\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\GX470\2003-2009\Remote programming method	Remote program method,
LEXUS\Select from vehicle\HS250H\2008-2012\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\IS200\Mechanical key\Remote programming method	Remote program method,
LEXUS\Select from vehicle\IS250\2006-2010\Smart key	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\IS250\2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\IS250\2012-2013\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\IS250\2014-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\IS250C\2009-2015\Smart key(CAN)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\IS300\Mechanical key \2000-2005\IMMO	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\IS300\Mechanical key \2000-2005\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\IS350\2006-2013\Smart key	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\IS250\2014-2015\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\LS400\1998-2000\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-2006\Type 1\Mechanical key\IMMO	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\LS430\2001-2006\Type 1\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-2006\Type 1\Mechanical key\Remote	Remote program method,
LEXUS\Select from vehicle\LS430\2001-2006\Type 2\Mechanical key\IMMO	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\LS430\2001-2006\Type 2\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-2006\Type 2\Mechanical key\Remote	Remote program method,
LEXUS\Select from vehicle\LS430\2001-2006\Type 2\Smart key	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\LS460\2007-2012\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\LS460\2013-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\LS460H\2007-2008\Mechanical key\Remote programming	Remote program method,
LEXUS\Select from vehicle\LS460H\2007-2008\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\LS460H\2008-\Mechanical key\Remote programming	Remote program method,
LEXUS\Select from vehicle\LX470\2001-2002\Mechanical key	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\LX470\2003-2007\Mechanical key\IMMO	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\LX470\2003-2007\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\LX470\2003-2007\Mechanical key\Remote programming	Remote program method,
LEXUS\Select from vehicle\LX570\2008-2010\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start

LEXUS\Select from vehicle\RX300\1999-2003\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\RX300\2003-2005\Mechanical key\IMMO	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\RX300\2003-2005\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\RX300\2003-2005\Mechanical key\Remote programming	Remote program method,
LEXUS\Select from vehicle\RX330\2004-2006\Mechanical key\IMMO	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\RX330\2004-2006\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\RX330\2004-2006\Mechanical key\Remote programming	Remote program method,
LEXUS\Select from vehicle\RX350\2007-2009\Mechanical key\IMMO	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\RX350\2007-2009\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\RX350\2007-2009\Mechanical key\Remote programming	Remote program method,
LEXUS\Select from vehicle\RX350\2010-2013\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\RX400H\2005-2009\Mechanical key\IMMO	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\RX400H\2005-2009\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\RX400H\2005-2009\Mechanical key\Remote programming	Remote program method,
LEXUS\Select from vehicle\RX450H\2010-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\RX450H\2012\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from vehicle\SC430\2002-2010\Mechanical key\IMMO	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\SC430\2002-2010\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\SC430\2002-2010\Mechanical key\Remote programming	Remote program method,
LEXUS\Select from type\IMMO\Type 1	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from type\IMMO\Type 2	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from type\Remote	Program remote,Delete remote,
LEXUS\Select from type\PEPS\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
LEXUS\Select from type\PEPS\Type 2	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\IS250C\2009-2015\Smart key(KWP)	Add smart key,Delete smart key,Reset smart key,
LEXUS\Select from vehicle\ES240\Smart key	Add smart key,Delete smart key,
LEXUS\Select from vehicle\CT200H\2012-\Smart key	Add smart key,Delete smart key,
LEXUS\Select from vehicle\ES250\2012-\Smart key	Add smart key,Delete smart key,
LEXUS\Select from vehicle\ES350\Smart key	Add smart key,Delete smart key,
LEXUS\Select from vehicle\RX270\Smart key	Add smart key,Delete smart key,
LEXUS\Select from vehicle\ES200\Smart key	Add smart key,Delete smart key,
HAWTAI\Select from type\Remote\16 PIN\Type 1(K)	Program remote,

HAWTAI	HAWTAI\Select from vehicle\Sisha Fe(domestic)\IMMO 1	Add key,Delete key,Detect key,Write VIN code,Read PIN code,
	HAWTAI\Select from vehicle\Sisha Fe(imported)\IMMO 1	Add key,Delete key,Detect key,Write VIN code,Read PIN code,
	HAWTAI\Select from type\IMMO\IMMO 1	Add key,Delete key,Detect key,Write VIN code,Read PIN code,
	HAWTAI\Select from type\IMMO\IMMO 2	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from vehicle\Sisha Fe(domestic)\IMMO 2	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from vehicle\Sisha Fe(imported)\IMMO 2	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from vehicle\Sisha Fe(imported)\IMMO 3	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from type\IMMO\IMMO 3	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from type\IMMO\IMMO 4	ECM neutral mode,Read key count,Program key,
	HAWTAI\Select from vehicle\Sisha Fe(imported)\IMMO 4	ECM neutral mode,Read key count,Program key,
	HAWTAI\Select from type\Remote\16 PIN\Type 2	Program remote,
	HAWTAI\Select from type\Remote\10 PIN	Program remote,
	HAWTAI\Select from vehicle\B21(E70)\Remote\16 PIN	Program remote,
	HAWTAI\Select from vehicle\B11\Remote\16 PIN	Program remote,
	HAWTAI\Select from vehicle\B35(Boliger)\Remote\16 PIN	Program remote,
	HAWTAI\Select from vehicle\Santafe(import)\Remote\10 PIN	Program remote,
	HAWTAI\Select from vehicle\Santafe(domestic)\Remote\10 PIN	Program remote,
	HAWTAI\Select from vehicle\Terracan\Remote\10 PIN	Program remote,
	VW\Touareg\2003-2007\Immobilizer	Read PIN code,Learn key,
	VW\Phaeton\2008-\Immobilizer	Read PIN code,Learn key,Read PIN code,
VW\IMMO2 & IMMO3 \Immobilizer	Immob box,Dashboard,Dashboard(CAN),Immobilizer(CAN),10 Jetta,	
VW\Remote\Polo/Jetta (2015)\Remote	Program remote,	
VW\Remote \Program remote	Add remote,Delete remote,	
VW\Touareg\2008-2011\Immobilizer	Read PIN code,Learn key,Read PIN code,	
VW\Phaeton\2003-2007\Immobilizer	Read PIN code,Learn key,	
VW\Remote \ Central door lock(1281)	Add remote,Delete remote,	
VW\Remote \Central module(1281)	Add remote,Delete remote,	
VW\IMMO3.5\Immobilizer	Immobiliser,Dashboard,	
VW\IMMO3.5\Remote	Add remote,Delete remote,	
VW\IMMO2 & IMMO3\Read PIN code\Read PIN manually	Dashboard,IMMO,Engine,Touareg 3.0 diesel,	
VW\IMMO3.5\Read PIN code	Dashboard,IMMO,Engine,Touareg 3.0 diesel,	
VW\IMMO2 & IMMO3\Read PIN code\Read PIN automatically	Read PIN code,	

VW	VW\IMMO4>Select IMMO manually\NEC 24C32\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag
	VW\IMMO4>Select IMMO manually\NEC 95320\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag
	VW\IMMO4>Select IMMO manually\NEC 24C64(2013)\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag
	VW\IMMO5\Immobilizer/ Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
	VW\IMMO4>Select IMMO manually\NEC 24C64\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag
	VW\IMMO4>Select IMMO manually\NEC+24C64 color	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key>Delete key,Directly add key,Learn key,Unlock key,Clear airbag
	VW\IMMO4>Select IMMO manually\9S12XHZ512\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag
	VW\IMMO4>Select IMMO manually\CDC+24C32\Immobilizer	Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Backup EEPROM,Recover EEPROM,Unlock key,Clear airbag
	VW\IMMO4\Auto identify IMMO	Identify immo4 type,
	VW\IMMO4>Select IMMO manually\NEC+24C64 color	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag
	VW\IMMO4>Select IMMO manually\NEC35XX\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,
	VW\IMMO4>Select IMMO manually\NEC95320(Bora Jetta)\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo data,Restore immo data,Make dealer key,Make OEM key,Key learn(OBD),Directly
	VW\IMMO4>Select IMMO manually\Magotan/CC\Immobilizer	Make dealer key,Learn key,Unlock 46 chip key,
	VW\IMMO4>Select IMMO manually\NEC24C64(2014-)\Immobilizer	Make dealer key,Learn key(OBD),Backup EEPROM,Recover EEPROM>Delete key,Directly add key,Reset dashboard,Odometer
	VW\IMMO4>Select IMMO manually\MQB-35XX(Mainland/VDO)\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo data,Recover immo data,Make dealer key,Program key(OBD),Delete key,Recover
PORSCHE	PORSCHE\Cayenne\2010\Immobilizer	Program key,
	PORSCHE\Cayenne\2010\Read PIN code	Engine,
	PORSCHE\Cayenne\Cayenne 2010\Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan\Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan S\Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan Turbo\Smart key	Program smart key,Make dealer key,
	PORSCHE\Cayenne\Cayenne GTS 2010\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 911\Carrera S\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 911\Carrera Targa 4\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 911\Turbo\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 718\Cayman\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 718\Boxster\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 718\Boxster S\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera 4\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera S\Smart key	Program smart key,Make dealer key,
	PORSCHE\Cayman\2005-2011\Immobilizer	Immobilizer,Program key(without PIN),

	PORSCHE\Boxter\2005-2011\Immobilizer	Immobilizer,Program key(without PIN),	
	PORSCHE\997\2005-2010\Immobilizer	Immobilizer,Program key(without PIN),	
	PORSCHE\911\2005-2010\Immobilizer	Immobilizer,Program key(without PIN),	
SKODA	SKODA\IMMO2 & IMMO3\Immobilizer	Immob box,Dashboard,Dashboard(CAN),Immobilizer(CAN),10 Jetta,	
	SKODA\Remote\Polo (2015)\Remote	Program remote,	
	SKODA\Remote\Remote	Add remote>Delete remote,	
	SKODA\Remote\Central door lock (1281)	Add remote>Delete remote,	
	SKODA\Remote\Central module (1281)	Add remote>Delete remote,	
	SKODA\IMMO 3.5\Immobilizer	Immobiliser,Dashboard,	
	SKODA\IMMO 3.5\Remote	Add remote>Delete remote,	
	SKODA\IMMO3.5\Read PIN code	Dashboard,IMMO,Engine,Touareg 3.0 diesel,	
	SKODA\IMMO2 & IMMO3\Read PIN code	Dashboard,IMMO,Engine,Touareg 3.0 diesel,	
	SKODA\IMMO4\Select IMMO manually\NEC 24C32\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag	
	SKODA\IMMO4\Select IMMO manually\NEC 95320\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag	
	SKODA\IMMO4\Select IMMO manually\NEC 24C64(2013)\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag	
	SKODA\IMMO 5\Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,	
	SKODA\IMMO4\Select IMMO manually\NEC 24C64\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag	
	SKODA\IMMO4\Select IMMO manually\NEC+24C64 color	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key>Delete key,Directly add key,Learn key,Unlock key,Clear airbag	
	SKODA\IMMO4\Select IMMO manually\9S12XHZ512\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag	
	SKODA\IMMO4\Select IMMO manually\CDC+24C32\Immobilizer	Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Backup EEPROM,Recover EEPROM,Unlock key,Clear airbag	
	SKODA\IMMO4\Auto identify IMMO	Identify immo4 type,	
	SKODA\IMMO4\Select IMMO manually\NEC+24C64 color	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag	
	SKODA\IMMO4\Select IMMO manually\NEC35XX\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,	
	SKODA\IMMO4\Select IMMO manually\NEC95320(Bora Jetta)\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo data,Restore immo data,Make dealer key,Make OEM key,Key learn(OBD),Directly	
	SKODA\IMMO4\Select IMMO manually\Magotan/CC\Immobilizer	Make dealer key,Learn key,Unlock 46 chip key,	
	SKODA\IMMO4\Select IMMO manually\NEC24C64(2014-)\Immobilizer	Make dealer key,Learn key(OBD),Backup EEPROM,Recover EEPROM>Delete key,Directly add key,Reset dashboard,Odometer	
	SKODA\IMMO4\Select IMMO manually\MQB-35XX(Mainland/VDO)\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo data,Recover immo data,Make dealer key,Program key(OBD),Add key>Delete	
		OPEL\IMMO\Select from type\Type 3	Program key>Delete key,
		OPEL\Remote system\Astra-H	Delete remote,Program remote,
	OPEL\Remote system\Zafira-B	Delete remote,Program remote,	
	OPEL\Remote system\Vectra-C/Signum	Delete remote,Program remote,	
	OPEL\Read PIN code	Read pin code type2(via BCM),Read pin code type4,Read pin code type5,Read pin code type6,Read pin code type7,Read pin code	

OPEL\IMMO>Select from type\Type 1\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Insignia\2009-2016\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from type\Type 1\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Insignia\2009-2016\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from type\Type 2	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Agila	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Astra\Astra-G	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Calibra	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Combo\1998-	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Corsa\Corsa-B	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Corsa\Corsa-C	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Meriva\Meriva	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Movano\1998-2001	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Omega-B\Immobilizer\Type 1(KWP)	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Sintra	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Tigra-B	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Vectra-B	Read PIN code,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Astra\Astra-H\Immobilizer	Program key,Delete key,Read PIN code,Read PIN code(type 6),
OPEL\IMMO>Select from type\Type 4	Read key count,Program key,
OPEL\IMMO>Select from vehicle\Agila B\2009	Read key count,Program key,
OPEL\IMMO>Select from type\Type 5	Read key count,Program key,
OPEL\IMMO>Select from vehicle\Agila B\2009-	Read key count,Program key,
OPEL\Remote system\Corsa\Corsa-D	Delete remote,Program remote,
OPEL\IMMO>Select from vehicle\Astra\Astra-H\Smart key\Program key	Immobilizer,Delete key,Key count,
OPEL\IMMO>Select from vehicle\Astra\Astra-H\Smart key\All key lost	All key lost,
OPEL\IMMO>Select from vehicle\Astra\Astra\2007\Smart key	Learn smart key,Delete all smart keys,
OPEL\Remote system\Astra\07	Program remote,Delete remote,
OPEL\Remote system\Antara	Program remote,Delete remote,
OPEL\IMMO>Select from vehicle\Antara\2010-2013\Flip key	All key lost,
OPEL\IMMO>Select from vehicle\Omega-B\Immobilizer\Type 2(CAN)	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Omega-B\Smart key	Add smart key,All smart key lost,Read smart key count,
OPEL\IMMO>Select from type\Type 6	All key lost,

OPEL

OPEL\IMMO>Select from vehicle\Astra\Astra-J\2010-2016\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Astra\Astra-J\2010-2016\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Zafira\Zafira-C\2012-2016\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Zafira\Zafira-C\2012-2016\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Meriva\Meriva-B\Immobilizer	Add key,Delete key,Read PIN code,
OPEL\IMMO>Select from vehicle\Corsa\Corsa-D\Immobilizer	Add key,Delete key,Read PIN code,
OPEL\IMMO>Select from vehicle\Mokka\2012-2018\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Mokka\2012-2018\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\Remote system\Meriva	Program remote,Delete remote,
OPEL\IMMO>Select from vehicle\Signum\2003-2007	Program key,Delete key,Read PIN code(ECU),Read PIN code(Info Display),
Opel\IMMO>Select from vehicle\Vivaro\2014-\System 1	Read PIN code,Program key,Recover backup data,
OPEL\IMMO>Select from vehicle\Antara\2006-2009\Bar key	All key lost,
OPEL\IMMO>Select from vehicle\Vectra-C\2002-2008	Delete key,Program key,
OPEL\IMMO>Select from vehicle\GT	All key lost,
OPEL\IMMO>Select from vehicle\Zafira\Zafira-A\1995-2006\Immobilizer	Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Astra\Astra-K\Immobilizer	All key lost,Add key,Read key count,Clear fault code,Read PIN code,
OPEL\IMMO>Select from vehicle\Astra\Astra-K\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,Read PIN code,
OPEL\IMMO>Select from vehicle\Corsa\Corsa-E\Immobilizer	All key lost,Add key,Read key count,Clear fault code,Read PIN code,
OPEL\IMMO>Select from vehicle\Corsa\Corsa-E\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,Read PIN code,
OPEL\IMMO>Select from vehicle\Movano\2005-2010\Immobilizer	Add key,
OPEL\IMMO>Select from vehicle\Movano\2010-\Smart key	All smart key lost,
OPEL\IMMO>Select from vehicle\Vivaro\2002-2014\Immobilizer	Add key,
OPEL\Remote system\Combo\2011	Program remote,Delete remote,
OPEL\Remote system\Corsa\Corsa-C	Program remote,Delete remote,
OPEL\IMMO>Select from vehicle\Combo\2012\Immobilizer	All key lost,Add key,Read key count,Clear fault code,Read PIN code,
OPEL\IMMO>Select from vehicle\Combo\2012\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,Read PIN code,
OPEL\IMMO>Select from vehicle\Astra\Astra-F\1995-2004\Immobilizer	Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
OPEL\IMMO>Select from vehicle\Astra\Astra\1995-2004\Immobilizer	Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine
Opel\IMMO>Select from vehicle\Vivaro\2014-\System 2	Program key,
OPEL\IMMO>Select from vehicle\Zafira\Zafira-B	Read PIN code(ECU),Read PIN code(Info Display),Program key,Delete key,
TOYOTA>Select from type\All smart key lost\All key lost	Backup EEPROM,Generate SKE,Bind SKE,Add smart key,Delete smart key,Generate LKE,
TOYOTA>Select from type\PEPS\Type 2(Crown XII)	Program remote,Add smart key,Reset immo ECU,

TOYOTA\Select from type\PEPS\Type 3	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from type\IMMO\Type 2("4D"67or 68)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from type\IMMO\Type 1("4C")	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from type\IMMO\Type 3("4D"72"G")	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from type\Remote\Type 1	Program remote,Delete remote,
TOYOTA\Select from type\Remote\Type 2	Program remote,Delete remote,
TOYOTA\Select from type\PEPS\Type 1	Add smart key,Delete smart key,Reset smart key,
TOYOTA\Select from type\Remote\Type 3	Program remote,
TOYOTA\Select from vehicle\China\Camry\2000-2004\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Reiz\Mechanical key(4D 67 68)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Crown\2009\Mechanical key(4D 67 68)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Prado\2010-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Crown\2009-\Mechanical key	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Rav4\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Reiz\Mechanical key(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Corolla\2012-\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Crown\2009\Mechanical key(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Crown\2009\Mechanical key(with H 8A 8E)	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Reiz\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Camry\2004-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Reiz\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Vios\Mechanical key	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Corolla\2012-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Remote program method,
TOYOTA\Select from vehicle\China\Avanza\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Vios\Mechanical key(4D 67 68)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Yaris\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Levin\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),

TOYOTA\Select from vehicle\China\Prado\2009-\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from type\IMMO\Type 4("8AE""H")	IMMO reset(8A all key lost),Add key,Delete key,Program immo ECU,Program engine ECU,
TOYOTA\Select from type\IMMO\Type 5(Avanza)	Add key,
TOYOTA\Select from type\IMMO\Type 6	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Corolla EX\Immobilizer\Mechanical key(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from type\IMMO\Type 7(Toyota 86)	Read key count,Add key,Program remote,Delete remote,Delete key,
TOYOTA\Select from type\IMMO\Type 8(Avanza)	G Immobilizer reset(All key lost),DOT Immobilizer reset(All key lost),
TOYOTA\Select from vehicle\China\Avanza\All key lost	G Immobilizer reset(All key lost),DOT Immobilizer reset(All key lost),
TOYOTA\Select from vehicle\China\Corolla EX\Immobilizer\Mechanical key(with H 8A 8E)	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Corolla EX\Smart key\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Corolla EX\Smart key\Type 2	Program remote,Add smart key,Reset immo ECU,
TOYOTA\Select from vehicle\USA\4Runner\1999-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\4Runner\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\4Runner\2003-2009\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\4Runner\2009-	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\4Runner\2009-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\4Runner\2009-	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\4Runner\2009-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\4Runner\2009-2018\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\86\2016-2017\Smart key\Type 1	Add smart key,Delete smart key,Synch ID authentication box with steering lock,Start remote control engine,
TOYOTA\Select from vehicle\USA\86\2016-2017\Smart key\Type 2	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Allion\2006-2011(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Alphard\2006-2011(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Altis\2003-2006\Immobilizer(4C)	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Altis\2011\Immobilizer(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Altis\2011\Immobilizer(with H 8A)	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Aurion\2006-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Aurion\2006-	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Aurion\2006-2008\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Aurion\2009\Immobilizer(4C)	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Aurion\2009\Immobilizer(with G)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Aurion\2009\Immobilizer(with H)	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),

TOYOTA\Select from vehicle\USA\Aurion\2009\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Aurion\2010-2011\Immobilizer	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Aurion\2010-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Auris\2007-2008\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Auris\2007-2008\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Auris\2009-2012\Immobilizer(4D	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Auris\2009-	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Auris\2009-	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Auris\2009-2012\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Avalon\1998-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Avalon\2005-2012\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Avalon\2005-2012\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Avalon\2005-2012\Smart key	Add smart key,Delete smart key,Reset smart key,
TOYOTA\Select from vehicle\USA\Avalon\2013-2018\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Avalon HV\2013-2017\Smart key	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Avanza\2012-2015(Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Avensis\1997-2008\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Avensis\2009-2011\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Avensis\2009-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Avensis\2009-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Avensis\2012-\Immobilizer(with	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Avensis\2012-\Immobilizer(with	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Axio\2003\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Aygo\2005-2014\Immobilizer(4D	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Aygo\2005-	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Aygo\2005-	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Camry\1998-2003\Immobilizer	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Camry\1998-2003\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2004\Immobilizer(4C)	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Camry\2004\Immobilizer(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Program remote,Delete remote,

TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Camry\2012-2018\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Camry\2012-2018\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2012-2018\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Camry\2012-2018\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2012-2018\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Camry\2012-2018\Smart	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Celsior\2000-2006(Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Corolla\2001-2006\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Corolla\2001-2006\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2001-2006\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Corolla\2001-2006\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2007-2008\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Corolla\2009\Immobilizer(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Corolla\2009\Immobilizer(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Corolla\2009\Immobilizer(with H	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Corolla\2009\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Program remote,Delete remote,

TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-2014\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Corolla\2015-2018\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Corolla\2015-2018\Smart	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Crown\2003-\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Crown\2003-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Crown\2003-\Smart key\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Crown\2003-\Smart key\Type 2	Program remote,Add smart key,Reset immo ECU,
TOYOTA\Select from vehicle\USA\Echo\2003-2005\Immobilizer(4C)	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Estima\2006-2011(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\FJ Cruiser\2008-2009\Immobilizer(4D)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\FJ Cruiser\2010-2014\Type 1(4D 67)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\FJ Cruiser\2010-2014\Type 2(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\FJ Cruiser\2010-2014\Type 2(with G 72)\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\FJ Cruiser\2010-2014\Type 3(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\FJ Cruiser\2010-2014\Type 3(with H 8A	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Fieler\2006-2011(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Fortuner\2005-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Fortuner\2005-\Immobilizer(with	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Hiace-2005\Remote program method	Remote program method,
TOYOTA\Select from vehicle\USA\Hiace\2005-\Immobilizer(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Hiace\2005-\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Hiace\2005-\Immobilizer(with H	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Highlander\2001-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Highlander\2001-2003\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\2004-	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Highlander\2004-2007\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Highlander\2004-2007\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\2004-2007\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start

TOYOTA\Select from vehicle\USA\Highlander\2008-	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Highlander\2008-2010\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Highlander\2011-	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Highlander\2011-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Highlander\2011-	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\2011-	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Highlander HV\2008-2017(Smart key)\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Highlander HV\2008-2017(Smart key)\Type 2	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Hilux\2004-2007\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Hilux\2008-\Immobilizer(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Hilux\2008-\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Hilux\2008-\Immobilizer(with H	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\IQ\2008-2011\Mechanical key(with G 72)\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2008-2011\Mechanical key(with G 72)\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\IQ\2008-2011\Mechanical key(with G 72)\Immobilizer	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\IQ\2008-2011\Mechanical key(with H 8A 8E)\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2008-2011\Mechanical key(with H 8A 8E)\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\IQ\2008-2011\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\IQ\2012-2014\Mechanical key(with G 72)\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2012-2014\Mechanical key(with G 72)\Immobilizer	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\IQ\2012-2014\Mechanical key(with H 8A 8E)\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2012-2014\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Innova\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Innova\2010\Immobilizer(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Innova\2010\Immobilizer(with H	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Kluger\2003-2005\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Kluger\2006-2008\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Kluger\2006-2008\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Kluger\2009-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Kluger\2009-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Kluger\2009-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Kluger\2012-\Immobilizer(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),

TOYOTA\Select from vehicle\USA\Kluger\2012-\Immobilizer (with H	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Land Cruiser\1998-2002\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Land Cruiser\1998-2002\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser\2002-2009\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Land Cruiser\2002-2009\Mechanical key\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser\2002-2009\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Land Cruiser\2009-\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Land Cruiser\2009-\Mechanical key(4D)\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser\2009-\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Land Cruiser\2009-\Mechanical key(with G	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser\2009-\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Land Cruiser\2009-\Mechanical key(with H 8A	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser\2009-\Smart key\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Land Cruiser\2009-\Smart key\Type 2	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Land Cruiser 70\2002-\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Land Cruiser 70\2002-\Mechanical key(with G	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser 70\2002-\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Land Cruiser 70\2002-\Mechanical key(with H 8A	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser 100\1999-(Mechanical key)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Land Cruiser 200\2002-(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Land Cruiser Prado\2004-2009(Immobilizer)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Land Cruiser Prado\2009-2013(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\MR2 Spyder\2000-2005(Immobilizer)	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Mark x\2004\Remote program method	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2005-2006\Mechanical key\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Mark x\2005-2006\Mechanical key\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2005-2006\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Mark x\2007-2010\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Mark x\2007-2010\Remote program method	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2010-2014\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Mark x\2010-2014\Mechanical key(with G	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Mark x\2010-2014\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),

TOYOTA\Select from vehicle\USA\Mark x\2010-2014\Mechanical key(with H 8A	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2005-2009\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Matrix\2010-2014\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Matrix\2010-2014\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2010-2014\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Matrix\2010-2014\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2016-2017\Smart key	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Mitri\2016(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Mr2\1999-(Mechanical key)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\New Verso EZ\2009-2010\Immobilizer (4D 67 68)	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\New Verso EZ\2010-\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\New Verso EZ\2010-\Mechanical key(with G 72)\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\New Verso EZ\2010-\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\New Verso EZ\2010-\Mechanical key(with H 8A	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prado\2002-2008\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Prado\2002-2008\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\Prado\2009\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Prado\2009\Mechanical key(with	Remote program method,
TOYOTA\Select from vehicle\USA\Prado\2009\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Prado\2009\Mechanical key(with	Remote program method,
TOYOTA\Select from vehicle\USA\Prado 150\2009(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Premio\2006\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Premio\2006\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Premio\2007-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Previa\2001-\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Previa\2001-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Prius\2003\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Prius\2004-2009\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Prius\2004-2009\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius\2004-2009\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Prius\2004-2009\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Prius\2010-\Smart key(type 1)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start

TOYOTA

TOYOTA\Select from vehicle\USA\Prius\2010-\Smart key(type 2)	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Prius C\2012-2018\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Prius C\2012-2018\Mechanical key(with G	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius C\2012-2018\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Prius C\2012-2018\Mechanical key(with H 8A	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius C\2012-2018\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Prius PHV\2010-2017(Smart key)	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Prius Prime\2017(Smart key)	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Prius V\2012-2017(Smart key)	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Rav4\2001-2005\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Rav4\2001-2005\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Rav4\2006-2008\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Rav4\2006-2008\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Rav4\2006-2008\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Smart key\Type	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Rav4\2009-2017\Smart key\Type	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Rav4 EV\2012-2014(Smart key)	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Rav4 HV\2016-2017(Smart key)	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Rumion\2006-2011(Smart key)	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Sequoia\2000-2006\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Sequoia\2000-2006\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Sequoia\2007-2011\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Sequoia\2007-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Sequoia\2007-2011\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Sequoia\2007-2011\Mechanical	Program remote,Delete remote,

TOYOTA\Select from vehicle\USA\Sequoia\2007-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Sequoia\2007-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sequoia\2007-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Sequoia\2007-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2009\Mechanical key(4C)\Immobilizer	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Sienna\2009\Mechanical key(4D 67 68)\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Sienna\2009\Mechanical key(4D 67 68)\Remote	Remote program method,
TOYOTA\Select from vehicle\USA\Sienna\2010-2011\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Sienna\2010-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Sienna\2010-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2010-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Sienna\2010-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Sienna\2010-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2010-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Sienna\2010-2011\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Sienna\2012-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Sienna\2012-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2012-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Sienna\2012-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2012-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Solara\1999-2003\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Solara\1999-2003\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Solara\1999-2003\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Solara\1999-2003\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Solara\2004-2006\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Tacoma\2004-2015\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Tacoma\2004-2015\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tacoma\2004-2015\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Tacoma\2004-2015\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Tacoma\2004-2015\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tacoma\2004-2015\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Tacoma\2004-2015\Mechanical	Program remote,Delete remote,

TOYOTA\Select from vehicle\USA\Tacoma\2016-2017\Smart key	Add smart key,Delete smart key,Reset immo box,Reset PEPS & program key,
TOYOTA\Select from vehicle\USA\Tarago\2002-2008\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Tarago\2009-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Tarago\2009-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Tundra\2000-2006\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Tundra\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Tundra\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Tundra\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Urban Cruiser\2009(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Vanguard\2009(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Vela-2010(Mechanical key)	Remote program method,
TOYOTA\Select from vehicle\USA\Venza\2008-\Mechanical key(4D	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Venza\2008-\Mechanical key(4D	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Venza\2008-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Venza\2008-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Verso-2011(Mechanical key)	Remote program method,
TOYOTA\Select from vehicle\USA\Vigo\2005-2008\Immobilizer	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Vigo\2010\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Vigo\2010\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Vios-2008(Mechanical key)	Remote program method,
TOYOTA\Select from vehicle\USA\Vios\2008-(Mechanical key)	Remote program method,
TOYOTA\Select from vehicle\USA\Voxy\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Yaris-2000	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2001-2005\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Yaris\2001-2005\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2001-2005\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,

TOYOTA\Select from vehicle\USA\Yaris\2006-2008\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Yaris\2006-2008\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2006-2008\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-2011\Mechanical	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2012\Mechanical key(4D	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\USA\Yaris\2012\Mechanical key(4D	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2012\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Yaris\2012\Mechanical key(with	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2012\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\USA\Yaris\2012\Mechanical key(with	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2014\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\USA\Yaris\2014\Mechanical key(with	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\86\2016(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Alphard\2005\Mechanical key	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Alphard\2005\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Alphard\2005-Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Alphard\2005-Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Alphard\2005-Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Alphard\2005-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Corolla\2012-Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Corolla\2012-Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Corolla\2007-2011\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Corolla\2001-2006\Immobilizer	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Corolla\2001-2006\Remote	Remote program method,

TOYOTA\Select from vehicle\China\EZ\2012\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\EZ\2012-Mechanical key(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\EZ\2012-Mechanical key(with H 8A 8E)	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\FJ Cruiser\2010\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\FJ Cruiser\2010\Mechanical key(4D 67 68)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\FJ Cruiser\2010\Mechanical key(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\FJ Cruiser\2010\Mechanical key(with H 8A 8E)	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\FJ Cruiser\2010-Mechanical key(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\FJ Cruiser\2010-Mechanical key(with H 8A 8E)	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Fortuner\2005-Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Fortuner\2005-Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Fortuner/Hilux Sw4\	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Fortuner/Hilux Sw4\	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Fortuner/Hilux Sw4\	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Fortuner/Hilux Sw4\2009-	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Fortuner/Hilux Sw4\2009-	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Fortuner/Hilux Sw4\2015-	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Fortuner/Hilux Sw4\2015-	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Fortuner/Hilux Sw4\2015-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Hiace\2005\Remote program method	Remote program method,
TOYOTA\Select from vehicle\China\Hiace\2006-2015\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Hiace\2006-2015\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Hiace\2006-2015\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Hiace\2015-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Hiace\2015-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Hiace\2015-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Highlander\2001-	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Highlander\2004-\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Highlander\2004-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Highlander\2004-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Highlander\2004-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Hilux\Mechanical key(4D 67 68)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,

TOYOTA>Select from vehicle\China\Hilux\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA>Select from vehicle\China\Hilux\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Mechanical key(4C)\Remote	Remote program method,
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Mechanical key(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Mechanical key(4D 67	Remote program method,
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Mechanical key(with G	Remote program method,
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Mechanical key(with H 8A	Remote program method,
TOYOTA>Select from vehicle\China\Land Cruiser\2002-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA>Select from vehicle\China\Land Cruiser 70\2002-\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA>Select from vehicle\China\Land Cruiser 70\2002-\Mechanical key(with G	Remote program method,
TOYOTA>Select from vehicle\China\Land Cruiser 70\2002-\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA>Select from vehicle\China\Land Cruiser 70\2002-\Mechanical key(with H 8A	Remote program method,
TOYOTA>Select from vehicle\China\Land Cruiser 100\1999-2002(Mechanical key)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA>Select from vehicle\China\Land Cruiser 100\2002-(Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA>Select from vehicle\China\Land Cruiser 100\2002-(Mechanical key)\Remote	Remote program method,
TOYOTA>Select from vehicle\China\Land Cruiser 200\2002-(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA>Select from vehicle\China\Land Cruiser Prado\2004-2009(Mechanical key)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA>Select from vehicle\China\Land Cruiser Prado\2009-2013(Smart key)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA>Select from vehicle\China\Levin\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA>Select from vehicle\China\Levin\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA>Select from vehicle\China\Previa\2001-\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA>Select from vehicle\China\Previa\2001-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA>Select from vehicle\China\Previa HV\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA>Select from vehicle\China\Prius\Tarago\Mechanical key	Add master key,Add valet key,Delete key,
TOYOTA>Select from vehicle\China\Prius\Tarago\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA>Select from vehicle\China\Prius\Tarago\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA>Select from vehicle\China\Prius\Tarago\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA>Select from vehicle\China\Prius\Tarago\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA>Select from vehicle\China\Prius\Mechanical key(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,

TOYOTA\Select from vehicle\China\Prius\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Prius\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Prius\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Prius+/Prius V\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Prius C\Mechanical key(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Prius C\Mechanical key(with H 8A 8E)	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Prius C\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Prius C2\2012-2013\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Prius C2\2012-2013\Mechanical key(with G	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Prius C2\2012-2013\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Prius C2\2012-2013\Mechanical key(with H 8A	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Prius PHV\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Rav4\Mechanical key	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Rav4\Mechanical key(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Rav4\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Rav4\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Rav4 HV\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Sequoia\2000-2007\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Sequoia\2000-2007\Mechanical	Remote program method,
TOYOTA\Select from vehicle\China\Sequoia\2007-\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Sequoia\2007-\Mechanical	Remote program method,
TOYOTA\Select from vehicle\China\Sequoia\2007-\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Sequoia\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sequoia\2007-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Sequoia\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sequoia\2007-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Sequoia\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sienna\Mechanical key	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Sienna\Mechanical key(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Sienna\Mechanical key(4D 67	Remote program method,
TOYOTA\Select from vehicle\China\Sienna\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Sienna\Mechanical key(with G	Remote program method,

TOYOTA\Select from vehicle\China\Sienna\Mechanical key(with H	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Sienna\Mechanical key(with H	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sienna\Mechanical key(with H	Remote program method,
TOYOTA\Select from vehicle\China\Sienna\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Tundra\2000-2006\Remote	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007-\Mechanical	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Tundra\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Tundra\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Tundra\2007-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Mechanical key(4D 67	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Venza\Mechanical key(4D 67	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Venza\Mechanical key(with G	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Mechanical key(with H	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Venza\Mechanical key(with H	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Yaris\2008-\Mechanical key(4D	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
TOYOTA\Select from vehicle\China\Yaris\2008-\Mechanical key(4D	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2008-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Yaris\2008-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2008-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Yaris\2008-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2013-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Yaris\2013-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2013-\Mechanical	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Yaris\2013-\Mechanical	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Zelas\Mechanical key(with G	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\Select from vehicle\China\Zelas\Mechanical key(with H	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
TOYOTA\Select from vehicle\China\Zelas\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
TOYOTA\Select from vehicle\China\Vios\Mechanical key(with G 72)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),

	TOYOTA\Select from vehicle\China\Vios\Mechanical key(with H 8A	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
	TOYOTA\Select from vehicle\China\Vios\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
	TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Program remote,Delete remote,
	TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Remote program method,
	TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Program remote,Delete remote,
	TOYOTA\Select from vehicle\China\Camry\2004-\Mechanical	Remote program method,
	TOYOTA\Select from vehicle\China\Crown\2009\Smart key	Add smart key,Delete smart key,Reset smart key,
	TOYOTA\Select from vehicle\China\Crown\2009-\Smart key(type 1)	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
	TOYOTA\Select from vehicle\China\Crown\2009-\Smart key(type 2)	Program remote,Add smart key,Reset immo ECU,
	TOYOTA\Select from vehicle\China\Crown\2009-\Remote	Program remote,Delete remote,
BMW	BMW\Select from type\CAS1\CAS2\CAS3	Program/delete key,Synch ELV,Synch DEM,Update CAS3,Backup & recover,Clear fault code,Clear SHADOW,Force to recover CAS,Make
	BMW\Select from type\CAS4\CAS4+	Make ignition key,Disable key,Enable key,
	BMW\Select from type\FEM/BDC	Preprocess FEM/BDC system,Make dealer key,Delete key,Identify vehicle frequency,Switch ignition on,Reset FEM/BDC mileage,Read
	CHRYSLER\Select from type\Immobilizer\Type 1(CAN)	Add new key,Add old key,Add remote,Detect key count,Delete key,
	CHRYSLER\Select from type\Immobilizer\Type 2(CAN)	Read PIN code,Add new key,Delete key,Key count,Add old key,
	CHRYSLER\Select from type\Immobilizer\Type 3(CAN)	Read pin code,Add key,Delete key,Key count,
	CHRYSLER\Select from type\Immobilizer\Type 4(CAN)	Read pin code,Add key,Delete key,Key count,
	CHRYSLER\Select from type\Smart key\Type 1(CAN)	Add smart key,Delete smart key,Read PIN code,
	CHRYSLER\Select from type\Remote\Type 4(CAN)	Add remote,Read pin code,
	CHRYSLER\Select from type\Remote\Type 3(VPW)	Add remote,
	CHRYSLER\Select from type\Remote\Type 2(VPW)	Add remote,
	CHRYSLER\Select from type\Smart key\Type 2(CAN)	Add smart key,Delete smart key,Key count,Read PIN code,
	CHRYSLER\Select from type\Immobilizer\Type 6(VPW)	Add key,Delete key,Key count,
	CHRYSLER\Select from type\IMMO-Fobik	Read PIN code,Synch smart key,Add key,Delete key,
	CHRYSLER\Select from vehicle\Asia\300\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
	CHRYSLER\Select from vehicle\Asia\Freemont\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
	CHRYSLER\Select from vehicle\Asia\300M\1999-2000\Remote	Add remote,
	CHRYSLER\Select from vehicle\Asia\Concorde\1998-2004\Remote	Add remote,
	CHRYSLER\Select from vehicle\Asia\LHS\1999-2001\Remote	Add remote,
	CHRYSLER\Select from vehicle\Asia\PT Cruiser\2001-2005\Remote	Add remote,
	CHRYSLER\Select from vehicle\Asia\Sebring\2001-2006\Remote	Add remote,
	CHRYSLER\Select from vehicle\Asia\Town and Country\2001-2003\Remote	Add remote,

CHRYSLER\Select from type\Remote\Type 1(VPW)	Add remote,
CHRYSLER\Select from type\Remote\Type 5	Add remote,
CHRYSLER\Select from type\Remote\Type 6(VPW)	Add remote,
CHRYSLER\Select from type\Remote\Type 7(VPW)	Add remote,
CHRYSLER\Select from type\Remote\Type 8(VPW)	Add remote,
CHRYSLER\Select from vehicle\Asia\200\2015-\Smart key	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from type\Immobilizer\Type 7(VPW)	Add key,Delete key,
CHRYSLER\Select from type\Smart key\Type 3(CAN)	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from type\Smart key\Type 4(CAN)	Sync smart function,
CHRYSLER\Select from type\Smart key\Type 5(CAN)	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\USA\200\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\USA\200\2015-\Smart key	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\USA\300\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\USA\300\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\USA\300C\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300C\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300C\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\USA\300C\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\USA\300M\1999-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300M\1999-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\300M\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300M\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\Concorde\1998-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Concorde\1998-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\Concorde\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Concorde\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\LHS\1999-2001\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\LHS\1999-2001\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\Neon\2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Neon\2001-2005\Immobilizer	Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\USA\Neon\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\Pacifica\2004-2008\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\USA\PT Cruiser\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\PT Cruiser\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\PT Cruiser\2006-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\USA\Sebring\2001-2006\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Sebring\2001-2006\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\Sebring\2007-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\USA\Town and Country\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Town and Country\2001-2003\Remote	Add remote,
CHRYSLER\Select from vehicle\USA\Town and Country\2004-2007\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\USA\Town and Country\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Town and Country\2011-2016\FOBK	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Town and Country\2011-2016\Keyless-go(sync	Sync smart function,
CHRYSLER\Select from vehicle\USA\Town Country\2008\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\USA\Voyager\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Voyager\2004-2005\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\300\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Asia\300C\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300C\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300C\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Asia\300C\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300M\1999-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300M\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300M\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\Asia\Concorde\1998-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Concorde\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Concorde\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\Asia\LHS\1999-2001\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Neon\2000\Immobilizer	Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\Asia\Neon\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Neon\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Asia\Pacifica\2004-2008\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\PT Cruiser\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\PT Cruiser\2006-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Asia\Sebring\2001-2006\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Sebring\2007-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Asia\Town and Country\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Town and Country\2004-2007\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Town and Country\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Town and Country\2011-2016\FOBK	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Town and Country\2011-2016\Keyless-go(sync	Sync smart function,
CHRYSLER\Select from vehicle\Asia\Voyager\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Voyager\2004-2005\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Grand Voyager\2004-2007\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Grand Voyager\2004-2007\Remote	Add remote,
CHRYSLER\Select from vehicle\Asia\Grand Voyager\2008-\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Grand Voyager\2008-\Keyless-go(sync smart	Sync smart function,
CHRYSLER\Select from vehicle\Europe\200\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Europe\200\2015-\Smart key	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Europe\300\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Europe\300\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300C\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300C\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300C\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Europe\300C\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300M\1999-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300M\1999-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\Europe\300M\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300M\2001-2004\Remote	Add remote,

CHRYSLER\Select from vehicle\Europe\Concorde\1998-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Concorde\1998-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\Europe\Concorde\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Concorde\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\Europe\LHS\1999-2001\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\LHS\1999-2001\Remote	Add remote,
CHRYSLER\Select from vehicle\Europe\Neon\2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Neon\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Neon\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Europe\Pacifica\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\PT Cruiser\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\PT Cruiser\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Europe\PT Cruiser\2006-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Europe\Sebring\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Sebring\2001-2006\Remote	Add remote,
CHRYSLER\Select from vehicle\Europe\Sebring\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Europe\Town and Country\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Town and Country\2001-2003\Remote	Add remote,
CHRYSLER\Select from vehicle\Europe\Town and Country\2004-2007\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Town and Country\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Town and Country\2011-2016\FOB	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Town and Country\2011-2016\Keyless-go(sync	Sync smart function,
CHRYSLER\Select from vehicle\Europe\Voyager\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Voyager\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Grand Cherokee\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Grand Cherokee\2001-	Add remote,
CHRYSLER\Select from vehicle\Europe\Grand Voyager\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Grand Voyager\2004-	Add remote,
CHRYSLER\Select from vehicle\Europe\Grand Voyager\2008-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Grand Voyager\2008-	Sync smart function,
CHRYSLER\Select from vehicle\Europe\Voyager\2001-2003\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\200\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,

CHRYSLER\Select from vehicle\South America\200\2015-\Smart key	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\South America\300\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\300\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\300\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\South America\300\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\South America\300C\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\300C\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\300C\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\South America\300C\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\South America\300M\1999-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\300M\1999-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\300M\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\300M\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\Concorde\1998-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Concorde\1998-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\Concorde\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Concorde\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\LHS\1999-2001\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\LHS\1999-2001\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\Neon\2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Neon\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Neon\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\Pacifica\2004-2008\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\South America\PT Cruiser\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\PT Cruiser\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\PT Cruiser\2006-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\South America\Sebring\2001-2006\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Sebring\2001-2006\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\Sebring\2007-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\South America\Town and Country\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Town and Country\2001-	Add remote,
CHRYSLER\Select from vehicle\South America\Town and Country\2004-	Add key,Delete key,

CHRYSLER

CHRYSLER\Select from vehicle\South America\Town and Country\2008-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Town and Country\2011-2016\FOBK	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Town and Country\2011-	Sync smart function,
CHRYSLER\Select from vehicle\South America\Voyager\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Voyager\2004-2005\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\South America\Grand Voyager\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\South America\Grand Voyager\2004-2007\Remote	Add remote,
CHRYSLER\Select from vehicle\South America\Grand Voyager\2008-\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\Grand Voyager\2008-\Keyless-	Sync smart function,
CHRYSLER\Select from vehicle\Middle East\200\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Middle East\200\2015-\Smart key	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Middle East\300\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\300\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\300\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Middle East\300\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Middle East\300C\2005-2006\Immobilizer	Add new key,Add old key,Add remote,Delete key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Middle East\300C\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\300C\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\300C\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Middle East\300C\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Middle East\300M\1999-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\300M\1999-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\300M\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\300M\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\Concorde\1998-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Concorde\1998-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\Concorde\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Concorde\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\LHS\1999-2001\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\LHS\1999-2001\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\Neon\2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Neon\2001-2005\Immobilizer	Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\Middle East\Neon\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\Pacifica\2004-2008\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Middle East\PT Cruiser\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\PT Cruiser\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\PT Cruiser\2006-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Middle East\Sebring\2001-2006\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Sebring\2001-2006\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\Sebring\2007-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Middle East\Town and Country\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Town and Country\2001-2003\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\Town and Country\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Middle East\Town and Country\2008-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Town and Country\2011-2016\FOBK	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Town and Country\2011-2016\Keyless-	Sync smart function,
CHRYSLER\Select from vehicle\Middle East\Voyager\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Voyager\2004-2005\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Middle East\Grand Voyager\2004-2007\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Middle East\Grand Voyager\2004-2007\Remote	Add remote,
CHRYSLER\Select from vehicle\Middle East\Grand Voyager\2008-\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Grand Voyager\2008-\Keyless-go(sync	Sync smart function,
CHRYSLER\Select from vehicle\Australia\200\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Australia\200\2015-\Smart key	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Australia\300\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Australia\300\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300C\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300C\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300C\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Australia\300C\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300M\1999-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300M\1999-2000\Remote	Add remote,

CHRYSLER\Select from vehicle\Australia\300M\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300M\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\Australia\Concorde\1998-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Concorde\1998-	Add remote,
CHRYSLER\Select from vehicle\Australia\Concorde\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Concorde\2001-	Add remote,
CHRYSLER\Select from vehicle\Australia\LHS\1999-2001\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\LHS\1999-2001\Remote	Add remote,
CHRYSLER\Select from vehicle\Australia\Neon\2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Neon\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Neon\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Australia\Pacifica\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\PT Cruiser\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\PT Cruiser\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Australia\PT Cruiser\2006-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Australia\Sebring\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Sebring\2001-2006\Remote	Add remote,
CHRYSLER\Select from vehicle\Australia\Sebring\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Australia\Town and Country\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Town and Country\2001-	Add remote,
CHRYSLER\Select from vehicle\Australia\Town and Country\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\Town and Country\2008-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Town and Country\2011-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Town and Country\2011-	Sync smart function,
CHRYSLER\Select from vehicle\Australia\Voyager\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Voyager\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\Grand Voyager\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\Grand Voyager\2004-	Add remote,
CHRYSLER\Select from vehicle\Australia\Grand Voyager\2008-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Grand Voyager\2008-	Sync smart function,
CHRYSLER\Select from vehicle\Africa\200\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Africa\200\2015-Smart key	Read PIN code,Add smart key,Delete smart key,

CHRYSLER\Select from vehicle\Africa\300\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Africa\300\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300C\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300C\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300C\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Africa\300C\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300M\1999-2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300M\1999-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\300M\2001-2004\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300M\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\Concorde\1998-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Concorde\1998-2000\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\Concorde\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Concorde\2001-2004\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\LHS\1999-2001\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\LHS\1999-2001\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\Neon\2000\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Neon\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Neon\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\Pacifica\2004-2008\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\PT Cruiser\2001-2005\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\PT Cruiser\2001-2005\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\PT Cruiser\2006-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Africa\Sebring\2001-2006\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Sebring\2001-2006\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\Sebring\2007-2010\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
CHRYSLER\Select from vehicle\Africa\Town and Country\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Town and Country\2001-2003\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\Town and Country\2004-2007\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\Town and Country\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\Africa\Town and Country\2011-2016\FOB	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Town and Country\2011-2016\Keyless-go(sync	Sync smart function,
CHRYSLER\Select from vehicle\Africa\Voyager\2001-2003\Immobilizer	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Voyager\2004-2005\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\Grand Voyager\2004-2007\Immobilizer	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\Grand Voyager\2004-2007\Remote	Add remote,
CHRYSLER\Select from vehicle\Africa\Grand Voyager\2008-Immobilizer	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Grand Voyager\2008-\Keyless-go(sync smart	Sync smart function,
CHRYSLER\Select from vehicle\USA\Fremont\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\USA\300\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\USA\300C\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300C\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300C\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Middle East\300\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Middle East\300C\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300C\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\South America\300\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\South America\300C\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300C\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from type\Immobilizer\Type 9(CAN)	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\USA\Cirrus\2007-Immobilizer	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\USA\Neon\2005-Immobilizer	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\Asia\Cirrus\2007-Immobilizer	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\Asia\Neon\2005-Immobilizer	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\Europe\Cirrus\2007-Immobilizer	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\Europe\Neon\2005-Immobilizer	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\South America\Cirrus\2007-Immobilizer	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\South America\Neon\2005-Immobilizer	Key count,Program key,Delete key,Program remote,

	CHRYSLER\Select from vehicle\Australia\Cirrus\2007-\Immobilizer	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Australia\Neon\2005-\Immobilizer	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Middle East\Cirrus\2007-\Immobilizer	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Middle East\Neon\2005-\Immobilizer	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Africa\Cirrus\2007-\Immobilizer	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Africa\Neon\2005-\Immobilizer	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Asia\200\2011-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
	CHRYSLER\Select from type\Smart key\Type 6(CAN)	Read PIN code,Add key,Delete key,
	CHRYSLER\Select from type\Smart key\Type 7(CAN)	Read PIN code,Add smart key,Delete smart key,
	CHRYSLER\Select from type\Smart key\Type 8(CAN)\Keyless-go	Read pin code,Add key,Delete key,
	CHRYSLER\Select from type\Smart key\Type 8(CAN)\Mechanical key	Read pin code,Add key,Delete key,
FERRARI	FERRARI\458\Immobilizer	Backup immo data,Make dealer key,Read PIN code(disable),Program key,Program remote(disable),Program
	FERRARI\F12\Immobilizer	Backup immo data,Make dealer key,Read PIN code(disable),Program key,Program remote(disable),Program
	FERRARI\F149\Immobilizer	Backup immo data,Make dealer key,Read PIN code(disable),Program key,Program remote(disable),Program
	JEEP\Select from vehicle\USA\Cherokee\2014-\Keyless-go	Read pin code,Add key,Delete key,
	JEEP\Select from vehicle\USA\Cherokee\2014-\Mechanical key	Read pin code,Add key,Delete key,
	JEEP\Select from vehicle\USA\Grand Cherokee\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
	JEEP\Select from vehicle\USA\Compass\2007-2017\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
	JEEP\Select from vehicle\USA\Renegade\2014-\Smart key	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\Asia\Grand Cherokee\2011-2013\FOBK	Read PIN code,Synch smart key,Add key,Delete key,
	JEEP\Select from type\IMMO-Fobik	Read PIN code,Synch smart key,Add key,Delete key,
	JEEP\Select from type\Smart key\Type 1 (CAN)	Add smart key,Delete smart key,Read PIN code,
	JEEP\Select from type\Smart key\Type 2 (CAN)	Add smart key,Delete smart key,Key count,Read PIN code,
	JEEP\Select from type\Immobilizer\Type 1 (CAN)	Add new key,Add old key,Add remote,Detect key count,Delete key,
	JEEP\Select from type\Immobilizer\Type 2 (CAN)	Read PIN code,Add new key,Delete key,Key count,Add old key,
	JEEP\Select from type\Immobilizer\Type 3 (CAN)	Read pin code,Add key,Delete key,Key count,
	JEEP\Select from type\Immobilizer\Type 4 (CAN)	Read pin code,Add key,Delete key,Key count,
	JEEP\Select from type\Immobilizer\Type 6 (VPW)	Add key,Delete key,Key count,
	JEEP\Select from type\Remote\Type 1 (VPW)	Add remote,
	JEEP\Select from type\Remote\Type 2 (VPW)	Add remote,
	JEEP\Select from type\Remote\Type 3 (VPW)	Add remote,
	JEEP\Select from type\Remote\Type 4 (CAN)	Add remote,Read pin code,

JEEP\Select from type\Remote\Type 5	Add remote,
JEEP\Select from type\Remote\Type 6(VPW)	Add remote,
JEEP\Select from type\Remote\Type 7(VPW)	Add remote,
JEEP\Select from type\Remote\Type 8(VPW)	Add remote,
JEEP\Select from vehicle\Asia\Wrangler\2007-2017\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\USA\Commander\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Commander\2009-	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Grand Cherokee\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Grand Cherokee\1999-2004\Remote	Add remote,
JEEP\Select from vehicle\USA\Grand Cherokee\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Grand Cherokee\2011-2013\FOBK	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Laredo\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Laredo\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Liberty\2002-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Liberty\2002-2004\Remote	Add remote,
JEEP\Select from vehicle\USA\Liberty\2005-2007\Immobilizer	Add key,Delete key,
JEEP\Select from vehicle\USA\Liberty\2008-2013\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\USA\Patriot\2007-2015\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\USA\Rubicon\2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\USA\Wrangler\2001-2006\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\USA\Wrangler\2007-2017\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from type\Smart key\Type 3(CAN)	Add smart key,Delete smart key,Read PIN code,
JEEP\Select from type\Smart key\Type 4(CAN)	Sync smart function,
JEEP\Select from type\Smart key\Type 5(CAN)	Add smart key,Delete smart key,Read PIN code,
JEEP\Select from type\Immobilizer\Type 7(VPW)	Add key,Delete key,
JEEP\Select from vehicle\Asia\Commander\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Asia\Commander\2009-	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Asia\Grand Cherokee\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Asia\Grand Cherokee\1999-2004\Remote	Add remote,
JEEP\Select from vehicle\Asia\Grand Cherokee\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Asia\Laredo\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Asia\Laredo\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,

JEEP\Select from vehicle\Asia\Liberty\2002-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Asia\Liberty\2002-2004\Remote	Add remote,
JEEP\Select from vehicle\Asia\Liberty\2005-2007\Immobilizer	Add key,Delete key,
JEEP\Select from vehicle\Asia\Liberty\2008-2013\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Asia\Patriot\2007-2015\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Asia\Rubicon\2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Asia\Wrangler\2001-2006\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Asia\Cherokee\2014-\Keyless-go	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Asia\Cherokee\2014-\Mechanical key	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Asia\Grand Cherokee\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP\Select from vehicle\Asia\Compass\2007-2017\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Asia\Renegade\2014-\Smart key	Read PIN code,Add key,Delete key,
JEEP\Select from vehicle\Europe\Commander\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Commander\2009-	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Grand Cherokee\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Grand Cherokee\1999-2004\Remote	Add remote,
JEEP\Select from vehicle\Europe\Grand Cherokee\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Grand Cherokee\2011-2013\FOBK	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Laredo\1999-	Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Laredo\2008-	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Liberty\2002-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Liberty\2002-2004\Remote	Add remote,
JEEP\Select from vehicle\Europe\Liberty\2005-2007\Immobilizer	Add key,Delete key,
JEEP\Select from vehicle\Europe\Liberty\2008-2013\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Europe\Patriot\2007-2015\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Europe\Rubicon\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Europe\Wrangler\2001-	Add key,Delete key,Key count,
JEEP\Select from vehicle\Europe\Wrangler\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Europe\Cherokee\2014-\Keyless-go	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Europe\Cherokee\2014-\Mechanical	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Europe\Grand Cherokee\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP\Select from vehicle\Europe\Compass\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,

JEEP

JEEP\Select from vehicle\Europe\Renegade\2014-\Smart key	Read PIN code,Add key,Delete key,
JEEP\Select from vehicle\South America\Commander\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Commander\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Grand Cherokee\1999-	Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Grand Cherokee\1999-2004\Remote	Add remote,
JEEP\Select from vehicle\South America\Grand Cherokee\2008-	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Grand Cherokee\2011-2013\FOBK	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Laredo\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Laredo\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Liberty\2002-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Liberty\2002-2004\Remote	Add remote,
JEEP\Select from vehicle\South America\Liberty\2005-2007\Immobilizer	Add key,Delete key,
JEEP\Select from vehicle\South America\Liberty\2008-2013\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\South America\Patriot\2007-2015\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\South America\Rubicon\2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\South America\Wrangler\2001-2006\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Wrangler\2007-2017\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\South America\Cherokee\2014-\Keyless-go	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\South America\Cherokee\2014-\Mechanical key	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\South America\Grand Cherokee\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP\Select from vehicle\South America\Compass\2007-2017\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\South America\Renegade\2014-\Smart key	Read PIN code,Add key,Delete key,
JEEP\Select from vehicle\Australia\Commander\2008\Immobiliz	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Commander\2009-	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Grand Cherokee\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Grand Cherokee\1999-2004\Remote	Add remote,
JEEP\Select from vehicle\Australia\Grand Cherokee\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Grand Cherokee\2011-2013\FOBK	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Laredo\1999-	Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Laredo\2008-	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Liberty\2002-	Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Liberty\2002-2004\Remote	Add remote,

JEEP\Select from vehicle\Australia\Liberty\2005-	Add key,Delete key,
JEEP\Select from vehicle\Australia\Liberty\2008-	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Australia\Patriot\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Australia\Rubicon\2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Australia\Wrangler\2001-	Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Wrangler\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Australia\Cherokee\2014-\Keyless-go	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Australia\Cherokee\2014-\Mechanical	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Australia\Grand Cherokee\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP\Select from vehicle\Australia\Compass\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Australia\Renegade\2014-\Smart key	Read PIN code,Add key,Delete key,
JEEP\Select from vehicle\Middle East\Commander\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Commander\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Grand Cherokee\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Grand Cherokee\1999-2004\Remote	Add remote,
JEEP\Select from vehicle\Middle East\Grand Cherokee\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Grand Cherokee\2011-2013\FOB	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Laredo\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Laredo\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Liberty\2002-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Liberty\2002-2004\Remote	Add remote,
JEEP\Select from vehicle\Middle East\Liberty\2005-2007\Immobilizer	Add key,Delete key,
JEEP\Select from vehicle\Middle East\Liberty\2008-2013\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Middle East\Patriot\2007-2015\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Middle East\Rubicon\2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Middle East\Wrangler\2001-2006\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Wrangler\2007-2017\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Middle East\Cherokee\2014-\Keyless-go	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Middle East\Cherokee\2014-\Mechanical key	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Middle East\Grand Cherokee\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP\Select from vehicle\Middle East\Compass\2007-2017\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Middle East\Renegade\2014-\Smart key	Read PIN code,Add key,Delete key,

JEEP\Select from vehicle\Africa\Commander\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Commander\2009-	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Grand Cherokee\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Grand Cherokee\1999-2004\Remote	Add remote,
JEEP\Select from vehicle\Africa\Grand Cherokee\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Grand Cherokee\2011-2013\FOB	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Laredo\1999-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Laredo\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Liberty\2002-2004\Immobilizer	Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Liberty\2002-2004\Remote	Add remote,
JEEP\Select from vehicle\Africa\Liberty\2005-2007\Immobilizer	Add key,Delete key,
JEEP\Select from vehicle\Africa\Liberty\2008-2013\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Africa\Patriot\2007-2015\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Africa\Rubicon\2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Africa\Wrangler\2001-	Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Wrangler\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Africa\Cherokee\2014-\Keyless-go	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Africa\Cherokee\2014-\Mechanical	Read pin code,Add key,Delete key,
JEEP\Select from vehicle\Africa\Grand Cherokee\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP\Select from vehicle\Africa\Compass\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
JEEP\Select from vehicle\Africa\Renegade\2014-\Smart key	Read PIN code,Add key,Delete key,
JEEP\Select from vehicle\Europe\Cherokee\2002-	Add key,Delete key,
JEEP\Select from vehicle\USA\Cherokee\2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Asia\Cherokee\2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Middle East\Cherokee\2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Australia\Cherokee\2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\South America\Cherokee\2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from vehicle\Africa\Cherokee\2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
JEEP\Select from type\Immobilizer\Type 9(CAN)	Key count,Program key,Delete key,Program remote,
JEEP\Select from type\Smart key\Type 6(CAN)	Read PIN code,Add key,Delete key,
JEEP\Select from type\Smart key\Type 7(CAN)	Read PIN code,Add smart key,Delete smart key,
JEEP\Select from type\Smart key\Type 8(CAN)\Keyless-go	Read pin code,Add key,Delete key,

	JEEP\Select from type\Smart key\Type 8(CAN)\Mechanical key	Read pin code,Add key,Delete key,
	JEEP\Select from vehicle\Africa\Grand Cherokee\2011-2013\Keyless-go(sync smart	Sync smart function,
	JEEP\Select from vehicle\Australia\Grand Cherokee\2011-2013\Keyless-go(sync smart	Sync smart function,
	JEEP\Select from vehicle\South America\Grand Cherokee\2011-	Sync smart function,
	JEEP\Select from vehicle\Middle East\Grand Cherokee\2011-2013\Keyless-go(sync smart	Sync smart function,
	JEEP\Select from vehicle\Europe\Grand Cherokee\2011-2013\Keyless-go(sync smart	Sync smart function,
	JEEP\Select from vehicle\USA\Grand Cherokee\2011-2013\Keyless-go(sync smart	Sync smart function,
PERODUA	PERODUA \GDH Reset immobiliser	Immobiliser Reset,
	PERODUA \A Key Reset immobiliser	Immobiliser Reset,
	PERODUA \DH reset immobiliser	Immobiliser Reset,
	PERODUA \Bezza\Smart key	Add smart key,Delete smart key,All smart key lost,
	PERODUA \New Myvi\Smart key	Add smart key,Delete smart key,All smart key lost,
	PERODUA \New Axia\Smart key	Add smart key,Delete smart key,All smart key lost,
ROLLS-ROYCE	ROLLS-ROYCE\Select from type\Wraith	Make ignition key,Disable key,Enable key,
	ROLLS-ROYCE\Select from type\Ghost	Make ignition key,Disable key,Enable key,
	ROLLS-ROYCE\Select from vehicle\Phantom	Program key,Disable and enable,Make key with EPROM data,Backup & recover,Sync DME,Sync ELV,Clear fault code,Clear
OLDSMOBILE	OLDSMOBILE\Aurora\Immobilizer	All key lost,
	OLDSMOBILE\Silhouette\Immobilizer	All key lost,
PONTIAC	PONTIAC\Aztec\Immobilizer	All key lost,
	PONTIAC\Bonneville\Immobilizer	All key lost,
	PONTIAC\G3\Immobilizer	Lost all key,Read key count,
	PONTIAC\G5\Immobilizer	Lost all key,Read key count,
	PONTIAC\G6\Immobilizer	Lost all key,Read key count,
	PONTIAC\G8\Immobilizer	Lost all key,Read key count,
	PONTIAC\Grand Prix\Immobilizer	All key lost,
	PONTIAC\Montana\Immobilizer	All key lost,
	PONTIAC\Pursult\Immobilizer	Lost all key,Read key count,
	PONTIAC\Solstice\Immobilizer	Lost all key,Read key count,
	PONTIAC\Torrent\Immobilizer\2007-2009	Lost all key,Read key count,
DACIA	DACIA\Dokker\2012-	Program key,Read PIN code,Read key count,
	DACIA\Duster\2010-2011	Add key,
	DACIA\Logan\2004-2011	Add key,

DACIA	DACIA\Sandero\2007-2011	Add key,
	DACIA\Sandero stepway\2006-2012	Add key,
	DACIA\Lodgy\2013-	Program key,Read PIN code,Read key count,
	DACIA\Logan\2013-	Program key,Read PIN code,Read key count,
	DACIA\Sandero\2013-	Program key,Read PIN code,Read key count,
	DACIA\Solenza	Add key,
	DACIA\Duster\2013-	Program key,Read PIN code,Read key count,
SCION	SCION\xB\2012\Remote	Program remote,Delete remote,
	SCION\CH-R\2018\Mechanical key	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
	SCION\CH-R\2018\ Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
	SCION\FR-S\2013-2016\Mechanical key	Read key count,Add key,Program remote,Delete remote,Delete key,
	SCION\FR-S\2013-2016\ Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
	SCION\iA\2016-2018\ Smart key	Program remote,Add smart key,Reset immo ECU,
	SCION\iM\2017-2018\Mechanical key	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
	SCION\iQ\2012-2015\Mechanical key	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
	SCION\iC\2005-2010\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
	SCION\iC\2011-2015\Mechanical key	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
	SCION\iC\2011-2015\ Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start
	SCION\xB\2012-2013\Mechanical key	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
	SCION\xD\2012-2013\Mechanical key	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
ACURA	ACURA>Select from type\Immobilizer\16-PIN joint\IMMO1	Add one key,All key lost,Reset key,
	ACURA>Select from type\Immobilizer\16-PIN joint\IMMO2	Add one key,All key lost,Reset key,
	ACURA>Select from type\Smart key\Knob type	Add one key,All key lost,Detect smart key,
	ACURA>Select from type\Smart key\Button type 1	Add one key,All key lost,
	ACURA>Select from type\Remote\IMMO9	Add remote,Delete remote,
	ACURA>Select from type\Immobilizer\16-PIN joint\IMMO3	Add key,All key lost,Reset immobiliser,
	ACURA>Select from type\Immobilizer\16-PIN joint\IMMO4	Reset immobox,Reset ECM,
	ACURA>Select from type\Immobilizer\16-PIN joint\Check IMMO type	Immo type,
	ACURA>Select from type\Smart key\Button type 2	Add 1 key,All key lost,
	ACURA>Select from type\Smart key\Button type 3	Add 1 key,All key lost,
	ACURA>Select from type\Immobilizer\3-PIN joint\Check IMMO type	Search IMMO type,
	ACURA>Select from type\Immobilizer\3-PIN joint\IMMO1	Add 1 key,All key lost,Reset key,

ACURA	ACURA\Select from type\Immobilizer\3-PIN joint\IMMO2	Add one key,All key lost,Reset key,
	ACURA\Select from type\Immobilizer\3-PIN joint\IMMO3	Add key,All key lost,Odometer adjustment,
	ACURA\Select from type\Immobilizer\3-PIN joint\IMMO4	Reset immobox,Reset ECM,
	ACURA\Select from vehicle\CL\1998-2003	Read key count,All key lost,
	ACURA\Select from vehicle\CSX\2008-	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\EL\2001-2005	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\MDX\2001-2006	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\MDX\2007-2013	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\NSX\1995-2005	Read key count,All key lost,
	ACURA\Select from vehicle\RDX\2007-2012	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\RL\1996-1999	Read key count,All key lost,
	ACURA\Select from vehicle\RL\2005-2007	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\RSX\2002-2006	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\TL\1999-2003	Read key count,All key lost,
	ACURA\Select from vehicle\TL\2004-2008	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\TL\2009-2012	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\TSX\2004-2008	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\TSX\2009-2013	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\ZDX\2010-\Mechanical key	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\RL\2008-2012	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\ACURA\Integra	Read key count,All key lost,	
ACURA\Select from type\Immobilizer\16 PIN\IMMO 5	Read key count,All key lost,	
DAEWOO	DAEWOO\Evanda(2003-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Kalos(2002-2006)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Lacetti(2004-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Leganza(2002-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Leganze(USA)(2001-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Matiz(1998-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Nubira(2003-2006)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Tacuma(2000-2008)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Read PIN code	Read pin code type1,Read pin code type2,Read pin code type3,Read pin code type4,Switch ignition on,Read pin code
	DODGE\Select from type\Remote\Type 1(VPW)	Add remote,

DODGE\Select from type\Remote\Type 2(VPW)	Add remote,
DODGE\Select from type\Remote\Type 3(VPW)	Add remote,
DODGE\Select from type\Remote\Type 4(CAN)	Add remote,Read pin code,
DODGE\Select from type\Remote\Type 5	Add remote,
DODGE\Select from type\Remote\Type 6(VPW)	Add remote,
DODGE\Select from type\Remote\Type 7(VPW)	Add remote,
DODGE\Select from type\Remote\Type 8(VPW)	Add remote,
DODGE\Select from vehicle\Asia\Caravan\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Asia\Dakota\2001-2004\Remote	Add remote,
DODGE\Select from vehicle\Asia\Durango\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Asia\Interpid\1998-2004\Remote	Add remote,
DODGE\Select from vehicle\Asia\Neon\2000-2005\Remote	Add remote,
DODGE\Select from vehicle\Asia\Ram\2002-2005\Remote	Add remote,
DODGE\Select from vehicle\Asia\Stratus4 door\2001-2006\Remote	Add remote,
DODGE\Select from type\ Smart key\Type 1(CAN)	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\ Smart key\Type 2(CAN)	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Asia\Challenger\2015-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Charger\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Magnum\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Viper\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Immobilizer\Type 1(CAN)	Add new key,Add old key,Add remote,Detect key count,Delete key,
DODGE\Select from type\Immobilizer\Type 2(CAN)	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from type\Immobilizer\Type 3(CAN)	Read pin code,Add key,Delete key,Key count,
DODGE\Select from type\Immobilizer\Type 4(CAN)	Read pin code,Add key,Delete key,Key count,
DODGE\Select from type\Immobilizer\Type 6(VPW)	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Dart\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Asia\Ram\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from type\ Smart key\Type 3(CAN)	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\ Smart key\Type 4(CAN)	Sync smart function,
DODGE\Select from type\ Smart key\Type 5(CAN)	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Immobilizer\Type 7(VPW)	Add key,Delete key,
DODGE\Select from vehicle\USA\Avenger\2008-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,

DODGE\Select from vehicle\USA\Caliber\2007-2012\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\USA\Caravan\2001-2003\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\USA\Caravan\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\USA\Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\USA\Caravan\2008-2009\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Caravan\2010-2014\Keyless-	Sync smart function,
DODGE\Select from vehicle\USA\Challenger\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Challenger\2008-2014\Keyless-	Sync smart function,
DODGE\Select from vehicle\USA\Challenger\2015-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Charger\2005-2006\Immobilizer	Add new key,Add old key,Add remote,Delete key,Key count,Read PIN code,
DODGE\Select from vehicle\USA\Charger\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Charger\2008\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\USA\Charger\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Charger\2009-2010\Keyless-	Sync smart function,
DODGE\Select from vehicle\USA\Charger\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Charger\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Dakota\2001-2004\Remote	Add remote,
DODGE\Select from vehicle\USA\Dart\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Durango\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Durango\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\USA\Durango\2011-2013\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Durango\2011-2013\Keyless-	Sync smart function,
DODGE\Select from vehicle\USA\Durango\2014-2015\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\USA\Grand Caravan\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Grand Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\USA\Grand Caravan\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Grand Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Interpid\1998-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Interpid\1998-2004\Remote	Add remote,
DODGE\Select from vehicle\USA\Journey\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Journey\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,

DODGE\Select from vehicle\USA\Journey\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Magnum\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Neon\2000-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Neon\2000-2005\Remote	Add remote,
DODGE\Select from vehicle\USA\Neon\2005-\Remote	Add remote,
DODGE\Select from vehicle\USA\Nitro\2007-2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\USA\Ram\2002-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Ram\2002-2005\Remote	Add remote,
DODGE\Select from vehicle\USA\Ram\2006-2008\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\USA\Ram\2009-2012\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Ram\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Stratus\2001-2006\4	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Stratus\2001-2006\4	Add remote,
DODGE\Select from type\IMMO-Fobik	Read PIN code,Synch smart key,Add key,Delete key,
DODGE\Select from vehicle\USA\Magnum\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Viper\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Dart\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\USA\Dakota\2001-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Avenger\2008-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Asia\Caliber\2007-2012\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Asia\Caravan\2001-2003\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Asia\Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\Asia\Caravan\2008-2009\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Caravan\2010-2014\Keyless-	Sync smart function,
DODGE\Select from vehicle\Asia\Challenger\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Challenger\2008-2014\Keyless-	Sync smart function,
DODGE\Select from vehicle\Asia\Charger\2005-2006\Immobilizer	Add new key,Add old key,Add remote,Delete key,Key count,Read PIN code,
DODGE\Select from vehicle\Asia\Charger\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Charger\2008\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\Asia\Charger\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Charger\2009-2010\Keyless-	Sync smart function,

DODGE\Select from vehicle\Asia\Charger\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Durango\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Durango\2011-2013\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Durango\2011-2013\Keyless-	Sync smart function,
DODGE\Select from vehicle\Asia\Durango\2014-2015\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Asia\Grand Caravan\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Grand Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\Asia\Grand Caravan\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Grand Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Interpid\1998-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Journey\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Journey\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Magnum\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Neon\2000-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Neon\2005-\Remote	Add remote,
DODGE\Select from vehicle\Asia\Nitro\2007-2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Asia\Ram\2002-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Stratus\2001-2006\4	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Dakota\2001-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Avenger\2008-	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Europe\Caliber\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Europe\Caravan\2001-	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Europe\Caravan\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Europe\Caravan\2004-	Add key,Delete key,
DODGE\Select from vehicle\Europe\Caravan\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Caravan\2010-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Caravan\2010-2014\Keyless-	Sync smart function,
DODGE\Select from vehicle\Europe\Challenger\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Challenger\2008-	Sync smart function,
DODGE\Select from vehicle\Europe\Challenger\2015-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Charger\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Charger\2008\Keyless-	Sync smart function,

DODGE\Select from vehicle\Europe\Charger\2009-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Charger\2009-2010\Keyless-	Sync smart function,
DODGE\Select from vehicle\Europe\Charger\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Charger\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Dakota\2001-2004\Remote	Add remote,
DODGE\Select from vehicle\Europe\Dart\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Durango\2001-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Durango\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Europe\Durango\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Durango\2011-2013\Keyless-	Sync smart function,
DODGE\Select from vehicle\Europe\Durango\2014-2015\Smart	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Europe\Grand Caravan\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Grand Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\Europe\Grand Caravan\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Grand Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Interpid\1998-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Interpid\1998-2004\Remote	Add remote,
DODGE\Select from vehicle\Europe\Journey\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Journey\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Journey\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Magnum\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Neon\2000-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Neon\2000-2005\Remote	Add remote,
DODGE\Select from vehicle\Europe\Neon\2005-\Remote	Add remote,
DODGE\Select from vehicle\Europe\Nitro\2007-2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Europe\Ram\2002-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Ram\2002-2005\Remote	Add remote,
DODGE\Select from vehicle\Europe\Ram\2006-2008\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Europe\Ram\2009-2012\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Ram\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Stratus\2001-2006\4	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Stratus\2001-2006\4	Add remote,

DODGE\Select from vehicle\Europe\Magnum\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Dart\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Europe\Dakota\2001-	Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Avenger\2008-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\South America\Caliber\2007-2012\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\South America\Caravan\2001-2003\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\South America\Caravan\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\South America\Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\South America\Caravan\2008-2009\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Caravan\2010-2014\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\South America\Challenger\2008-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Challenger\2008-2014\Keyless-	Sync smart function,
DODGE\Select from vehicle\South America\Challenger\2015-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South America\Charger\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Charger\2008\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\South America\Charger\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Charger\2009-2010\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\South America\Charger\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Charger\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South America\Dakota\2001-2004\Remote	Add remote,
DODGE\Select from vehicle\South America\Durango\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Durango\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\South America\Durango\2011-2013\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Durango\2011-2013\Keyless-	Sync smart function,
DODGE\Select from vehicle\South America\Durango\2014-2015\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\South America\Grand Caravan\2001-	Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Grand Caravan\2004-	Add key,Delete key,
DODGE\Select from vehicle\South America\Grand Caravan\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Grand Caravan\2010-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Interpid\1998-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Interpid\1998-2004\Remote	Add remote,

DODGE

DODGE\Select from vehicle\South America\Journey\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Journey\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Journey\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South America\Magnum\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Neon\2000-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Neon\2000-2005\Remote	Add remote,
DODGE\Select from vehicle\South America\Neon\2005-\Remote	Add remote,
DODGE\Select from vehicle\South America\Nitro\2007-2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\South America\Ram\2002-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Ram\2002-2005\Remote	Add remote,
DODGE\Select from vehicle\South America\Ram\2006-2008\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\South America\Ram\2009-2012\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Ram\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South America\Stratus\2001-2006\4	Add key,Delete key,Key count,
DODGE\Select from vehicle\South America\Stratus\2001-2006\4 door\Remote	Add remote,
DODGE\Select from vehicle\South America\Magnum\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South America\Dart\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\South America\Dakota\2001-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Avenger\2008-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Middle East\Caliber\2007-2012\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Middle East\Caravan\2001-2003\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Middle East\Caravan\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Middle East\Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\Middle East\Caravan\2008-2009\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Caravan\2010-2014\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\Middle East\Challenger\2008-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Challenger\2008-2014\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\Middle East\Challenger\2015-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle East\Charger\2005-2006\Immobilizer	Add new key,Add old key,Add remote,Delete key,Key count,Read PIN code,
DODGE\Select from vehicle\Middle East\Charger\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Charger\2008\Keyless-go(sync smart	Sync smart function,

DODGE\Select from vehicle\Middle East\Charger\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Charger\2009-2010\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\Middle East\Charger\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Charger\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle East\Dakota\2001-2004\Remote	Add remote,
DODGE\Select from vehicle\Middle East\Dart\2013-\Keyless-go	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle East\Durango\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Durango\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Middle East\Durango\2011-2013\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Durango\2011-2013\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\Middle East\Durango\2014-2015\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Middle East\Grand Caravan\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Grand Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\Middle East\Grand Caravan\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Grand Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Interpid\1998-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Interpid\1998-2004\Remote	Add remote,
DODGE\Select from vehicle\Middle East\Journey\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Journey\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Journey\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle East\Magnum\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Neon\2000-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Neon\2000-2005\Remote	Add remote,
DODGE\Select from vehicle\Middle East\Neon\2005-\Remote	Add remote,
DODGE\Select from vehicle\Middle East\Nitro\2007-2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Middle East\Ram\2002-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Ram\2002-2005\Remote	Add remote,
DODGE\Select from vehicle\Middle East\Ram\2006-2008\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Middle East\Ram\2009-2012\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Ram\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle East\Stratus\2001-2006\4 door\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Stratus\2001-2006\4 door\Remote	Add remote,

DODGE\Select from vehicle\Middle East\Magnum\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle East\Dart\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Middle East\Dakota\2001-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Avenger\2008-	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Australia\Caliber\2007-	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Australia\Caravan\2001-	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Australia\Caravan\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Australia\Caravan\2004-	Add key,Delete key,
DODGE\Select from vehicle\Australia\Caravan\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Caravan\2010-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Caravan\2010-	Sync smart function,
DODGE\Select from vehicle\Australia\Challenger\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Challenger\2008-	Sync smart function,
DODGE\Select from vehicle\Australia\Challenger\2015-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Charger\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Charger\2008\Keyless-	Sync smart function,
DODGE\Select from vehicle\Australia\Charger\2009-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Charger\2009-2010\Keyless-	Sync smart function,
DODGE\Select from vehicle\Australia\Charger\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Charger\2011-2014\Smart	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Dakota\2001-2004\Remote	Add remote,
DODGE\Select from vehicle\Australia\Dakota\2005-	Add new key,Add old key,Add remote,Delete key,Key count,Read PIN code,
DODGE\Select from vehicle\Australia\Dart\2013-\Keyless-go	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Durango\2001-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Durango\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Australia\Durango\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Durango\2011-	Sync smart function,
DODGE\Select from vehicle\Australia\Durango\2014-2015\Smart	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Australia\Grand Caravan\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Grand Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\Australia\Grand Caravan\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Grand Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,

DODGE\Select from vehicle\Australia\Interpid\1998-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Interpid\1998-2004\Remote	Add remote,
DODGE\Select from vehicle\Australia\Journey\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Journey\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Journey\2011-2014\Smart	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Magnum\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Neon\2000-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Neon\2000-2005\Remote	Add remote,
DODGE\Select from vehicle\Australia\Neon\2005-\Remote	Add remote,
DODGE\Select from vehicle\Australia\Nitro\2007-2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Australia\Ram\2002-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Ram\2002-2005\Remote	Add remote,
DODGE\Select from vehicle\Australia\Ram\2006-2008\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Australia\Ram\2009-2012\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Ram\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Stratus\2001-2006\4	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Stratus\2001-2006\4	Add remote,
DODGE\Select from vehicle\Australia\Magnum\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Dart\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Australia\Dakota\2001-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Avenger\2008-2014\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Africa\Caliber\2007-2012\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Africa\Caravan\2001-2003\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Africa\Caravan\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Africa\Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\Africa\Caravan\2008-2009\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Caravan\2010-2014\Keyless-	Sync smart function,
DODGE\Select from vehicle\Africa\Challenger\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Challenger\2008-2014\Keyless-	Sync smart function,
DODGE\Select from vehicle\Africa\Challenger\2015-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Charger\2008\Immobilizer	Read pin code,Add key,Delete key,Key count,

DODGE\Select from vehicle\Africa\Charger\2008\Keyless-go(sync	Sync smart function,
DODGE\Select from vehicle\Africa\Charger\2009-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Charger\2009-2010\Keyless-	Sync smart function,
DODGE\Select from vehicle\Africa\Charger\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Charger\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Dakota\2001-2004\Remote	Add remote,
DODGE\Select from vehicle\Africa\Dart\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Durango\2001-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Durango\2001-2003\Remote	Add remote,
DODGE\Select from vehicle\Africa\Durango\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Durango\2011-2013\Keyless-	Sync smart function,
DODGE\Select from vehicle\Africa\Durango\2014-2015\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Africa\Grand Caravan\2001-2003\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Grand Caravan\2004-2007\Immobilizer	Add key,Delete key,
DODGE\Select from vehicle\Africa\Grand Caravan\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Grand Caravan\2010-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Interpid\1998-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Interpid\1998-2004\Remote	Add remote,
DODGE\Select from vehicle\Africa\Journey\2008-2010\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Journey\2011-2014\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Journey\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Magnum\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Neon\2000-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Neon\2000-2005\Remote	Add remote,
DODGE\Select from vehicle\Africa\Neon\2005-\Remote	Add remote,
DODGE\Select from vehicle\Africa\Nitro\2007-2011\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Africa\Ram\2002-2005\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Ram\2002-2005\Remote	Add remote,
DODGE\Select from vehicle\Africa\Ram\2006-2008\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Africa\Ram\2009-2012\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Ram\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Stratus\2001-2006\4	Add key,Delete key,Key count,

DODGE\Select from vehicle\Africa\Stratus\2001-2006\4	Add remote,
DODGE\Select from vehicle\Africa\Magnum\2011-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Dart\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Africa\Dakota\2001-2004\Immobilizer	Add key,Delete key,Key count,
DODGE\Select from type\Immobilizer\Type 9(CAN)	Key count,Program key,Delete key,Program remote,
DODGE\Select from type\Smart key\Type 6(CAN)	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram\2006-2008\Immobilizer	Read PIN code,Add new key,Delete key,Key count,Add old key,
DODGE\Select from vehicle\Asia\Ram\2009-2012\Immobilizer	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Journey\2011-2014\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Ram\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Dart\2013-\Smart key	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Ram\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Europe\Ram\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Australia\Ram\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Africa\Ram\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\South America\Ram\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Middle East\Ram\2013-\FOBIK	Add key,Delete key,Read PIN code,
DODGE\Select from type\Smart key\Type 7(CAN)	Read PIN code,Add smart key,Delete smart key,
DODGE\Select from type\Smart key\Type 8(CAN)\Keyless-go	Read pin code,Add key,Delete key,
DODGE\Select from type\Smart key\Type 8(CAN)\Mechanical key	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\USA\Ram Truck\2013-\Keyless-go	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\USA\Ram Truck\2013-\Mechanical key	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram Truck\2013-\Keyless-go	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram Truck\2013-\Mechanical key	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Europe\Ram Truck\2013-\Keyless-go	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Europe\Ram Truck\2013-\Mechanical key	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Australia\Ram Truck\2013-\Keyless-go	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Australia\Ram Truck\2013-\Mechanical key	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Africa\Ram Truck\2013-\Keyless-go	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Africa\Ram Truck\2013-\Mechanical key	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\South America\Ram Truck\2013-\Keyless-go	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\South America\Ram Truck\2013-\Mechanical key	Read pin code,Add key,Delete key,

	DODGE\Select from vehicle\Middle East\Ram Truck\2013-\Keyless-go	Read pin code,Add key,Delete key,
	DODGE\Select from vehicle\Middle East\Ram Truck\2013-\Mechanical key	Read pin code,Add key,Delete key,
	DODGE\Select from vehicle\USA\Charger\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
	DODGE\Select from vehicle\Asia\Charger\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
	DODGE\Select from vehicle\Europe\Charger\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
	DODGE\Select from vehicle\Australia\Charger\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
	DODGE\Select from vehicle\Middle East\Charger\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
	DODGE\Select from vehicle\South America\Charger\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
	DODGE\Select from vehicle\Africa\Charger\2014-\Smart key	Add smart key,Delete smart key,Key count,Read PIN code,
KPROG-2		
Brand	Menu	Application
EEPROM	EEPROM\COMMON\24CXXX	Read data,Write data,
	EEPROM\COMMON\93CXXX	Read data,Write data,
	EEPROM\COMMON\25XXX	Read data,Write data,
ADP TOOLS	ADP TOOLS\CPLD program upgrade	Adaptor LC4256V upgrade,Dashboard clock LC4256V upgrade,Adaptor EPM240 upgrade,
MCU	MCU\Freescale\9S12G	MC9S12G(N)16,MC9S12G(N)32,MC9S12G(A)48,MC9S12G(A)64,MC9S12G(A)96,MC9S12G(A)128,MC9S12G(A)192,
	MCU\Renesas\R32C/M16C/UART	Read FLASH,Read DATAFLASH,Read E2_FLASH,Write FLASH,Write DATAFLASH,Write E2_FLASH,
	MCU\Renesas\R32C/M16C/SPI	Read FLASH,Read E2FLASH,Write FLASH,Write E2FLASH,Read DATAFLASH,Write DATAFLASH,
Specific Function		
Brand	Menu	Application
Generate Key Chip	Generate Key Chip\4D chip	60 chip,61 chip Mitsubishi2,62 chip Suzuki motor,63 chip,chip 63 Ford/Mazda/Lincoln,Mitsubishi 3 chip 62,KAWASAKI chip 62,Chip 65
	Generate Key Chip\46 chip	ZHONGHUA H230,ZHONGHUA H530,VW(2007-2008),X-Trail(2008-2009),RENAULT (Master II),RENAULT (Traffic
	Generate Key Chip\48 chip	TP22,TP23,TP24,TP25,JETTA(2010-),
	Generate Key Chip\T5 chip	Chip 11,Chip 12,Chip 13,Chip 33,
	Generate Key Chip\7935 chip	Blank 7935,Cherry chip 40,Nissan chip 41,Geely chip 44,Mitsubishi chip 73,Mitsubishi chip 44,MAIMA chip44,CHANG'AN chip44,Great
Identify & Copy Chip	Identify & Copy Chip\Recognition & copy	Recognition©,
Remote	Remote\Frequency detection	Frequency detection,
Simulate Chip	Simulate Chip\Generate simulated chip\4D	4D chip emulation,60 chip,Mitsubishi2 chip 61,Kawasaki Motor chip 62,Mitsubishi3 chip 62,Suzuki Motor chip 62,Ford/Mazda/Lincoln
	Simulate Chip\Bind simulated chip	Bind analog chip,
	Simulate Chip\Generate simulated chip\46	46 chip emulation,ZHONGHUA H230,ZHONGHUA H530,VW(2007-2008),X-TRAIL(2008-2009),RENAULT (Master II),RENAULT
	Simulate Chip\Generate simulated chip\8A	Toyota H,
	Simulate Chip\Obtain LKE data	Obtain LKE key data,

Decode Chip	Decode Chip\Decode Chip	4D chip,46 chip,
Ignition Coil	Ignition Coil\Detect ignition coil	Ignition coil detection,
Odometer Adjustment		
Brand	Menu	Application
KIA	KIA\K5\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\K5\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\K5\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Ceed\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Magentis(Optima)\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Rio\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sorento\2007-\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Soul\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage \2008-\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage R\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Ceed\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Rio\2015\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sorento\2007-\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage R\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\K4\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\KX5\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sorento\2007-\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage \2008-\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
KIA\Sportage R\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,	
LAND ROVER	LAND ROVER\Evoque\2011- \Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	LAND ROVER\Range Rover\2010-\Odometer adjustment	Odometer adjustment,
	LAND ROVER\Discovery 4\Odometer adjustment	Odometer adjustment,
	LAND ROVER\Freelander 2\2013\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
MAZDA	MAZDA\Axela\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\Atenza\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\CX-5\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\CX-9\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\M2\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,

	MAZDA\M3\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\M5\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\M6\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\ New M6\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
SMART	SMART\BR451\Odometer adjustment	Odometer adjustment,
RENAULT	RENAULT>Select from type\Type 1	Odometer adjustment,
JAGUAR	JAGUAR\XJ\Odometer adjustment	Odometer adjustment,
	JAGUAR\F-type\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	JAGUAR\XE\2015- \Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
HUMMER	HUMMER\H2\2007-\Odometer adjustment	Odometer adjustment,
CHRYSLER	CHRYSLER>Select from type\Type 1	Odometer adjustment,
PORSCHE	PORSCHE\Cayenne\2010-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	PORSCHE\Panamera\2010-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	PORSCHE\918\2015\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
FORD	FORD\Max\2011- monochrome screen\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\S-MAX\2008-2010 Monochrome screen\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\New Mondeo\Small color screen\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Ecosport\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Kuga\Color screen\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Kuga\Monochrome screen\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Mondeo\2011- monochrome screen\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Mondeo\2008- color screen\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Mondeo\2008-2010 Monochrome screen\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Fiesta\2013-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Fiesta\2008-2012\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Focus\2012-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Focus\2009-2011\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Focus\2004-2008\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Explorer\2011-2015\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
FORD\Mondeo CHIA-X\2011-2013 \Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,	
	HYUNDAI\Accent\2006-\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\GETZ\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,

HYUNDAI	HYUNDAI\I20\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\IX25\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Verna(RBC)\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\VELOSTER\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Azera\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\HB20\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Mistra\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Sonata 9\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\All New Tucson\2016\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Elantra(AD)\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,