


How to enable VVDI Mini Key Tool Free ID48 96bit Copy?


Every [vvd mini Key tool](#) inc free copy 48 96bit 1/day (1 year)

How to enable:

- 1) Turn on Bluetooth , make sure Mini Keytool is power up
- 2) Login APP and detect device , when recognize, tap to connect

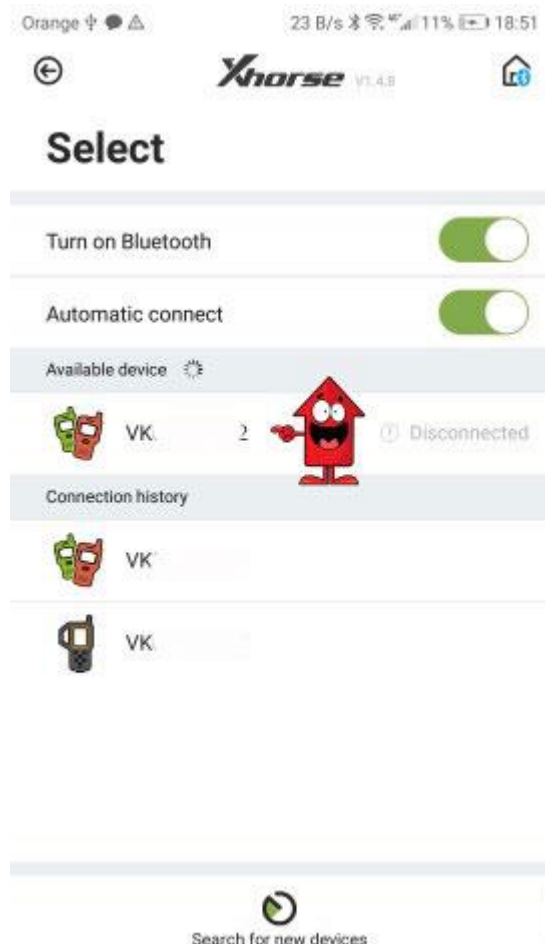

- 2) After success connection your device will be display in APP

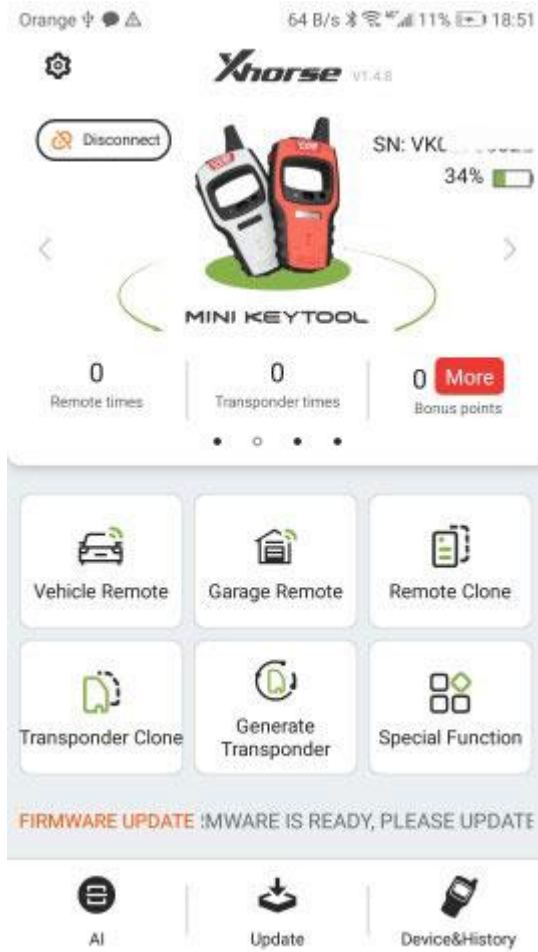

3)Bottom right corner click Device & History to see available license

Xhorse V1.4.8

Disconnect

SN: VK

34%

MINI KEYTOOL

0 Remote times


0 Transponder times

0 More Bonus points


Vehicle Remote	Garage Remote	Remote Clone
Transponder Clone	Generate Transponder	Special Function

FIRMWARE UPDATE :MWARE IS READY PLEASE UPDATE

AI | Update | Device&History

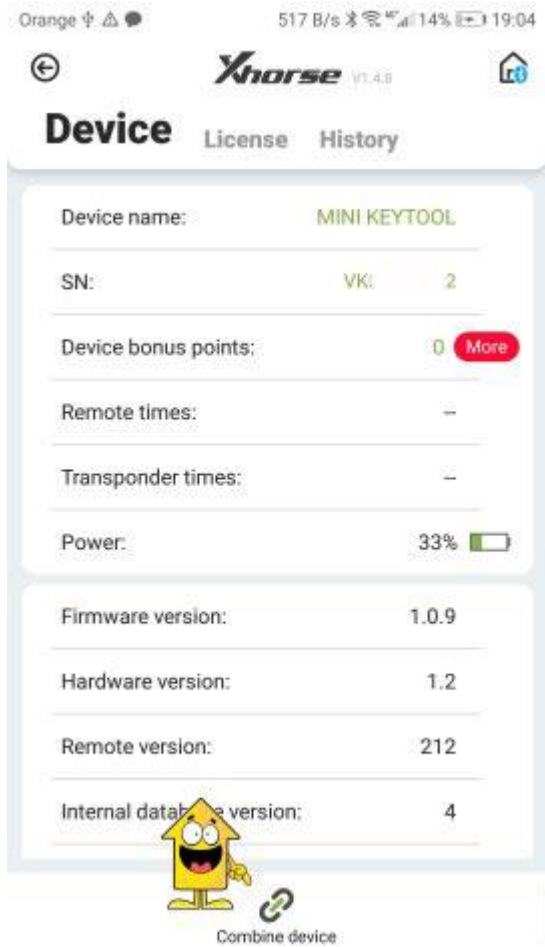


4) to Activate 48 96bit Go to Device Page bottom right - Device & history

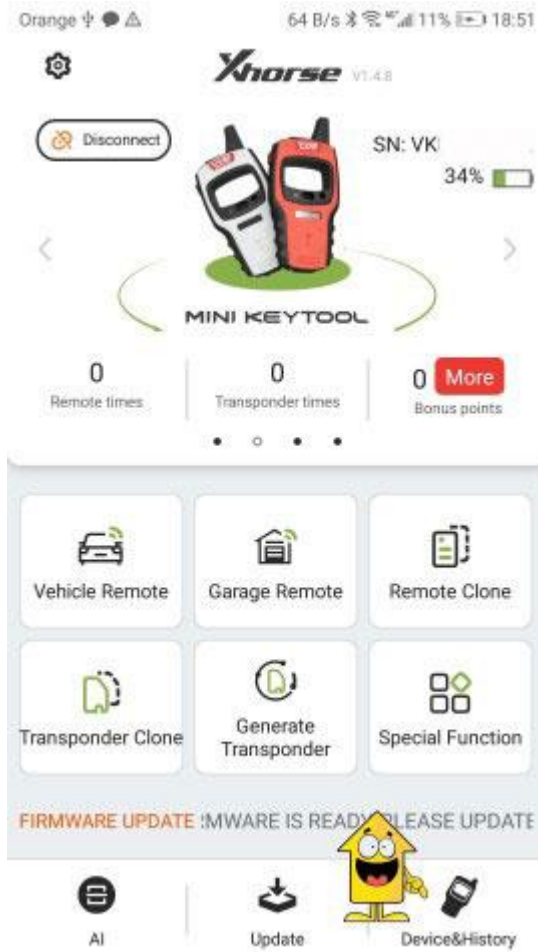

5) Next click Combine Device



6) Require Security code and write it within 60sec after request (will be send via TXT message)

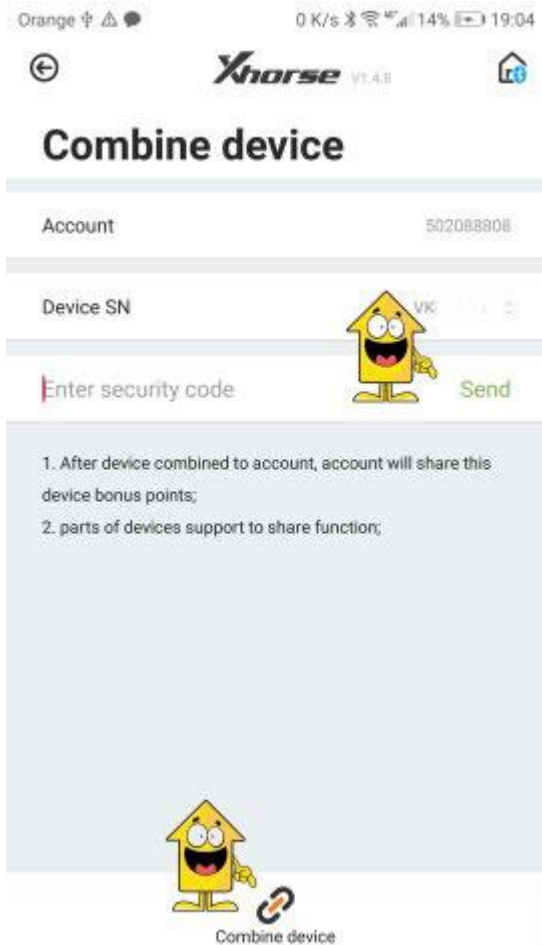

7) After you receive Security code - click Combine Device at the bottom page

8) After success connection your device will be display



Account:


Combined device




VK



9) go to main page - click SHOP

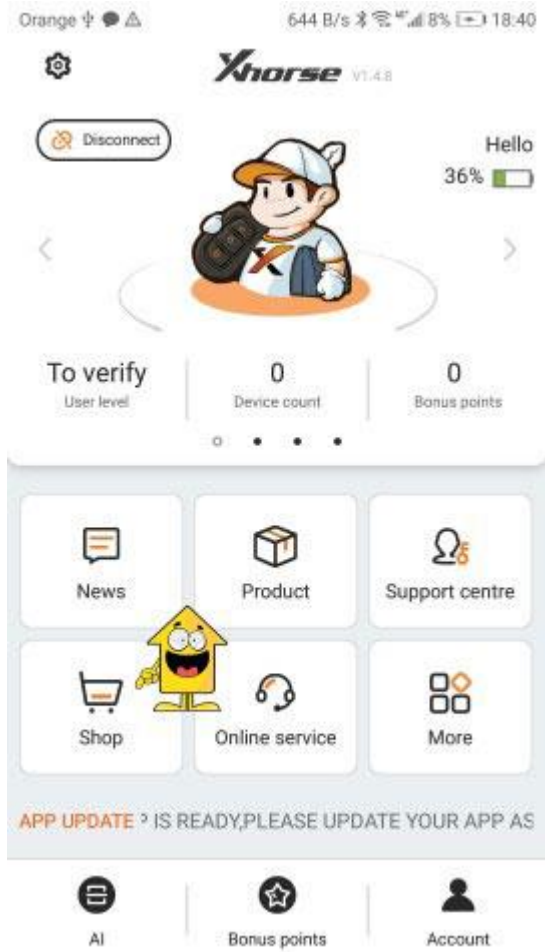


10) Find MiniKeytool Activation and mark activation and click EXCHANGE

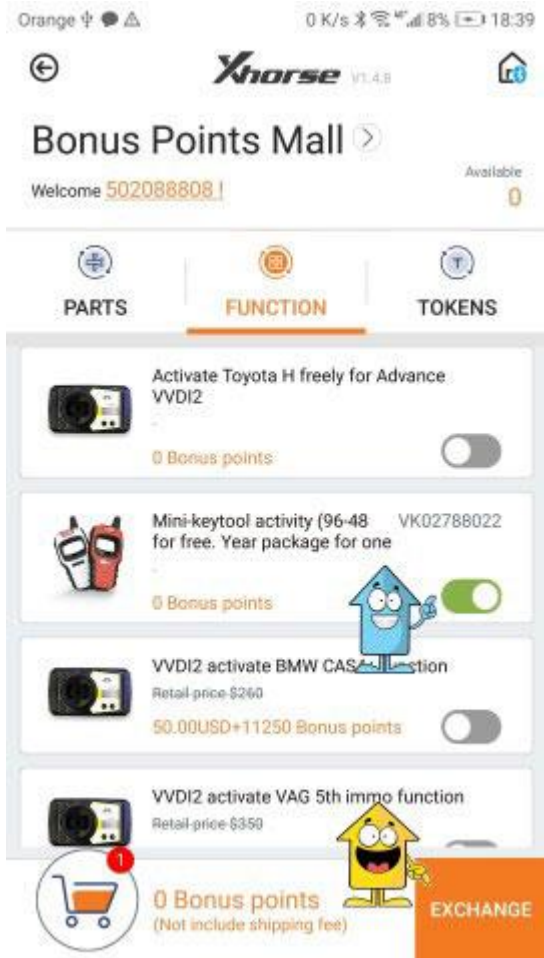


11) Check device number and click OK



12) Next page require to provide your address and Dealer location

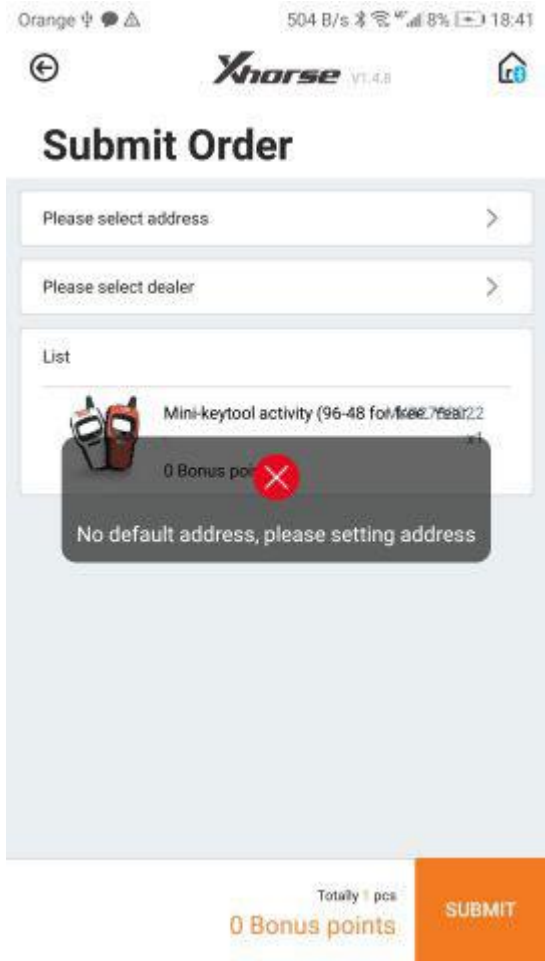

13) Click SUBMIT when you finish

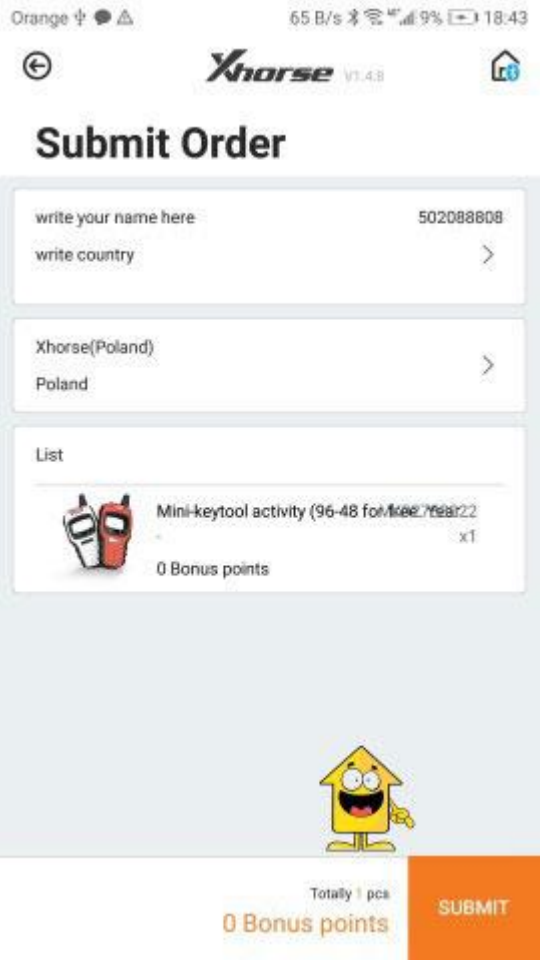

14) Activation is enabled and can be used

Device **License** History

SN	VKC
AI - Car remote type	Activated
AI - Key blade type	Activated
AI - PIN code	Activated
Remote - Vehicle remote	Activated
Remote - Garage remote	Activated
Remote - Proximity remote	Activated
Generate transponder - 7935/46/4D/48/8C	Activated
Generate transponder - Toyota H(BA)	Activated
Transponder clone - ID48 (96 bits)	Activated

Paid license, support calculate with bonus points and token

www.obdii365.com