

Vehicle Coverage

Diagnostic Tools

Other Tools

Product Model

Vehicle Make

Vehicle Model

Year

Function/Sub-function

SEARCH

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|---------------------------|------------|------------------|------------------------------|-------------------|------|
| Model S | / | / | / | / | | Gateway | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Gateway | / | Special Function | Clear gateway DTC | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Alerts | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Mode selection | Display factory mode window | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Mode selection | Enter developer mode | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Mode selection | Enter diagnostic mode | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Mode selection | Enter factory mode | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Mode selection | Exit developer mode | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Mode selection | Exit diagnostic mode | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Mode selection | Exit factory mode | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | / | / | Mode selection | Open Factory Mode | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Instrument Cluster | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Instrument Cluster | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Clear contactor stress index | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|--------------------------------|------------|------------------|-------------------------------|-------------------|------|
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Reset W163 | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Reset contactor WOT counter | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Reset open positive contactor | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | BMB jump to boot updater | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Reset f027 | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Reset w026 | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Reset w152 | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Battery Management System | / | Special Function | Reset w153 | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Steering Column Control Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Steering Column Control Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Steering Column Control Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Passenger Door Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Passenger Door Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Passenger Door Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Passenger Door Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Supplemental Deployment Module | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Supplemental Deployment Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Supplemental Deployment Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Supplemental Deployment Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Supplemental Deployment Module | / | Special Function | Erase crash record | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Body Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Body Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Body Controller | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Body Controller | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Body Controller | / | Special Function | Body controller | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Center Radar | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Center Radar | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Center Radar | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Center Radar | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Charging Port | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Charging Port | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|--------------------------------|------------|------------------|-------------------------------------|-------------------|------|
| Model S | / | / | / | / | | Charging Port | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Charging Port | / | Special Function | Charge port latch calibration | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Charging Port | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Charging Port | / | Special Function | Charge port door sensor calibration | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Compressor | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Compressor | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | DC-DC | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | DC-DC | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | DC-DC | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Drive Inverter | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Drive Inverter | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Drive Inverter | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Drive Inverter | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Drive Inverter System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Drive Inverter System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Drive Inverter System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Drive Inverter System | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Assist | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Assist | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Assist | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Door Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Door Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Door Controller | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Door Controller | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Side Memory Seat Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Side Memory Seat Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Side Memory Seat Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Driver Side Memory Seat Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Park Brake | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Park Brake | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Park Brake | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Park Brake | / | Special Function | Service mode | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|----------------------------------|------------|------------------|-----------------------------------|-------------------|------|
| Model S | / | / | / | / | | Electric Park Brake | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Park Brake Monitor | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Park Brake Monitor | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Park Brake Monitor | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Power Assisted Steering | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Power Assisted Steering | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Power Assisted Steering | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Power Assisted Steering | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Power Assisted Steering | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program | / | Special Function | Brake bleeding | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program | / | Special Function | Steering angle sensor calibration | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program 2 | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program 2 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program 2 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Electric Stability Program 2 | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Front Driver Door Handles | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Front Driver Door Handles | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Front Passenger Door Handles | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Front Passenger Door Handles | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | High Voltage Battery System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | High Voltage Battery System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Left Radar | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Left Radar | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Liftgate Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Liftgate Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Liftgate Controller | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger | / | ECU information | / | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|--------------------------------|------------|------------------|--|-------------------|------|
| Model S | / | / | / | / | | Master Charger | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger 6 | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger 6 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger 6 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger 6 | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger 6 | / | Special Function | Check fast charge disabled | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger 6 | / | Special Function | Clear fast charge disabled | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger PH1 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger PH1 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger PH2 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger PH2 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger PH3 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger PH3 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger Relay | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger Relay | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Master Charger Relay | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Memory Seat Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Memory Seat Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Memory Seat Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Occupant Classification System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Occupant Classification System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Occupant Classification System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Occupant Classification System | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Occupant Classification System | / | Special Function | Occupant Classification System (OCS) reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Park Assist System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Park Assist System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Park Assist System | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Park Assist System | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Park Assist System 2 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|-----------------------------------|------------|------------------|---------------------|-------------------|------|
| Model S | / | / | / | / | | Park Assist System 2 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Passenger Side Memory Seat Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Passenger Side Memory Seat Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Passenger Side Memory Seat Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Passenger Side Memory Seat Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Pedal Monitor | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Pedal Monitor | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Pedal Monitor | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Pedal Monitor | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Positive Temperature Coefficient | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Positive Temperature Coefficient | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Potentiometer System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Potentiometer System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Rear Driver Door Handles | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Rear Driver Door Handles | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Rear Passenger Door Handles | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Rear Passenger Door Handles | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Remote Climate Control Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Remote Climate Control Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Remote Climate Control Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Restraints Controller Module | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Restraints Controller Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Restraints Controller Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Restraints Controller Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Restraints Controller Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Right Radar | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Right Radar | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Security Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Security Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Security Controller | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Security Controller | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Security Controller | / | Special Function | Manual key learning | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|-----------------------------|------------|------------------|---|-------------------|------|
| Model S | / | / | / | / | | Security Controller | / | Special Function | Reset remote unlock security key | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Security Controller | / | Special Function | Security controller | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger PH1 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger PH1 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger PH2 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger PH2 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger PH3 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger PH3 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Sunroof Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Sunroof Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Sunroof Controller | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air Suspension Leveling High | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air Suspension Leveling Low | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air Suspension Leveling Standard | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air suspension measure pressures | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Reset air suspension crash flag | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air suspension leveling - very high | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air suspension leveling - very low | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Finish Service mode for air suspension | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Tesla Air Suspension (TAS) service mode | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Thermal Controller | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Thermal Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Thermal Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Thermal Controller | / | Trouble codes | / | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|------------------------------|------------|------------------|-----------------------------|-------------------|------|
| Model S | / | / | / | / | | Thermal Controller | / | Special Function | Start refill or drain | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Thermal Controller | / | Special Function | Stop refill or drain | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Thermal Controller | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Thermal Controller | / | Special Function | Perform 'Coolant air purge' | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tuner | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tuner | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tyre Pressure Monitor System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tyre Pressure Monitor System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tyre Pressure Monitor System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tyre Pressure Monitor System | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tyre Pressure Monitor System | / | Special Function | Read TPMS sensor ID | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tyre Pressure Monitor System | / | Special Function | Write TPMS sensor ID | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Tyre Pressure Monitor System | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | eFUSE | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | eFUSE | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | eFUSE | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | eFUSE | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | iBooster | / | ECU information | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | iBooster | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | iBooster | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | iBooster | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | iBooster | / | Live data | / | Above Tesla_V1.00 | / |
| Model S | / | / | / | / | | Slave Charger 6 | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Gateway | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Gateway | / | Special Function | Clear gateway DTC | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | / | / | Alerts | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | / | / | Mode selection | Display factory mode window | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | / | / | Mode selection | Enter developer mode | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | / | / | Mode selection | Enter diagnostic mode | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | / | / | Mode selection | Enter factory mode | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | / | / | Mode selection | Exit developer mode | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | / | / | Mode selection | Exit diagnostic mode | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|--------------------------------|------------|------------------|-------------------------------|-------------------|------|
| Model X | / | / | / | / | | / | / | Mode selection | Exit factory mode | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | / | / | Mode selection | Open Factory Mode | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Instrument Cluster | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Instrument Cluster | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Clear contactor stress index | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Reset W163 | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Reset contactor WOT counter | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Reset open positive contactor | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | BMB jump to boot updater | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Reset f027 | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Reset w026 | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Reset w152 | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Battery Management System | / | Special Function | Reset w153 | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Steering Column Control Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Steering Column Control Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Steering Column Control Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Passenger Door Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Passenger Door Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Supplemental Deployment Module | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Supplemental Deployment Module | / | Special Function | Erase VIN | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Supplemental Deployment Module | / | Special Function | Unlock EEPROM after crash | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Supplemental Deployment Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Center Radar | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Center Radar | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Center Radar | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Center Radar | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Charging Port | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Charging Port | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|--------------------------------|------------|------------------|-------------------------------------|-------------------|------|
| Model X | / | / | / | / | | Charging Port | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Charging Port | / | Special Function | Charge port latch calibration | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Charging Port | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Charging Port | / | Special Function | Charge port door sensor calibration | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | DC-DC | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | DC-DC | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | DC-DC | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Drive Inverter | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Drive Inverter | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Drive Inverter | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Drive Inverter | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Drive Inverter System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Drive Inverter System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Drive Inverter System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Drive Inverter System | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Assist | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Assist | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Assist | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Door Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Door Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Side Memory Seat Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Side Memory Seat Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Side Memory Seat Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Driver Side Memory Seat Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Park Brake | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Park Brake | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Park Brake | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Park Brake | / | Special Function | Service mode | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Park Brake | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Park Brake Monitor | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Park Brake Monitor | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Park Brake Monitor | / | Live data | / | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|----------------------------------|------------|------------------|-----------------------------------|-------------------|------|
| Model X | / | / | / | / | | Electric Power Assisted Steering | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Power Assisted Steering | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Power Assisted Steering | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Power Assisted Steering | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Power Assisted Steering | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program | / | Special Function | Brake bleeding | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program | / | Special Function | Steering angle sensor calibration | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program 2 | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program 2 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program 2 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Electric Stability Program 2 | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | High Voltage Battery System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | High Voltage Battery System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Left Radar | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Left Radar | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Liftgate Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Liftgate Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger 6 | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger 6 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger 6 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger 6 | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger 6 | / | Special Function | Check fast charge disabled | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|-----------------------------------|------------|------------------|--|-------------------|------|
| Model X | / | / | / | / | | Master Charger 6 | / | Special Function | Clear fast charge disabled | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger PH1 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger PH1 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger PH2 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger PH2 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger PH3 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger PH3 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger Relay | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger Relay | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Master Charger Relay | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Occupant Classification System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Occupant Classification System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Occupant Classification System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Occupant Classification System | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Occupant Classification System | / | Special Function | Occupant Classification System (OCS) reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Park Assist System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Park Assist System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Park Assist System | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Park Assist System 2 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Park Assist System 2 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Passenger Side Memory Seat Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Passenger Side Memory Seat Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Passenger Side Memory Seat Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Passenger Side Memory Seat Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Pedal Monitor | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Pedal Monitor | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Pedal Monitor | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Pedal Monitor | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Positive Temperature Coefficient | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Positive Temperature Coefficient | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Potentiometer System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Potentiometer System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|-------------------------------|------------|------------------|----------------------------------|-------------------|------|
| Model X | / | / | / | / | | Rear Driver Door Handles | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Rear Driver Door Handles | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Remote Climate Control Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Remote Climate Control Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Remote Climate Control Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Restraints Controller Module | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Restraints Controller Module | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Restraints Controller Module | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Restraints Controller Module | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Restraints Controller Module | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Right Radar | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Right Radar | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Security Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Security Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger PH1 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger PH1 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger PH2 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger PH2 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger PH3 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger PH3 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Sunroof Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Sunroof Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air Suspension Leveling High | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air Suspension Leveling Low | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air Suspension Leveling Standard | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air suspension measure pressures | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|--------------------------------|------------|------------------|---|-------------------|------|
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Reset air suspension crash flag | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air suspension leveling - very high | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Air suspension leveling - very low | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Finish Service mode for air suspension | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tesla Air Suspension System | / | Special Function | Tesla Air Suspension (TAS) service mode | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Thermal Controller | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Thermal Controller | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Thermal Controller | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Thermal Controller | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Thermal Controller | / | Special Function | Start refill or drain | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Thermal Controller | / | Special Function | Stop refill or drain | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Thermal Controller | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Thermal Controller | / | Special Function | Perform 'Coolant air purge' | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tuner | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tuner | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tyre Pressure Monitor System | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tyre Pressure Monitor System | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tyre Pressure Monitor System | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tyre Pressure Monitor System | / | Special Function | Read TPMS sensor ID | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tyre Pressure Monitor System | / | Special Function | Write TPMS sensor ID | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Tyre Pressure Monitor System | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | eFUSE | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | eFUSE | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | eFUSE | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | eFUSE | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | iBooster | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | iBooster | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | iBooster | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | iBooster | / | Trouble codes | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | iBooster | / | Live data | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (2nd Row Center) | / | ECU information | / | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|--------------------------------------|------------|------------------|----------------------------------|-------------------|------|
| Model X | / | / | / | / | | Body Controls (2nd Row Center) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (2nd Row Center) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (2nd Row Left) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (2nd Row Left) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (2nd Row Left) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (2nd Row Right) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (2nd Row Right) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (2nd Row Right) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Central) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Central) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Central) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Central) | / | Special Function | Reset remote unlock security key | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Central) | / | Special Function | Calibrate steering column | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Falcon Driver) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Falcon Driver) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Falcon Driver) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Falcon Passenger) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Falcon Passenger) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Falcon Passenger) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Driver Door) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Driver Door) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Driver Door) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Driver Door) | / | Special Function | Driver - extend | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Driver Door) | / | Special Function | Driver - retract | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Driver Door) | / | Special Function | Driver - stop | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Passenger Door) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Passenger Door) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Passenger Door) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Passenger Door) | / | Special Function | Passenger - extend | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Passenger Door) | / | Special Function | Passenger - retract | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front Passenger Door) | / | Special Function | Passenger - stop | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front) | / | ECU information | / | Above Tesla_V1.00 | / |

| Vehicle Model | Year | Engine | Chassis | Series | Vehicle Type | System | Sub-system | Function | Sub-function | Version | Note |
|---------------|------|--------|---------|--------|--------------|-------------------------------------|------------|------------------|-----------------------|-------------------|------|
| Model X | / | / | / | / | | Body Controls (Front) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Front) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear Driver Door) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear Driver Door) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear Driver Door) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear Passenger Door) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear Passenger Door) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear Passenger Door) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear) | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear) | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear) | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Body Controls (Rear) | / | Special Function | Rear wing calibration | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Lower Right Capacitive Sensor 1 | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Lower Right Capacitive Sensor 1 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Lower Right Capacitive Sensor 1 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Lower left Capacitive Sensor 1 | / | ECU information | / | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Lower left Capacitive Sensor 1 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Lower left Capacitive Sensor 1 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Upper Right Capacitive Sensor 1 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Upper Right Capacitive Sensor 1 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Upper left Capacitive Sensor 1 | / | Special Function | Hard Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Upper left Capacitive Sensor 1 | / | Special Function | Soft Reset | Above Tesla_V1.00 | / |
| Model X | / | / | / | / | | Slave Charger 6 | / | Live data | / | Above Tesla_V1.00 | / |

ABOUT

About Autel
 Latest News & Resources
 Contact Us

SUPPORT

Tech Support
 Forum
 FAQs
 Update Info
 Downloads
 Training Videos
 Warranty & Return
 Vehicle Coverage

LEGAL

Terms of Use
 Privacy Policy

CONTACT US

Phone: 0086-755-8614 7779 (China)
 1-855-288-3587 Mon-Fri, 9am-9pm EST (US)
 Email: support@autel.com (China Support)
 ussupport@autel.com (US Support)
 Career Opportunities: careers@autel.com

JOIN THE AUTEL EMAIL LIST

Subscribe 

AUTEL

© Intelligent Technology Corp., Ltd.
 2004-2020. All Rights Reserved.



Language 