

## DLS-TP400 USER'S MANUAL



## CONTENTS

Safety Precautions.....	2
Packing List.....	3
Standard Tools and Accessories.....	4
Display Desktop Base Installation.....	5
Cigarette Lighter Bracket Installation.....	6
Display Power On.....	7
USB Charging Socket.....	8
External Sensor Installation.....	9
External Sensor Exploded View.....	10
A: External Sensor Battery Replacement.....	11
B: External Sensor Battery Replacement.....	12
Leakage Reasons of Nonstandard Tire Valve.....	13
Internal Sensor Installation.....	14
Driving Checking .....	16
Display Functions.....	16
Display Instructions .....	18
LCD Display Description.....	18
Buttons Instructions.....	19
Voltage Query.....	19
Enter Setting Mode.....	20
Exit Setting Mode.....	21
Pressure Unit Setting.....	22
Temperature Unit Setting.....	23
Code Learning .....	24
Exchange Tire Position.....	26
High Temperature Alarm Value Setting (Factory Default 65 °C) .....	28
Front Tire High Pressure Alarm Value Setting (Factory Default 46 Psi) .....	29
Front Tire Low Pressure Alarm Value Setting (Factory Default 26 Psi) .....	30
Rear Tire High Pressure Alarm Value Setting (Factory Default 46 Psi).....	31
Rear Tire Low Pressure Alarm Value Setting (Factory Default 26 Psi) .....	32
FAQ.....	33


## Safety Precautions


Before installing this system, please read below notes carefully:

1. Display should be installed in proper place which will not block driver's view.
2. Make sure the display bracket stick strongly in case of falling off when driving.
3. After installing sensors, please check if the tire is leaking with soapsuds when needed.
4. Take note of blow-out when tire pressure is too high and be careful of fuel consumption and balance when it is too low.
5. This system can detect the tire in real time, but can not prevent any tire accident happening, choosing good quality tire is the same important as using our product to make sure the tire pressure in normal range.
6. Secure the safety when checking the tire pressure and temperature in driving.
7. The tire pressure will become a little higher or lower when temperature is changing when driving, this is normal.


### Notes and Statement

- This system is only suitable for vehicle that tire pressure is no more than 51Psi, which with 12V power.
- The tire safety can no be only relied on this system, vehicle user should inspect the tire regularly in case of nail sticking or any breaking.
- Please park the vehicle and check as soon as the system is warning.
- This system can not predict the suddenly damage by outside force.
- Please don't operate this system when driving.
- The display can only work normally when power is on.
- The sensor lifetime is related to vehicle driving mileage, and it can be shortened when working under -20°C temperature.
- The tire temperature will get higher when driving, and the tire pressure will be 1-4 Psi higher accordingly.
- Please park the vehicle properly, our company do not take responsibility of sensor stolen.


 It is recommend that install display and power on before sensors.

 Display and 4 sensors are already learned with each other before leaving the factory, no need to do code learning again after installation.


## Packing List

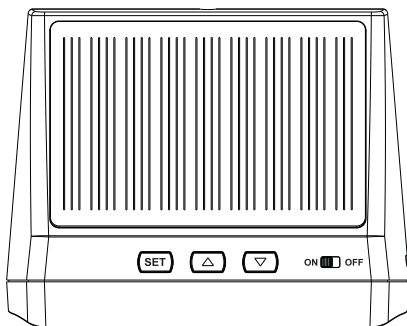



Display

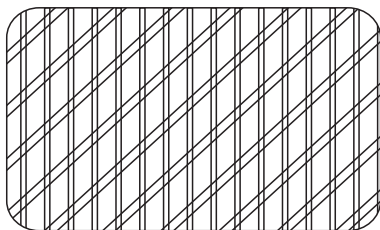

Skid pad

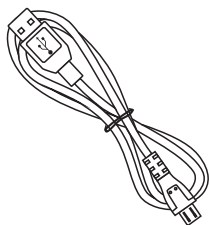


USB charging cable

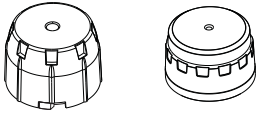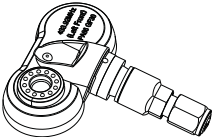
(External) Sensor X4	(Internal) Sensor X4
 <p data-bbox="225 1143 249 1170">A</p> <p data-bbox="415 1143 439 1170">B</p>	
<p>*Sensor X4 (External or Internal depend on user's purchase)</p>	

## Standard Tools and Accessories


### A: (External) Tools and Accessories

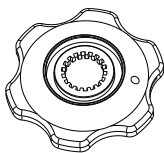

Uncap Wrench  
(for replacing battery)

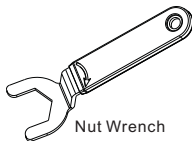

Nut Wrench

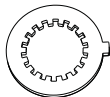

Anti-dismantle  
Locking Plate  
2pcs(for backup)

### B: (External) Tools and Accessories



Combination Wrench

- ① for locking the sensor with hexagonal nut
- ② For fixing the sensor base when unscrew the sensor cover to replace battery



Hexagonal Nut 5pcs (one for backup)



**Ring Needle** ( for replacing the silicon seal ring)


- ① for pulling out the silicon seal ring
- ② for setting the silicon seal ring



Silicon Seal Ring 4pcs(for backup)

If the silicon seal ring is damaged, please replace it by the backup ring for avoiding leakage.  
As shown in page 11 picture 3 - Replace Sensor Battery.

### (Internal) Tools

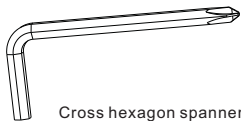


Cross hexagon spanner

\* Tools (External or Internal depend on user's purchase)


## Display installation

- 1 Display monitor can be placed on instrument desk or front of windshield.

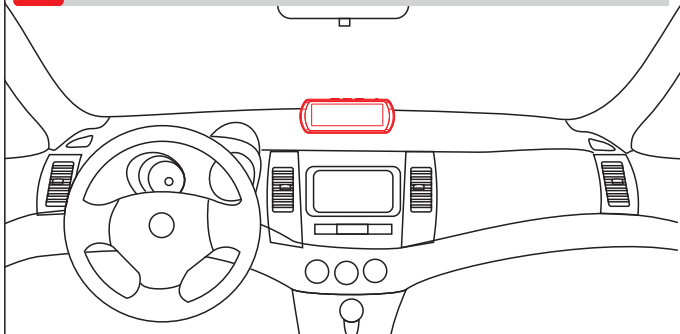


Note: Please put display far away from metal device, as well as DVR or DVD.

- 2 Turn switch from OFF to ON in the top of display.

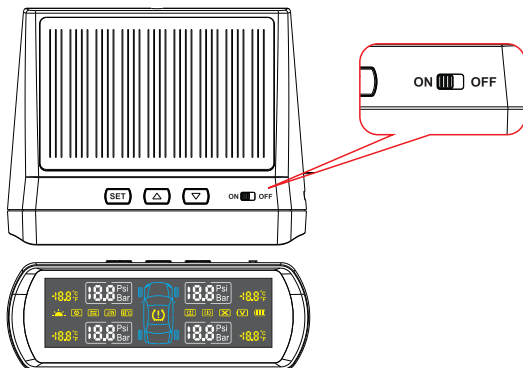


## External Sensor Installation


- 1** Backout dustproof cap of tire valve.

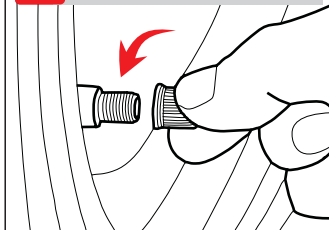


- 2** Screw-in the hexagonal nut.

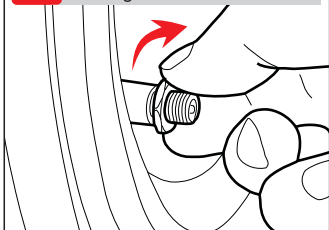


- 3** Screw-in the sensor in proper tire according to the mark in the shell.

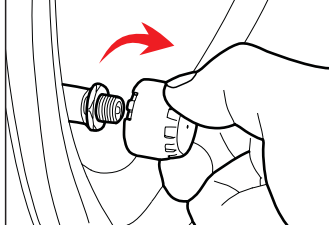

- 4** Tighten the sensor by nut wrench in reverse direction.

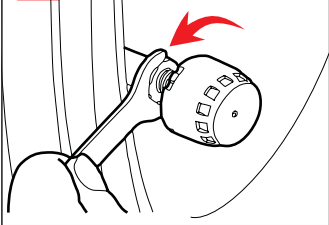


- 5** Check if it is leaking with soapsuds.

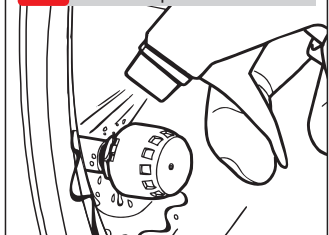

\* Display and 4 sensors are already learned with each other before leaving the factory, no need to do code learning again after installation.


## External Sensor Exploded View

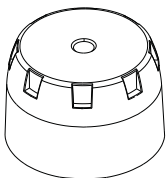


cover



Button Battery CR1632

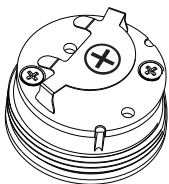

Sensor

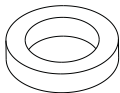

Silicon Seal Ring

### External sensor Technical Parameter

Sensor Weight: <10g

Pressure Range: 0Psi-51Psi / 0Bar-3.5Bar

Battery Model: CR1632

Battery Lifetime: >3 years

Static Current: < 0.7 $\mu$ A

Operating Current: < 12mA

Operating Temperature: -40 $^{\circ}$ C ~ +125 $^{\circ}$ C

Pressure Error:  $\pm$ 1Psi /  $\pm$ 0.1Bar


Temperature Reading Accuracy:  $\pm$ 2 $^{\circ}$ C

Operating Humidity: 5~98%




## A: External Sensor Battery Replacement


- 1** Loosen the hexagonal nut.

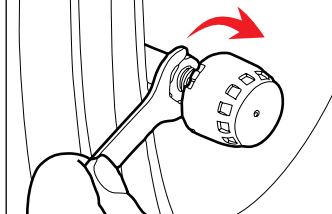

- 2** Backout the sensor.

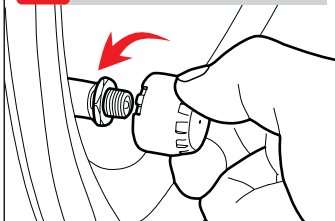


- 3** Take out the anti-dismantle locking plate.

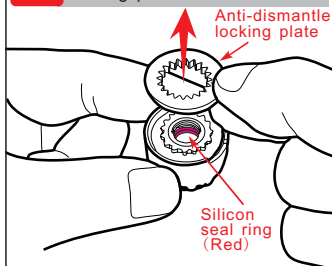


- 4** Backout the cover with uncap wrench



- 5** Replace the new button battery

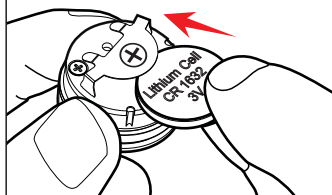


- 6** Assemble the sensor in reverse operation.

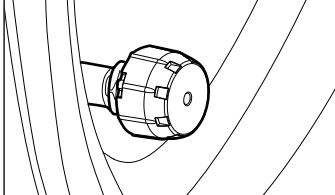


## B: External Sensor Battery Replacement

\* No need to take out the sensor from tire if it is installed already, just unscrew the sensor cover from the valve to replace battery


**1** Back-out the sensor cover in a counterclockwise direction

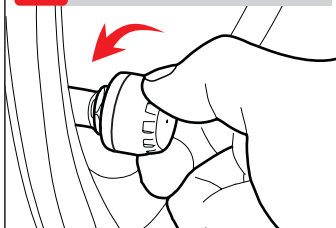


**2** The uncovered sensor is as follow picture

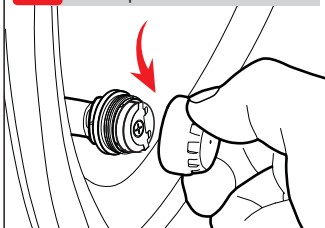


**3** Replace the new button battery. (Note the battery polarities)

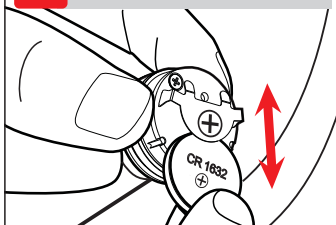


**4** Put back the sensor cover and tighten in clockwise direction.

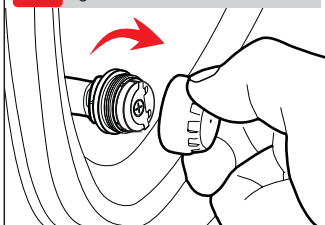

**5** Battery replaced successfully.

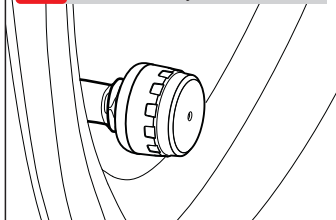


If the sensor is not installed in tire valve, please use the combination wrench to fix the sensor base, and then unscrew the sensor cover.

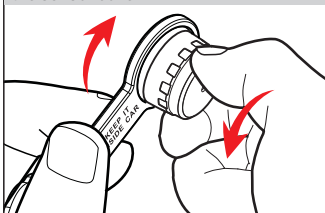

## Leakage Reasons of Nonstandard Tire Valve

### Standard Valve

- The valve core is even with the edge.
- The valve thread length  $\geq 9\text{mm}$

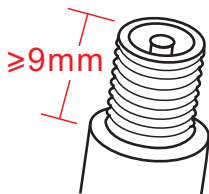


### Leakage Reason 1 of Nonstandard Tire Valve

The breach in the valve may cause the leakage, please replace it with a standard valve.




### Leakage Reason 2 of Nonstandard Tire Valve

If the valve core is lower than edge, please adjust it with nut wrench.

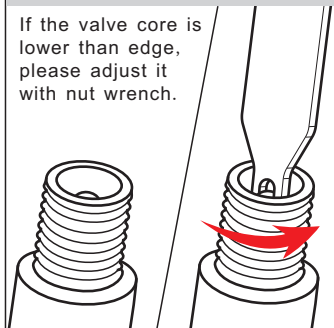

### Leakage Reason 3 of Nonstandard Tire Valve


If the valve core is higher than edge, please adjust it with nut wrench.

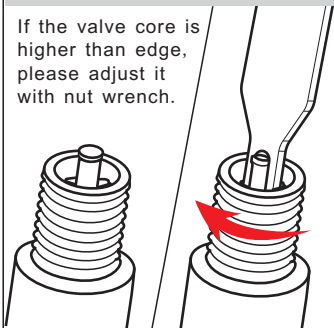

## Internal Sensor Installation


**1**

Lift the car body,  
take out the tire.

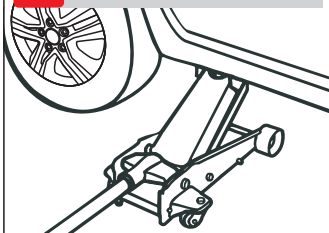


**2**

Take out the lead of the  
wheel hub.

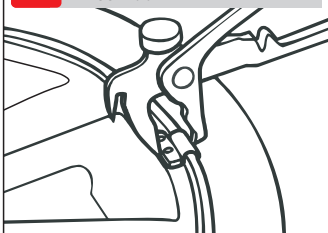


**3**

Divide the tire from wheel hub  
with tire changer.

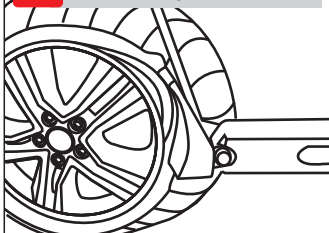


**4**

Cut the rubber in bottom of  
hub valve.

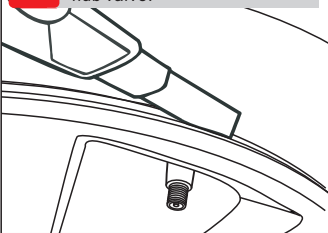


**5**

Pull out the original valve  
and clean it.

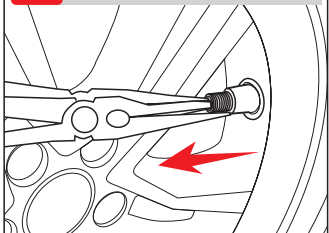

**6**


Install the sensor in the valve and  
tighten the screw, then set valve  
in the hub valve hole and tighten  
the lock nut.

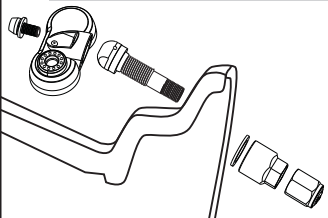

## Internal Sensor Installation


**7**

**Sensor Adjustment**

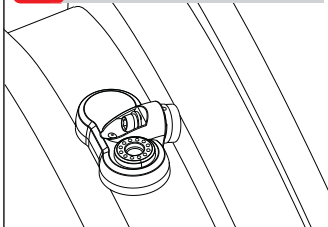

**8**

**Adjust the angle of sensor and hub, then tighten the screw.**

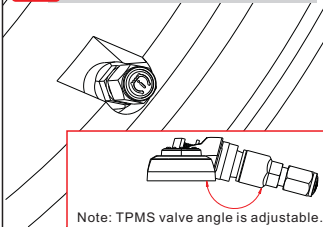


**9**

**Install the tire and hub, and then pump up.**



**10**

**Balance the tires and set the lead.**

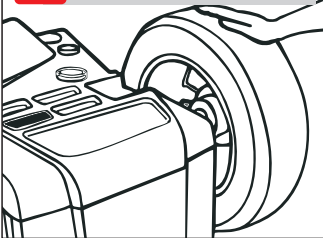

### Internal Sensor Technical Parameter

Operating Temperature:  $-40^{\circ}\text{C} \sim +125^{\circ}\text{C}$

Operating Humidity: 5 ~ 98%

Sensor Weight: 43g (24g excluding the valve)

Sensor Size: 60.5\*30\*20mm

Battery Lifetime: > 6 years

Pressure Range: 0 ~ 51Psi (0 ~ 3.5Bar)

Temperature Range:  $-40^{\circ}\text{C} \sim +90^{\circ}\text{C}$


Working Frequency: FSK 433.92MHz

\* Display and 4 sensors are already learned with each other before leaving the factory, no need to do code learning again after installation.


## Driving Checking

- 1** When the driving speed is up to 15km/h, the tire pressure and temperature data will be updated automatically.

**>15km/h**

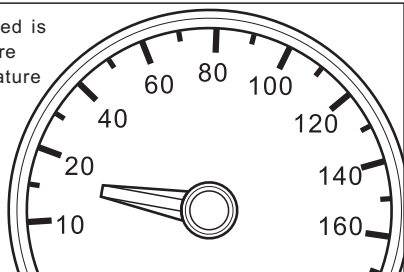


- 2** If all the 4 tire pressure and temperature data is shown, it means the system installed and working successfully.

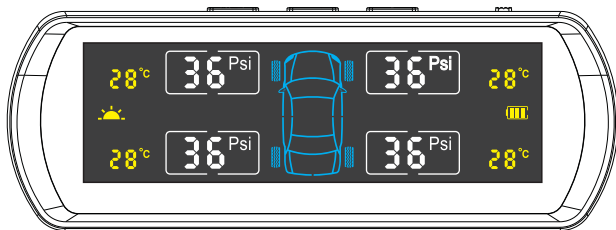

## Display Functions


### Parking Display

Car ignition ON, display shows all 4 tire pressure values, and temperature as follow:

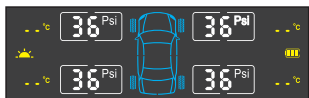


### Driving Display

When the driving speed is up to 15km/h, the tire pressure and temperature data will be updated automatically.

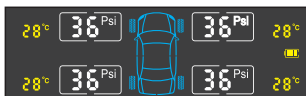


### Sensor Disabled Bi-

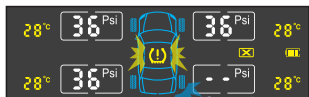

### High Temperature Warning Bi-Bi-

The tire temperature is higher than 65°C.  
Temperature display range: -40°C ~ +90°C

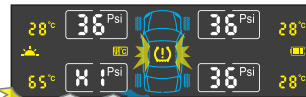


### Sensor Battery Run Out of Power Bi--Bi--

External sensor battery lifetime is over 3 years.  
Internal sensor battery lifetime is over 6 years.



### Leakage Warning Bi-Bi-Bi-Bi-Bi-

It means the tire may be stick by nail or aged.

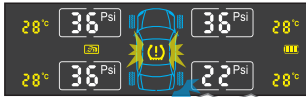

### Abnormal Pressure Warning



Above 46Psi: Bi-Bi-Bi-Bi-  
Below 26Psi: Bi-Bi-Bi-


The pressure is out of normal range 26-46Psi ( Factory Default Pressure Range)




## Display Battery Charging

### Display Battery Power Indication

The icon  shows battery is full, and  shows battery is low, please charge it by sunshine or using the car charger. When the battery is full, display can work about 1 month.

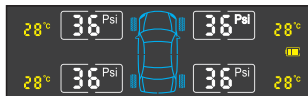

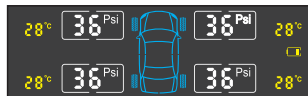


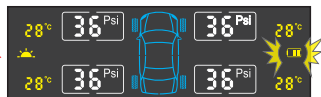
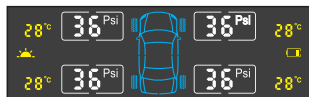
Battery Full



Battery Low


### Solar Charging

When the display is charged by sunshine, icon  shows on, which means the battery is charging, and the battery icon keep flashing from  to .




### Car Charger Charging

When the weather is cloudy or rainy, the display can be charged by car charger, there is a charger port in side of the display.

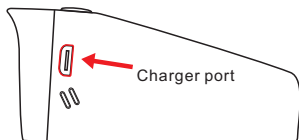


Input Voltage: 5V

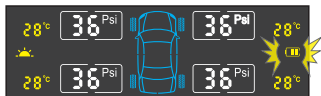

the battery icon keep flashing from  to  when the display is charging



## Display Instructions

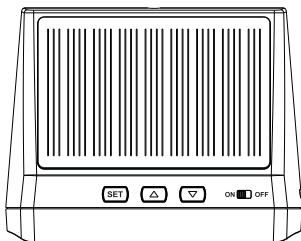


### Display Technical Parameters

Input Voltage:  $12 \pm 3V$   
 Operating Current:  $<40mA$   
 Operating Temperature:  $-40^{\circ}C \sim +85^{\circ}C$   
 Operating Humidity:  $5 \sim 98\%$

- SET** SET and confirm button
- ▲** UP button - Forward
- ▼** DOWN button-Back
- ON/OFF** Power switch

\* Press SET button and hold on 2 seconds to enter setting mode or confirm and exit.

## LCD display description

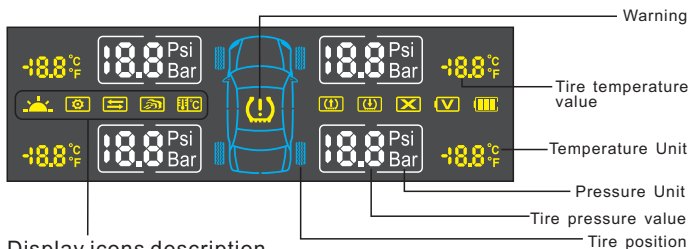


## Display icons description

	Solar charging icon (show on when the display is charged by sunshine)		High Pressure Warning (show icon when tire pressure is higher than the set value)
	Code learning of sensor and display		Low Pressure Warning (show icon when tire pressure is lower than the set value)
	Exchange the tire position in display when tires exchanged, no need to exchange sensors.		Sensor Disabled (show icon when any of the sensors is disabled)
	Leakage Warning (show icon when tire is leaking)		Low Power Warning (show icon when the sensor battery is run out of power)
	High Temperature Warning (show icon when tire temperature is out of the set range)		Battery icon (show display battery power)


## Buttons Instructions

Under non setting mode, short press UP/DOWN button is invalid.


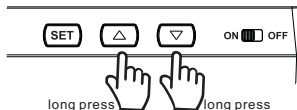


Press UP + DOWN buttons together and hold on until it beep twice, system return to factory default setting.


### Under setting mode

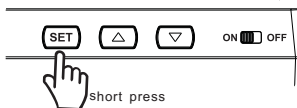


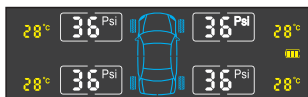
Press SET button to enter the current setting item or confirm and exit. (exclude the exchanging mode)

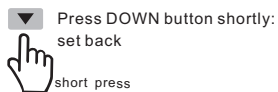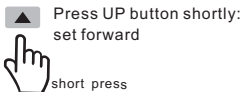


### Voltage Query

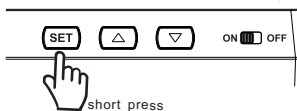

In the main interface, press SET button shortly to check the battery voltage, the icon “” show up as follow picture, and it will return to the main interface after 20 seconds automatically.



Main Interface

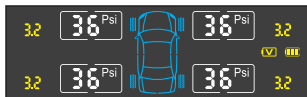



Voltage Query

## Enter Setting Mode

- 1** Under non setting mode, press SET button and hold on until it beep once to enter setting mode



- 2** and switch by pressing UP/DOWN buttons circularly as follow:

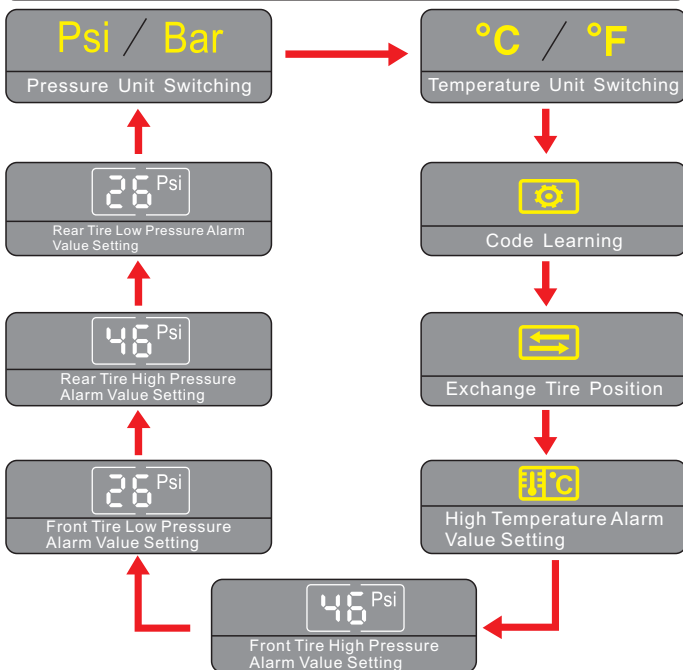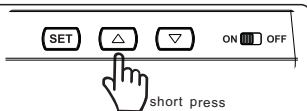


## Exit Setting Mode


- 1** Under any mode, press SET button and hold on until it beep once, the setting will be confirmed and exit.



- 2** Under any mode, if there is no operation within 20 seconds the system will confirm and exit the current mode automatically (not including code learning and exchange tire position mode).

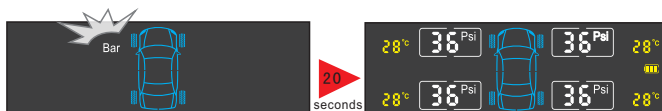

- 3** Under code learning mode:

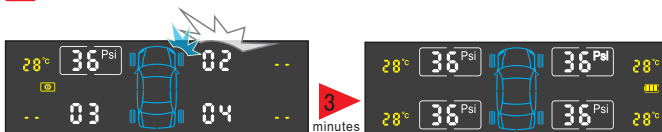

- If there is no operation and code learning signal within 3 minutes, the system will confirm and exit automatically.




- If there is no operation and code learning signal after 20 seconds when the fourth sensor is learned, the system will confirm and exit automatically.



## Pressure Unit Setting

1. Choose pressure unit setting mode, the display shows pressure unit Psi and Bar.



\* The factory default pressure unit is Psi.

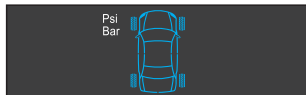

2. Press SET button shortly until it beep once and then release to enter pressure unit setting, the current unit will flash.

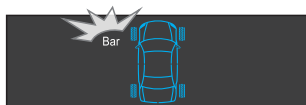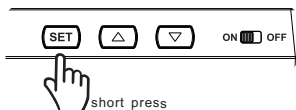

3. Press UP/DOWN button to switch the pressure unit.

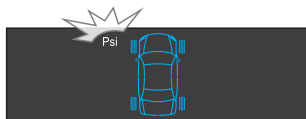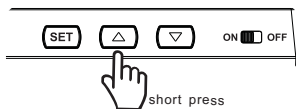


4. Press SET button shortly until it beep once and then release to confirm the setting and exit the current mode.





## Temperature Unit Setting



1. Choose temperature unit setting mode, the display shows temperature unit °C and °F.

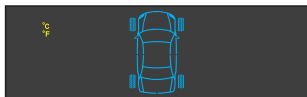


2. Press SET button shortly until it beep once and then release to enter temperature unit setting, the current unit will flash.

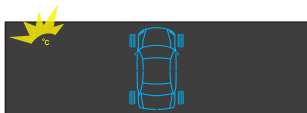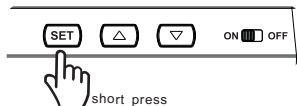

3. Press UP/DOWN button to switch the temperature unit.

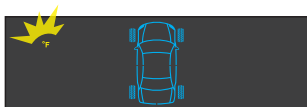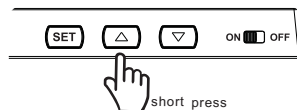

4. Press SET button shortly until it beep once and then release to confirm the setting and exit the current mode.


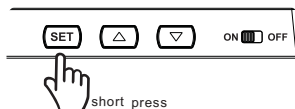


## Code Learning


1. Choose code learning mode, the display shows icon 



2. Press SET button shortly until it beep once and then release, the display shows "01-02-03-04" and 01 icon starts to flash, it means the system enter the code learning mode.

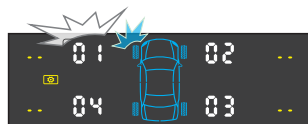
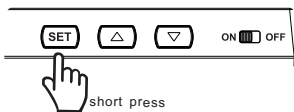


3. Install the sensor and the display will show current tire pressure and temperature.

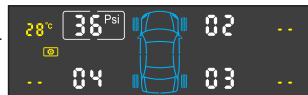


## Code Learning

4. Press UP/DOWN button to choose the tire position, the current values and icons will flash.

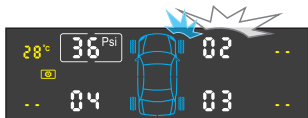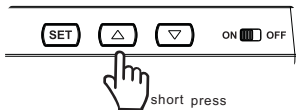


5. Install the current position sensor and the display will show the tire pressure and temperature.

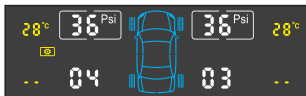


6. If there is more than one sensor need to be learned, repeat step 4 and 5.





## Exchange Tire Position





1. Choose exchange tire position mode, the display shows icon 

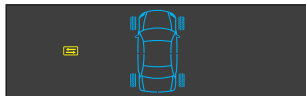

2. Press SET button shortly until it beep once and then release, the display shows all tire position information (01 – front left, 02- front right, 03-rear right, 04-rear left), and the current tire number flash.

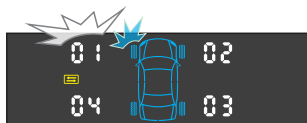
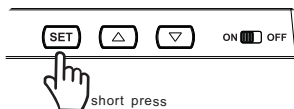


3. Press UP/DOWN button to choose the exchanged tire position, and the current tire number flash.

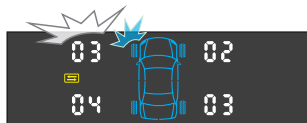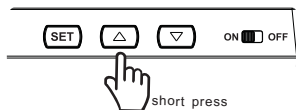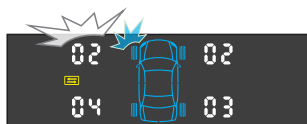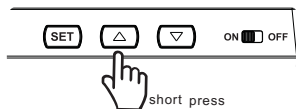


## Exchange Tire Position


4. Press SET button shortly until it beep once and then release to next position.

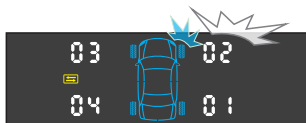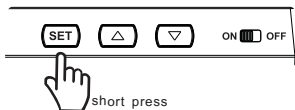



5. Press SET button and hold on until it beep once to confirm and exit the setting mode.

## High Temperature Alarm Value Setting (Factory Default 65°C)



1. Choose high temperature alarm value setting, the display shows icon 

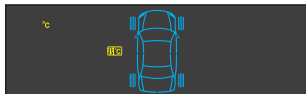


2. Press SET button shortly until it beep once and then release to enter high temperature alarm value setting, the current value flash.

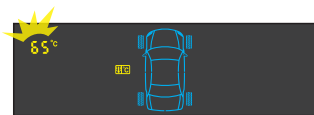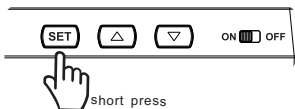


3. Press UP/DOWN button to adjust the value, by each press the value increase / decrease 1°C and will be circular between 60°C and 90°C.

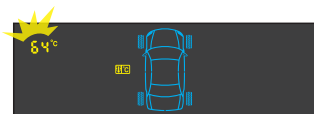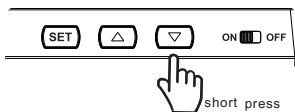


4. Press SET button shortly until it beep once and then release to confirm the setting and exit the current mode.


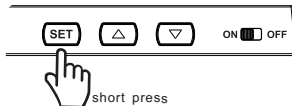


## Front Tire High Pressure Alarm Value Setting (Factory Default 46Psi)



1. Choose high pressure alarm value setting, the display shows icon  and the current value on top-left.

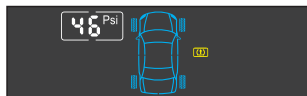


2. Press SET button shortly until it beep once and then release to enter high pressure alarm value setting, the current value flash.

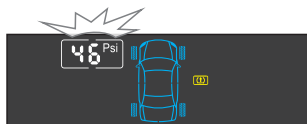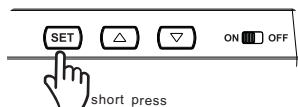


3. Press UP/DOWN button to adjust the value, by each press the value increase / decrease 1Psi and will be circular between 36Psi and 51Psi.

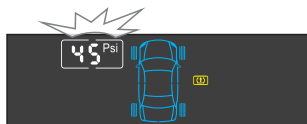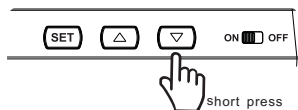


4. Press SET button shortly until it beep once and then release to confirm the setting and exit the current mode.


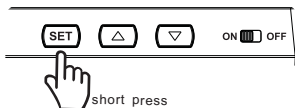


## Front Tire Low Pressure Alarm Value Setting (Factory Default 26Psi)



1. Choose low pressure alarm value setting, the display shows icon  and the current value on top-left.

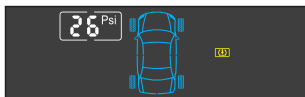


2. Press SET button shortly until it beep once and then release to enter low pressure alarm value setting, the current value flash.

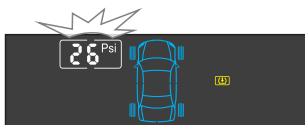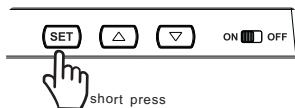


3. Press UP/DOWN button to adjust the value, by each press the value increase / decrease 1Psi and will be circular between 11 Psi and 35 Psi.

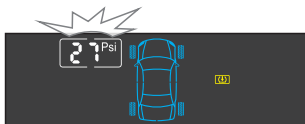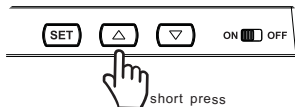


4. Press SET button shortly until it beep once and then release to confirm the setting and exit the current mode.

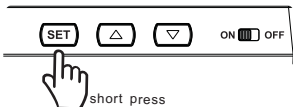


## Rear Tire High Pressure Alarm Value Setting (Factory Default 46Psi)



1. Choose high pressure alarm value setting, the display shows icon  and the current value on lower-left.

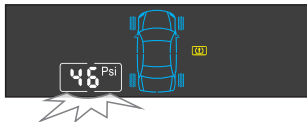


2. Press SET button shortly until it beep once and then release to enter high pressure alarm value setting, the current value flash.

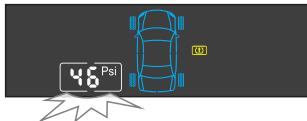


3. Press UP/DOWN button to adjust the value, by each press the value increase / decrease 1Psi and will be circular between 36Psi and 51Psi.

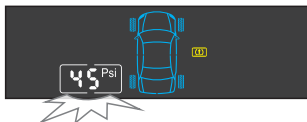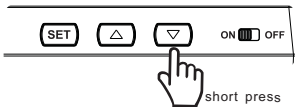


4. Press SET button shortly until it beep once and then release to confirm the setting and exit the current mode.


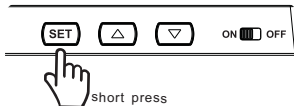


## Rear Tire Low Pressure Alarm Value Setting (Factory Default 26Psi)


1. Choose low pressure alarm value setting, the display shows icon  and the current value on lower-left.

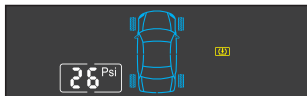


2. Press SET button shortly until it beep once and then release to enter low pressure alarm value setting, the current value flash.

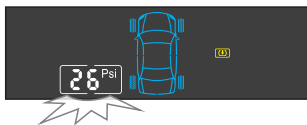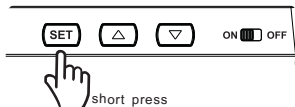

3. Press UP/DOWN button to adjust the value, by each press the value increase / decrease 1Psi and will be circular between 11Psi and 35Psi.

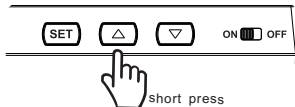

4. Press SET button shortly until it beep once and then release to confirm the setting and exit the current mode.

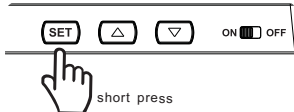

**Sensor Interface Leakage**

It is usually caused by nonstandard tire valve, please replace it with a standard one in tire store.

**Sensor Missing**

Please buy sensor from our company and reset it.

**Battery Out of Power**

Please replace a new button battery CR1632

**Tire Position Exchange**

After exchanging the tires position, please set the tire position by display exchanging tire position mode.

**Display not Working**

- 1 . Check if DC interface is connected
- 2 . If there is no 12V power in cigarette lighter holder, please check related fuse.
- 3 . Check if it is poor connection between the cigarette lighter top and the lighter holder.
- 4 . If the problem still exists after above checking, please contact the local distributor.

**Display Tire Data Shown Discontinuously**

- 1 . Check if there is DVR, e-dog or parking sensor nearby, please move them to 20cm far away from the display.
- 2 . Check if there is connected wires nearby, or if the display set on the car audio speaker, please move the display away from them.

**Sensor Transmission not Good**

- 1 . Check if the sensor is installed in tire and near the display, because the sensor and display wireless transmission distance is limited.
- 2 . Check if the (external) sensor battery CR1632 is installed.
- 3 . Check if the (external) sensor battery polarity is correct.
- 4 . Check if the (external) sensor battery is run out of power, please replace new one if it is.
- 5 . Please reinstall the (external) sensor battery. After taking out the battery, wait for more than 10 seconds to reinstall it back, this will make sure the sensor is reset.
- 6 . Check if there is some sensor from another system mixed in this one. Each sensor has a unique ID code, and the display can only recognize the sensor from this system.
- 7 . If the problem still exists after above checking, please contact the local distributor.

**Display Tire Pressure Show "0" and Warning**

- 1 . Check if the sensor is installed properly.
- 2 . If it is external sensor, please tighten the sensor to the tire valve. Because the sensor can not detect the tire pressure if it is not contacted with valve core.

**Display Show Nothing after Restart**

The sensor can only detect and show new tire pressure and temperature value when the pressure is changed by over 1Psi, so just drive and speed up the car.