

Version: V1.00.000

Revised date: Oct-25-2017

## Important Safety Precautions

**Important:** To avoid personal injury, property damage, or accidental damage to the product, read all of the information in this section before using the product.

- Never collide, throw, or puncture ArtiPad I, and avoid falling, extruding and bending it.
- Do not insert foreign objects into or place heavy objects on your device. Sensitive components inside might cause damage.
- Do not use ArtiPad I in exceptionally cold or hot, dusty, damp or dry environments.
- In places using ArtiPad I may cause interference or generate a potential risk, please turn it off.
- ArtiPad I is a sealed unit. There are no end-user serviceable parts inside. All internal repairs must be done by an authorized repair facility or qualified technician. If there is any inquiry, please contact the dealer.
- Never place ArtiPad I into apparatus with strong electromagnetic field.
- Keep ArtiPad I far away from magnetic devices because its radiations can damage the screen and erase the data stored on ArtiPad I.
- **DANGER:** Do not attempt to replace the internal rechargeable lithium battery. Contact the dealer for factory replacement.
- **CAUTION:** Please use the included battery and charger. Risk of explosion if the battery is replaced with an incorrect type.
- Do not disconnect power abruptly when ArtiPad I is being formatted or in process of uploading or downloading. Or else it may result in program error.
- Do not delete unknown files or change the name of files or directories that were not created by you, otherwise your ArtiPad I software might fail to work.
- Be aware that accessing network resources can leave your ArtiPad I vulnerable to computer viruses, hackers, spyware, and other malicious activities that might damage your device, software or data. It is your responsibility to ensure that you have adequate protection in the forms of firewalls, antivirus software, and anti-spyware software and keep such software up to date.

## Precautions on Using ArtiPad I

Before using this test equipment, please read the following safety information carefully.

- Always perform automotive testing in a safe environment.

- Wear an ANSI-approved eye shield when testing or repairing vehicles.
- The vehicle shall be tested in a well-ventilated work area, as engines produce various poisonous compounds (hydrocarbon, carbon monoxide, nitrogen oxides, etc.)
- Do not connect or disconnect any test equipment while the ignition is on or the engine is running.
- Put blocks in front of the drive wheels and never leave the vehicle unattended while testing.
- Keep the test equipment dry, clean, free from oil, water or grease. Use a mild detergent on a clean cloth to clear the outside of the equipment as necessary.
- Do not drive the vehicle and operate the test equipment at the same time. Any distraction may cause an accident.
- Keep clothing, hair, hands, tools, test equipment, etc. away from all moving or hot engine parts.
- Before starting the engine, put the gear lever in the Neutral position (for manual transmission) or in the Park (for automatic transmission) position to avoid injury.
- To avoid damaging the test equipment or generating false data, please make sure the vehicle battery is fully charged and the connection to the vehicle DLC (Data Link Connector) is clear and secure.
- Automotive batteries contain sulfuric acid that is harmful to skin. In operation, direct contact with the automotive batteries should be avoided. Keep the ignition sources away from the battery at all times.

### **Precautions on Operating Vehicle's ECU**

- Do not disconnect battery or any wiring cables in the vehicle when the ignition switch is on, as this could avoid damage to the sensors or the ECU.
- Do not place any magnetic objects near the ECU. Disconnect the power supply to the ECU before performing any welding operations on the vehicle.
- Use extreme caution when performing any operations near the ECU or sensors. Ground yourself when you disassemble PROM, otherwise ECU and sensors can be damaged by static electricity.
- When reconnecting the ECU harness connector, be sure it is attached firmly, otherwise electronic elements, such as ICs inside the ECU, can be damaged.

## TABLE OF CONTENTS

<b>1 INTRODUCTION .....</b>	<b>1</b>
1.1 PRODUCT PROFILE.....	1
1.2 FEATURES .....	1
1.3 TECHNICAL SPECIFICATIONS.....	2
<b>2 KNOWLEDGE OF ARTIPAD I.....</b>	<b>4</b>
2.1 ARTIPAD I TABLET .....	5
2.1.1 Front & Rear Views .....	5
2.1.2 Top View.....	6
2.3 VCI CONNECTOR (ONLY APPLIES TO 12V CARS).....	7
2.4 PACKAGE LIST .....	8
<b>3 PREPARATIONS .....</b>	<b>9</b>
3.1 CHARGING ARTIPAD I .....	9
3.2 USING BATTERY .....	9
3.3 POWER ON/OFF .....	9
3.3.1 Power on.....	9
3.3.2 Power off.....	9
3.4 TIPS ON FINGER OPERATIONS .....	10
3.5 LOCK & UNLOCK SCREEN .....	10
3.5.1 Lock the screen.....	10
3.5.2 Unlock the screen .....	10
3.6 SCREEN LAYOUT.....	11
3.7 NOTIFICATION PANEL .....	11
3.8 ADJUST BRIGHTNESS .....	11
3.9 SET STANDBY TIME .....	11
3.10 NETWORK SETTING .....	12
3.10.1 Wired Connection.....	12
3.10.2 Connect to a Wi-Fi network .....	12
<b>4 INITIAL USE.....</b>	<b>14</b>
4.1 GETTING STARTED .....	14
4.2 REGISTER & DOWNLOAD DIAGNOSTIC SOFTWARE .....	14

4.2.1 User registration .....	14
4.2.2 Job menu .....	17
4.2.3 Vehicle menu layout .....	19
4.2.4 Diagnostics toolbar.....	21
4.3 DIAGNOSIS METHODS.....	22
4.4 CONNECTIONS .....	22
4.4.1 Preparation.....	22
4.4.2 DLC location .....	23
4.4.3 Vehicle connection .....	23
4.5 BLUETOOTH SETTING .....	24
<b>5 DIAGNOSIS.....</b>	<b>26</b>
5.1 INTELLIGENT DIAGNOSIS.....	26
5.2 LOCAL DIAGNOSIS .....	31
5.2.1 Health Report (Quick Test).....	35
5.2.2 System Scan .....	37
5.2.3 System Selection .....	38
5.3 REMOTE DIAGNOSIS .....	45
5.3.1 Interface Layout .....	45
5.3.2 Add Friends .....	46
5.3.3 Start Instant Messaging.....	47
5.3.4 Launch Remote Diagnosis (Device-To-Device) .....	48
5.3.5 Launch Remote Diagnosis (Device-To-PC) .....	51
5.4 HOW TO VIEW DIAGNOSTIC HISTORY? .....	53
<b>6 SPECIAL (RESET) FUNCTION.....</b>	<b>55</b>
6.1 OIL RESET SERVICE .....	56
6.2 ELECTRONIC PARKING BRAKE RESET.....	56
6.3 STEERING ANGLE CALIBRATION .....	56
6.4 ABS BLEEDING .....	56
6.5 TIRE PRESSURE MONITOR SYSTEM RESET .....	57
6.7 GEAR LEARNING .....	57
6.7 IMMO SERVICE.....	57
6.8 INJECTOR CODING.....	58

6.9 BATTERY MAINTENANCE SYSTEM RESET .....	58
6.10 DIESEL PARTICULATE FILTER (DPF) REGENERATION .....	59
6.11 ELECTRONIC THROTTLE POSITION RESET .....	59
<b>7 SOFTWARE UPDATE .....</b>	<b>60</b>
<b>8 HOW TO FEEDBACK DIAGNOSTIC LOGS?.....</b>	<b>61</b>
<b>9 SENSORBOX (TOOLBOX) .....</b>	<b>63</b>
9.1 PRODUCT SUMMARY .....	63
9.2 STRUCTURE & ACCESSORIES .....	64
9.2.1 Sensorbox structure .....	64
9.2.2 Sensorbox accessories .....	65
9.3 SENSOR SIMULATION .....	65
9.3.1 Connections .....	65
9.3.2 Simulation test.....	66
9.3.3 Precautions on checking vehicle sensor.....	70
<b>10 MULTIMETER (TOOLBOX).....</b>	<b>72</b>
10.1 MAIN MENU.....	72
10.2 TEST SAMPLE .....	73
<b>11 BATTERYBOX (TOOLBOX).....</b>	<b>75</b>
11.1 PRODUCT SUMMARY .....	75
11.2 TEST ENVIRONMENT.....	76
11.2.1 Test environment .....	76
11.2.2 Battery status and description .....	76
11.3 BATTERYBOX STRUCTURE & ACCESSORIES.....	77
11.3.1 Batterybox structure .....	77
11.3.2 Test accessories.....	77
11.4. CONNECTIONS & OPERATIONS.....	77
11.4.1 Connection .....	77
11.4.2 Inside the vehicle test .....	78
11.4.3 Outside the vehicle test .....	81
11.5 PRECAUTIONS ON BATTERY TEST.....	81
<b>12 OSCILLOSCOPE (TOOLBOX).....</b>	<b>83</b>

12.1 INTRODUCTION.....	83
12.2 STRUCTURE & ACCESSORIES .....	84
12.2.1 Scopebox structure .....	84
12.2.2 Scopebox accessories .....	85
12.3 CONNECTION & INITIAL USE .....	86
12.3.1 Connection.....	86
12.3.2 Initial interface introduction.....	86
12.4 OPERATIONS.....	87
12.4.1 Channel selection and attributes setting.....	87
12.4.2 Auto.....	92
12.4.3 View Settings .....	92
12.4.4 Measure .....	93
12.4.5 File management .....	95
12.4.6 Expert reference.....	96
<b>13 AUTOMOTIVE IGNITION WAVEFORM.....</b>	<b>98</b>
13.1 SECONDARY-DISTRIBUTOR IGNITION ANALYSIS.....	98
13.2 SECONDARY-SIMULTANEOUS IGNITION ANALYSIS .....	100
13.3 SECONDARY-DIRECT IGNITION ANALYSIS .....	102
13.4 WAVEFORM ANALYSIS MODE .....	103
<b>14 PERSONAL CENTER .....</b>	<b>109</b>
14.1 MY REPORT .....	109
14.2 MY CONNECTOR .....	111
14.3 DIAGNOSTIC CONNECTOR CONNECTION MANAGEMENT .....	111
14.4 ACTIVATE CONNECTOR.....	112
14.5 FIRMWARE FIX .....	113
14.6 PROFILE .....	113
14.7 CHANGE PASSWORD.....	113
<b>15 SETTINGS.....</b>	<b>114</b>
15.1 UNITS OF MEASUREMENT .....	114
15.2 PRINT INFORMATION.....	114
15.3 PRINTER SET .....	114
15.4 NETWORK TEST.....	116

15.5 ABOUT .....	116
15.6 LOGIN/EXIT FROM CURRENT ACCOUNT .....	116
<b>16 OTHERS.....</b>	<b>117</b>
16.1 EMAIL .....	117
16.1.1 Configure an email account.....	117
16.1.2 Add an email account.....	117
16.2 BROWSER.....	117
16.2.1 Open browser.....	117
16.2.2 Download files.....	118
16.3 SYNCHRONIZATION.....	118
16.3.1 Connect to PC.....	118
16.3.2 Run on PC .....	118
16.3.3 Install an application.....	118
16.4 CLEAR CACHE.....	119
<b>17 FAQ .....</b>	<b>120</b>

# 1 Introduction

## 1.1 Product Profile

ArtiPad I is an evolutionary smart solution for passenger car diagnosis based on the multitask-capable Android operating system.

Using the powerful 8-core 2.0GHz processor and a 12 inch HD capacitive touch screen, combined with the best possible coverage of OEM-level diagnostics, ArtiPad I delivers quick & complete diagnostic functionality which helps to diagnose vehicle issues more efficiently, significantly decrease downtime and increase your revenue.

ArtiPad I also has functions of vehicle diagnosis (Intelligent Diagnosis, Local Diagnosis & Remote Diagnosis), oscilloscope, ignition, sensor, browser and battery test etc. HDMI extending display function is available. As a result, it has strong practicability and high performance-price ratio, which is a helpful assistant for vehicle repair and maintenance.

## 1.2 Features

1. Diagnose:
  - Smart Diagnosis: This module allows you to use the VIN information of the currently identified vehicle to access its data (including vehicle information, historical diagnostic records) from the cloud server to perform quick test.
  - Local Diagnosis: VINscan quick test and manual diagnosis are available. Diagnosis functions include: Read DTCs, Clear DTCs, Read Data Stream, Special Functions etc.
  - Remote Diagnosis: This option aims to help repair shops or technicians launch instant messaging and remote diagnosis, making the repair job getting fixed faster.
  - Reset: All kinds of common maintenance and reset items including Oil lamp reset, DPF regeneration, ABS bleeding can be done.
  - One-click Update: Lets you update your diagnostic software online.
  - Diagnostic feedback: Enables you to submit the vehicle issue to us for analysis and troubleshooting.
2. Wi-Fi connection and Ethernet connection are supported.
3. HDMI interface is provided for connecting the external projectors or displays.

4. Equipped with USB port for connecting USB devices and other add-on modules such as Scopebox, Sensorbox and Batterybox.
5. Web browser: Users can make online search and visit any website.

### 1.3 Technical Specifications

#### A. ArtiPad I Tablet

Item	Description
<b>Operating system</b>	Android 5.1
<b>CPU</b>	8-core Processor, 2.0GHz
<b>Display</b>	12 inch touch screen with a resolution of 1920 x 1200P
<b>Memory</b>	2GB
<b>Hard disk</b>	64GB (Expandable to 128GB via memory card)
<b>Connectivity</b>	<ul style="list-style-type: none"> <li>• Ethernet/Wi-Fi (802.11 b/g/n)</li> <li>• USB: 2.0</li> <li>• Bluetooth 2.0</li> </ul>
<b>Camera</b>	2.0MP front-facing camera + 8.0MP rear-facing camera with AF
<b>Sensor</b>	Gravity Accelerometer
<b>Audio Input/Output</b>	<ul style="list-style-type: none"> <li>• Microphone</li> <li>• Speakers</li> <li>• 3.5mm stereo headset jack</li> </ul>
<b>Battery</b>	15000mAh lithium-polymer battery
<b>Operating Temp.</b>	-10°C ~ 55°C(14 ~131°F)
<b>Storage Temp.</b>	-20°C ~ 70°C(-4 ~158°F)

#### B. VCI Connector

Item	Descriptions
<b>Working Voltage</b>	DC 9V ~ 18V
<b>Working Current</b>	About 85mh
<b>Standby Current</b>	About 55mh

<b>Dimension</b>	70mm x 42.5mm x 20mm
<b>Weight</b>	< 100g
<b>Working Temp.</b>	-10°C ~ 55°C(14 ~131°F)
<b>Storage Temp.</b>	-20°C ~ 70°C(-4 ~158°F)
<b>Relative Humidity</b>	20% ~ 90%

## 2 Knowledge of ArtiPad I

There are two main components to the ArtiPad I system.

- ArtiPad I tablet – the central processor and monitor for the system (See Chapter “2.1”).

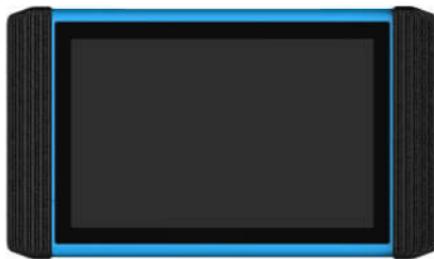


Fig. 2-1 ArtiPad I tablet

- VCI connector – the device for accessing vehicle data (See Chapter “2.3”).



Fig. 2-2 VCI connector

## 2.1 ArtiPad I tablet

### 2.1.1 Front & Rear Views

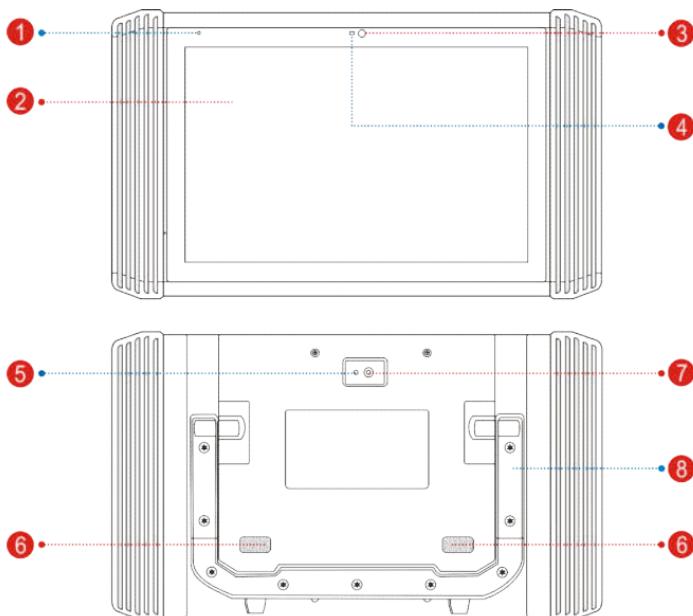


Fig. 2-3 Front & Rear Views

- 
- 1 **Microphone**
- 
- 2 **Touch Screen**
- 
- 3 **Front Camera**
- 
- 4 **Ambient Light Sensor**
- 
- 5 **Camera Flash**
- 
- 6 **Speaker**
- 
- 7 **Rear Camera**
- 
- 8 **Adjustable kickstand** Flip out it to any angle and work comfortable at your desk, or hang it on automotive parts
-

### 2.1.2 Top View

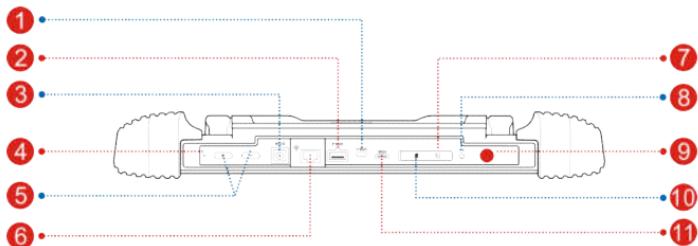


Fig. 2-4 Top View

1	<b>Charging Slot</b>	Only reserved for Micro USB cable.
2	<b>USB2 Port</b>	To connect VCI, USB devices or add-on modules (Scopebox, Sensorbox or Batterybox).
3	<b>DC-IN Interface</b>	To connect the included power adaptor.
4	<b>Reset Switch</b>	
5	<b>VOLUME +/- Key</b>	To adjust the volume.
6	<b>Ethernet port</b>	To connect the Crossover cable for wired network.
7	<b>SIM Card Slot</b>	Only reserved for future use.
8	<b>Earphone Jack</b>	
9	<b>POWER/Screen Lock Key</b>	In Off mode, press it for 3 seconds to turn the handset on.
		In On mode: <ul style="list-style-type: none"><li>♦ Press it to activate the LCD if the LCD is off.</li><li>♦ Press it to turn off the LCD if the LCD lights up.</li><li>♦ Press it for 3 seconds to turn it off.</li><li>♦ Press it for 8 seconds to perform forced shutdown.</li></ul>
10	<b>Memory Card Slot</b>	To insert a memory card for memory extension.

---

**11 HDMI Port**

To connect an external projector or monitor with HDMI interface.

---

## 2.3 VCI Connector (Only applies to 12V cars)

The VCI connector works as a vehicle communication interface device, which is used to read the vehicle data and then send it to the handset via Bluetooth communication or USB connection.

When the 2 communication methods are applied at the same time, ArtiPad I will use the USB communication as the default priority.

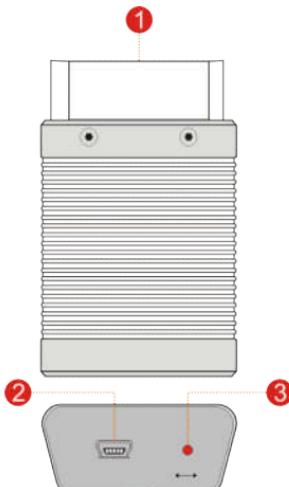


Fig. 2-5 VCI Connector

---

**1 OBD-16 diagnostic connector**

To connect on vehicle's OBD II DLC.

---

**2 Mini USB port**

For connecting it to ArtiPad I via the USB cable.

---

---

**3 Mode Indicators**

There are 3 modes available:

- It illuminates Red while the connector is plugged into the vehicle's DLC.
  - Blue indicates it is working in Bluetooth mode.
-

- It illuminates Green when the connector is connected to ArtiPad I via USB cable.

## 2.4 Package List

Common accessories for each ArtiPad I are same, but for different destinations, the accessories of ArtiPad I may vary. Please consult from the local agency or check the packing list supplied with ArtiPad I together.

No.	Item	Description	Qt.
1	ArtiPad I tablet	For analyzing the vehicle data and indicating the test results.	1
2	VCI connector	For connecting to vehicle's OBD II DLC to access vehicle's live data.	1
3	OBD II extension cable	For connecting the VCI connector for extension purpose.	1
4	OBD I adaptor	For connecting the non-16pin connector to the VCI connector.	1
5	Cigarette lighter cable	Optional. To supply power to the non-16pin connector through connection to the vehicle's cigarette lighter receptacle.	1
6	Battery clamps cable	Optional. To supply power to the non-16pin connector through connection to the vehicle's battery.	1
7	Power adaptors	1 for America area and 1 for Europe area	2
8	USB cable	For connecting the VCI connector to ArtiPad I to perform vehicle diagnosis.	1
9	Password envelope	A piece of paper bearing Product S/N and Activation Code, which is needed for product registration	1
10	Non-16pin adaptor cable kit	Optional. For connecting to Non-OBD II vehicle DLC.	1

## 3 Preparations

### 3.1 Charging ArtiPad I

Choose the included power adaptor to charge the ArtiPad I tablet: Connect one end of the power adaptor to DC IN port of the tablet, and the other end to the AC outlet.

If  appears on the screen, it indicates it is being charged. If the logo changes into , it indicates that the battery is fully charged. Disconnect the power adaptor from the AC outlet.

### 3.2 Using Battery

- If the battery remains unused for a long period of time or the battery is completely discharged, it is normal that the tool will not power on while being charged. Please charge it for a period of 5 minutes and then turn it on.
- Please use the included power adaptor to charge your tool. No responsibility can be assumed for any damage or loss caused as a result of using power adaptors other than the one supplied.
- While ArtiPad I has low battery, a beep will sound. If it is very low, ArtiPad I will be switched off automatically.

### 3.3 Power On/Off

#### 3.3.1 Power on

Press [POWER] to turn the tool on.

Note: If it is the first time you have used this tool or the tool remains idle for a long period of time, the tool could fail to turn on. Please charge the tool for a minimum of 5 minutes and attempt to turn on again.

#### 3.3.2 Power off

Press [POWER] for 3 seconds, an option menu will pop up on the screen. Tap “Power off” to turn the tool off.

To perform a forced shutdown, press [POWER] for more than 8 seconds until the screen goes dark.

### 3.4 Tips On Finger Operations

	<b>Single-tap:</b> To select a item or run a program.
	<b>Double-tap:</b> To zoom in so that the text on a webpage appears in a column that fits your device's screen.
	<b>Long press:</b> Tap and hold on the current interface or area until a contextual menu pops up on the screen, and then release it.
	<b>Slide:</b> To jump to different pages.
	<b>Drag:</b> Tap the desktop icon and drop it to other location.
	<b>Spread apart/pinch together:</b> To zoom in manually, place two fingers on the screen and then spread them apart. To zoom out, place two fingers apart on the screen and then pinch them together.

### 3.5 Lock & Unlock Screen

Many screen lock modes are available on ArtiPad I.

Note: You are recommended to set screen lock as “None” since ArtiPad I is a frequently used diagnostic tool.

#### 3.5.1 Lock the screen

- When it is ON, press [POWER] once to lock the screen;
- The system will lock the screen automatically after ArtiPad I remains idle over the preset standby time.

#### 3.5.2 Unlock the screen

Press [POWER] to activate the screen and drag the lock to “Unlock” position.

Note: If you define as unlock using the pattern, you have to draw the right target pattern to unlock it.

### 3.6 Screen Layout

On-screen keys and status bar are as follows:



Fig. 3-4

- 
- 1 Tap to visit the official website.
  - 2 Tap to capture the current screen and all captured screenshots are stored in the Screenshots folder.
  - 3 shows whether the diagnostic connector is connected properly or not. Once it is properly connected, it will
  - 4 Tap to display a list of applications that are currently running or recently used. To open an application, tap it. To remove an application, swipe it upwards.
  - 5 Tap to jump to the Android System's home screen.
  - 6 Tap to return to the previous screen or exit the application.
- 

### 3.7 Notification Panel

The notification bar is used to display some activities, such as new message, to do list and running tasks. You can also open the notification bar to view the reminder or activity notification.

### 3.8 Adjust Brightness

- Tips: Reducing the brightness of the screen is helpful to save the power of ArtiPad I.
1. On the home screen, tap **Settings -> Display -> Brightness level**.
  2. Drag the slider to adjust it.

### 3.9 Set Standby Time

If no activities are made within the defined standby period, the screen will be locked automatically and the system enters sleep mode to save power.

1. On the home screen, tap **Settings** -> **Display** -> **Sleep**.
2. Choose the desired sleep time.

## 3.10 Network Setting

There are 2 kinds of network connection available on ArtiPad I.

### 3.10.1 Wired Connection

1. Connect the Ethernet cable to ArtiPad I directly.
2. On the home screen, tap **Settings** -> **Ethernet**, and slide the switch to On.

### 3.10.2 Connect to a Wi-Fi network

ArtiPad I has built-in Wi-Fi that can be used to get online. Once you're online, you can register your ArtiPad I, browse the Internet, get and update apps and send email on your network.

Note: Once WLAN is set as ON, ArtiPad I will consume more power. While WLAN keeps unused, please turn it off to conserve battery power.

1. On the home screen, tap **Settings** -> **Wi-Fi**.

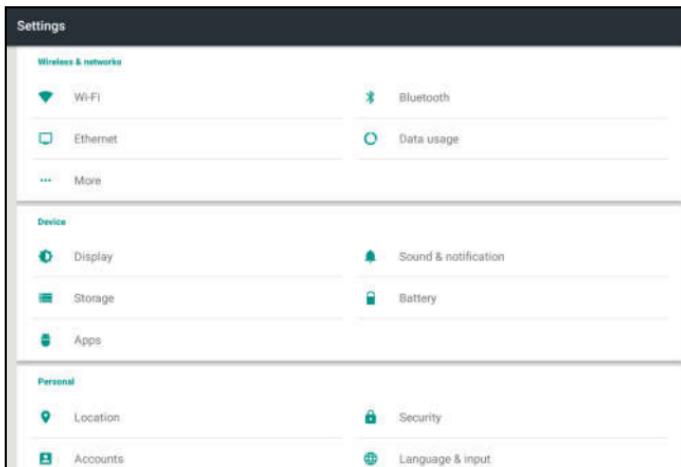


Fig. 3-5

2. Tap or slide the Wi-Fi switch to ON, ArtiPad I starts searching all available wireless LANs.
3. Choose the desired Wi-Fi access point / network,

- If the network you chose is open, you can connect directly;
- If the selected network is encrypted, you have to enter the right security key (network password).

When this tool is in range, it will connect to the previously linked network automatically.

## 4 Initial Use

### 4.1 Getting Started

For new users, please follow the operation chart shown in Fig. 4-1 to start using ArtiPad I.

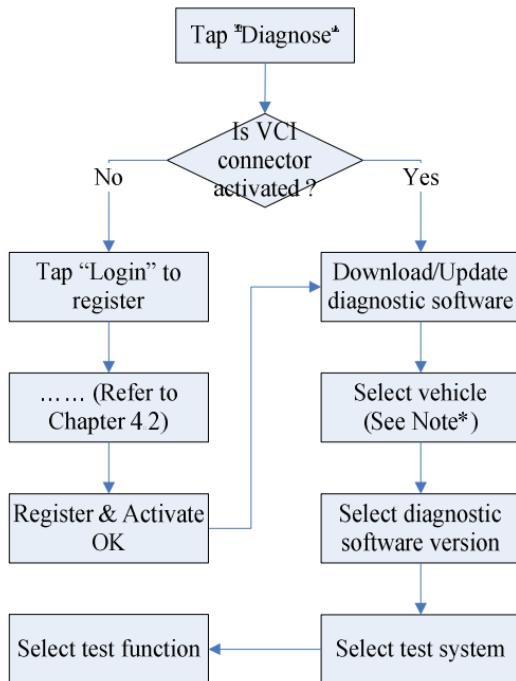


Fig. 4-1

Note\*: If “VIN Scan” or “Intelligent Diagnosis” function is performed, this step shall not apply.

### 4.2 Register & Download Diagnostic Software

#### 4.2.1 User registration

On the home screen, tap the application icon to run it, and then tap “Login” to enter the login interface of diagnosis software.

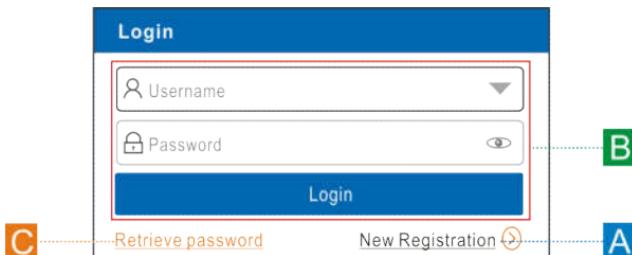


Fig. 4-2

(If you are a new user, follow A to proceed.)

(If you have registered to be a member, go to B to login the system directly.)

(In case you forgot password, refer to C to reset a new password.)

A.If you are a new user, tap "New Registration" to enter registration page. See Fig. 4-3.

The image shows a 'Register' screen with a blue header. It features a flow diagram at the top: 'Create an Account' (step 1, person icon with a lightbulb), 'Activate Connector' (step 2, person icon with a keyhole), and 'Finish Registration' (step 3, person icon with a checkmark). Below this is a form with five fields, each marked with a red asterisk (\*) indicating it is required: 'Username', 'Password', 'Confirm Password', 'Email', and 'Select Country' (with a dropdown arrow). At the bottom are two CAPTCHA input fields and a 'Register' button.

Fig. 4-3

In Fig. 4-3, fill in the information in each field (Items with \* must be filled). After inputting, tap "Register", a screen similar to the following will appear:

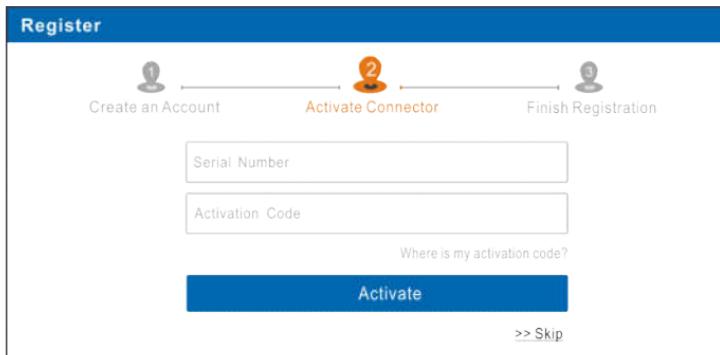


Fig. 4-4

In Fig. 4-4, input the Serial Number and Activation Code, which can be found in the password envelope.



Fig. 4-5

Note: To exit and activate it later, tap “Skip”. In this case, you can activate your connector by tapping “Activate Connector” in “Personal Center”. For details, please refer to Chapter 14.4.

Tap “Activate” to finish your registration. See Fig. 4-6.

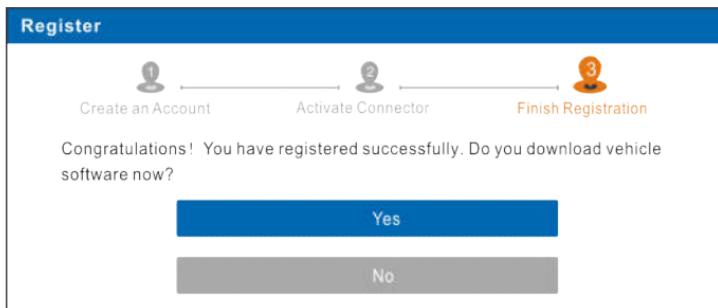


Fig. 4-6

To download the diagnostic software, tap “Yes” to enter the download page.

Tap “No” to download and install it later.

On download page, tap “Update” to start downloading. To pause downloading, tap “Stop”. To resume it, tap “Continue”. Once download is complete, the system will install the software package automatically.

**Notes:**

- In process of download, please make sure the tablet has a strong Wi-Fi signal. It may take several minutes to finish it, please be patient to wait.
- To use the VINScan function, you have to download the corresponding diagnostic software.

B.If you have registered to be a member, input your name and password, and then tap the “Login” button to enter the main menu screen directly.

**Note:** The ArtiPad I has an auto-save function. Once the username and password are correctly entered, the system will automatically store it. Next time you login the system, you will not be asked to input the account manually.

C.If you forgot the password, tap “Retrieve password” and then follow on-screen instructions to set a new password.

#### 4.2.2 Job menu

It mainly includes the following items:

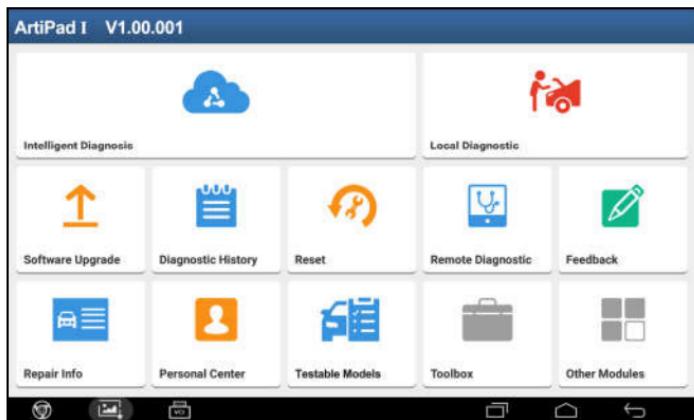


Fig. 4-7

Name	Description
<b>Intelligent Diagnosis</b>	This module allows you to obtain vehicle data from the cloud server to perform quick test via reading VIN, which provides a perfect solution to various defects resulting from step-by-step menu selection. In addition, user can also check the historical repair records online through this module.
<b>Local Diagnosis</b>	To diagnose a vehicle manually.
<b>Software Upgrade</b>	To update vehicle diagnostic software and APK.
<b>Diagnostic History</b>	Generally once a vehicle diagnosis is performed, ArtiPad I will automatically save every details of diagnostic process. This function provides a quick access to the tested vehicles and users can resume from the last operation, without the necessity of starting from scratch.
<b>Reset</b>	To perform all kinds of common repair & maintenance items, including electronic throttle position reset, ABS bleeding, oil lamp reset etc.
<b>Diagnostic Feedback</b>	To feed back the recent 20 diagnostic logs to us for issue analysis.

<b>Repair Info</b>	Abundant maintenance data are available, which helps repair professionals diagnose and repair vehicles efficiently, accurately and profitably.
<b>Personal Center</b>	To manage my connector, my reports, change password, configure wireless Wi-Fi printer, configure system settings and logout etc.
<b>Remote Diagnosis</b>	This option aims to help repair shops or technicians launch instant messaging and remote diagnosis, making the repair job getting fixed faster.
<b>Testable Models</b>	To view all the vehicle models that the ArtiPad I covers.
<b>Toolbox</b>	Includes browser, oscilloscope, sensor, multimeter, battery etc.
<b>Other Modules</b>	Includes product manual and FAQ.

#### 4.2.3 Vehicle menu layout

After downloading the diagnostic software, you can go to “Local Diagnosis” to check if all software are completely downloaded and installed.

Tap “Local Diagnosis”, a screen similar to the following figure appears:

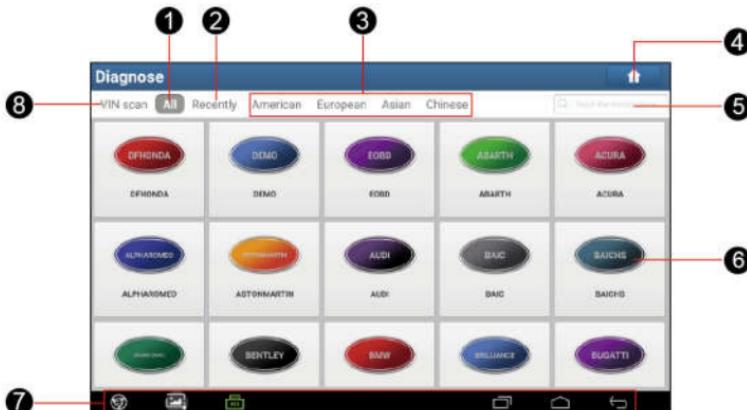


Fig. 4-8

- 1 **All** Tab: Displays all the vehicle makes in the vehicle menu.
  - 2 **Recently** Tab: Displays all the recently tested vehicle makes.
  - 3 Vehicle region buttons: Tap different buttons to switch to corresponding vehicles. If you have purchased an ArtiPad I of Commercial & Passenger Vehicle Version, a Heavy-duty tab will appear next to these buttons.
  - 4 Home Button: Returns to the Job menu.
  - 5 Search bar: Enables you to use the virtual keyboard to quickly locate the vehicle model. Input the desired vehicle model to start searching.
  - 6 Vehicle model display area
  - 7 Locator & navigation buttons: Refer to Chapter 3.6 for details.
  - 8 **VINSCAN** button: Tap it to scan the Vehicle Identification Number (VIN) code of your vehicle. OBD VIN and INPUT VIN are included. This function does not apply to the commercial vehicles.  
\*Note: Before using this function, the corresponding diagnostic software and Auto search file need to be downloaded on your tool first while downloading the diagnostic software.
-

#### 4.2.4 Diagnostics toolbar

The diagnostics toolbar contains a number of buttons that allow you to print the displayed data or make other controls. It is displayed on the upper right corner of the screen and goes through the whole diagnostic session. The table below provides a brief description for the operations of the diagnostics toolbar buttons:



Fig. 4-9

Name	Button	Description
<b>Home</b>		Returns to Job menu screen.
<b>Print</b>		Tap to print the current screen. To perform printing, you need to purchase an extra Wi-Fi printer separately and then properly configure the printer following the steps described in Chapter 15.3.
<b>Testable Model</b>		Inquires the vehicle models that the ArtiPad I supports.
<b>Personal Center</b>		Quick access to personal center.
<b>Exit</b>		To exit the diagnostic application.

## 4.3 Diagnosis Methods

ArtiPad I tablet supports 2 communication methods with the VCI connector: wireless Bluetooth and USB cable. You may choose any one of the methods to diagnose a vehicle.

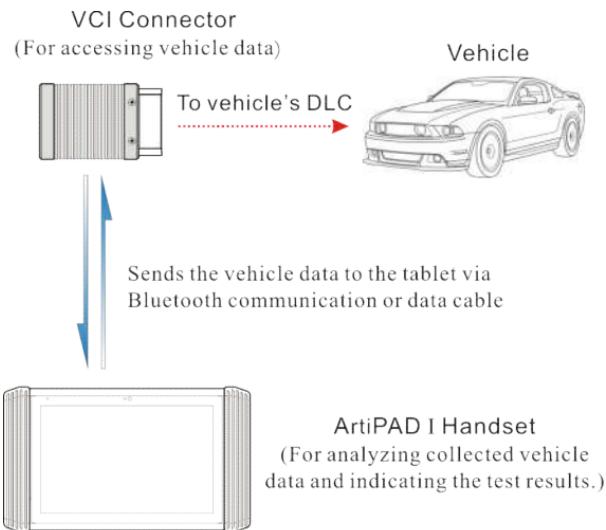


Fig. 4-10

### Notes:

- While using the diagnosis via Bluetooth, the VCI connector should be paired with the ArtiPad I tablet. If no Bluetooth setting is done before diagnostic software is launched, you can also configure it while using the software.
- To obtain stable communication, you are strongly recommended to perform the vehicle diagnosis via USB cable. In this case, the USB cable is required to connect the VCI connector and the ArtiPad I tablet.

## 4.4 Connections

### 4.4.1 Preparation

#### Normal testing conditions

- Turn on the vehicle power supply.
- Throttle should be in a closed position.

#### 4.4.2 DLC location

The DLC (Data Link Connector) is typically a standard 16 pin connector where diagnostic code readers interface with the vehicle's on-board computer. The DLC is usually located 12 inches from the center of the instrument panel (dash), under or around the driver's side for most vehicles. If Data Link Connector is not located under dashboard, a label should be there telling location. For some Asian and European vehicles, the DLC is located behind the ashtray and the ashtray must be removed to access the connector. If the DLC cannot be found, refer to the vehicle's service manual for the location.

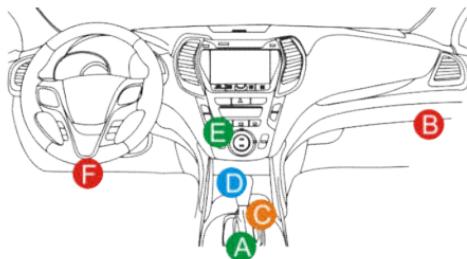


Fig. 4-11

#### 4.4.3 Vehicle connection

The method used to connect the diagnostic connector to a vehicle's DLC depends on the vehicle's configuration as follows:

- A vehicle equipped with an OBD II management system supplies both communication and 12V power through a standardized DLC.
- A vehicle not equipped with an OBD II management system supplies communication through a DLC connection, and in some cases supplies 12V power through the cigarette lighter receptacle or a connection to the vehicle battery.

Follow the steps mentioned below to connect OBD II vehicle:

1. Locate vehicle's DLC socket.
2. Plug the VCI connector into the vehicle's DLC socket (It is suggested to use the OBD II extension cable to connect the VCI connector and DLC socket.).
3. Choose one of the two ways to obtain power from:
  - A. Power adaptor: Connect one end of the included power adaptor to DC IN port of ArtiPad I tablet, and the other end to AC outlet.
  - B. Internal battery pack

For non-OBDII vehicle, proceed as follows:

1. Locate vehicle's DLC socket.
2. Select the corresponding non-16pin connector.
3. Plug the non-16pin end of the connector into the DLC socket, and the other end to the OBD I adaptor, and then tighten the captive screws.
4. Connect the other end of the adaptor to the included VCI connector.
5. To supply power to OBD I adaptor from:

A. Cigarette Lighter Cable: Connect one end of the cigarette lighter cable to vehicle's cigarette lighter receptacle, and the other end to the power jack of OBD I adaptor.

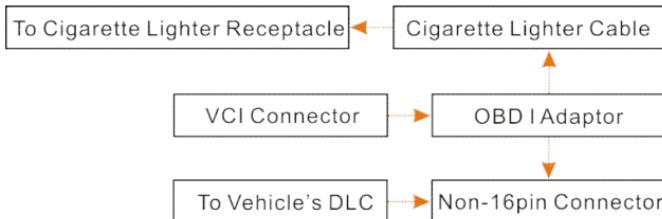


Fig. 4-12

B. Battery Clamps Cable: Connect one end of the battery clamps cable to vehicle's battery, and the other end to the power jack of OBD I adaptor.

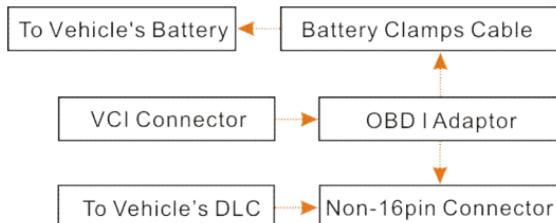


Fig. 4-13

## 4.5 Bluetooth Setting

There are two kinds of ways available for ArtiPad I to pair with the VCI connector.

1. Connect one end of the USB cable (optional) to the Mini USB port of the VCI connector.

2. Connect the other end to the USB port of the PC. The power indicator of the VCI connector lights up.
3. Enter Bluetooth setting screen by tapping “Settings” --> “Bluetooth”, slide the Bluetooth switch to ON and ArtiPad I will start searching for all available Bluetooth device.



Fig. 4-14

4. Tap the desired VCI connector to pair and match. By default, the Bluetooth name of the connector is 98\*\*\*\*\*00 (where \*\*\*\*\* stands for 8 digits.).
5. If the Bluetooth pair request pops up on the screen, enter the request pin code (default code: 0000 or 1234).
6. Once the connector is paired with the ArtiPad I handset, “Paired” appears and the connector will be shown under the paired device tab.

Note: In case no Bluetooth setting is done before diagnostic software is launched, you can also configure it in process of vehicle diagnosis.

## 5 Diagnosis

### 5.1 Intelligent Diagnosis

Through simple Bluetooth communication between the ArtiPad I handset and VCI connector, you can easily get the VIN (Vehicle Identification Number) information of the currently identified vehicle. Once the VIN is successfully identified, the system will retrieve it from the remote server and then guide you to vehicle information page without the necessity of step-by-step manual menu selection.

The vehicle information page lists all historical diagnostic records of the vehicle, which lets the technician have a total command of the vehicle faults. In addition, a quick dial to local diagnosis and diagnostic function are also available on this page for reducing the roundabout time and increasing productivity.

Notes:

- Before using this function, please make sure the VCI connector is properly connected to the vehicle's DLC. For detailed connection, see Chapter 4.4.3 "Vehicle Connection".
- A stable network connection is required for this function.

Follow the steps below to proceed.

1. Tap "Intelligent Diagnosis" on the Job menu screen to enter Fig. 5-1.

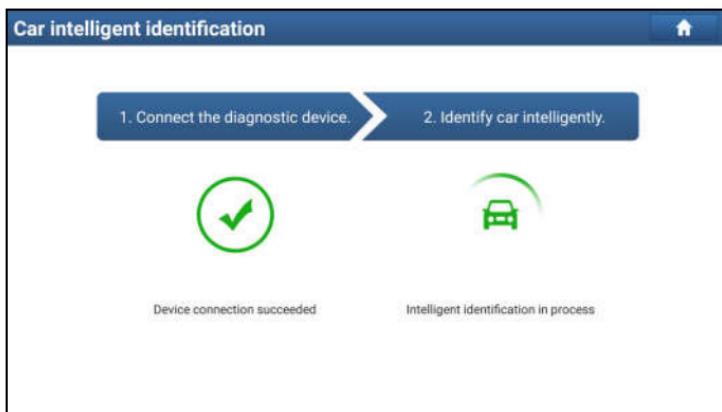


Fig. 5-1

Note: If the VCI connector is not paired up with the ArtiPad I handset before doing this

step, a prompt message box will appear:

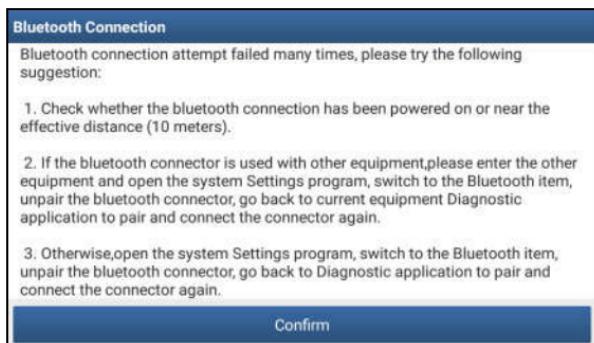


Fig. 5-2

Check all the possible reasons of Bluetooth connection failure carefully, and then tap “Confirm”.

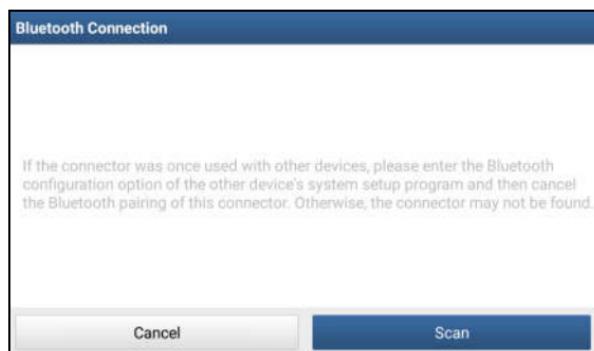


Fig. 5-3

If the VCI connector was once used with other devices, you need to cancel the pairing of the connector first via either one of the following ways:

- On the Android's home screen, tap “Settings” -> “Bluetooth” -> Choose the desired VCI connector from the Paired list. Tap “”, and then tap “FORGET” to unpair it.
- Tap “Personal Center” -> “Diagnostic Connector Connection Management” -> Tap “Deactivate matching”.

Tap “Scan” to start searching for the VCI connector and pairing up with it.

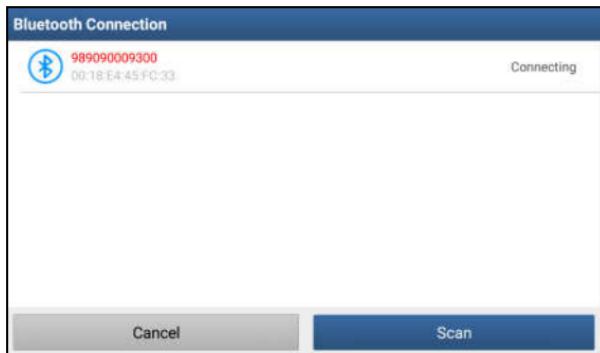


Fig. 5-4

2. Once pairing is complete, the handset starts reading the vehicle VIN.  
A. If the VIN can be found from the remote server database, a screen similar to Fig. 5-5 displays:

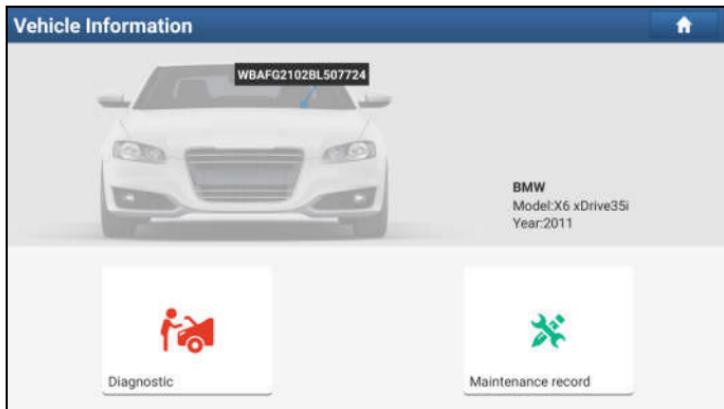


Fig. 5-5

- Tap "Diagnostic" to start a new diagnostic session.
- Tap "Maintenance record" to view its historical repair record. If there are records available, it will be listed on the screen in sequence of date. If no records exist, the screen will show "No Record".

Maintenance record				
2017 10/11	Number of diagnostic systems:1	Number of DTCs:0	11:43:13	<a href="#">View record</a>
	Number of diagnostic systems:34	Number of DTCs:2	09:12:23	<a href="#">View record</a>
2017 09/30	Number of diagnostic systems:34	Number of DTCs:2	14:51:40	<a href="#">View record</a>
2017 09/29	Number of diagnostic systems:34	Number of DTCs:2	16:53:05	<a href="#">View record</a>
<b>BMW090K</b> BMW X6 xDrive35i 2011 VIN WBAFG2102BL507724				<a href="#">Quick access</a>

Fig. 5-6

- Tap “View record” to view the details of the current diagnostic report.
  - To perform other functions, tap “Quick access” to directly go to the function selection screen. Choose the desired one to start a new diagnostic session.
- B. If the handset failed to access the VIN information, the screen will display as below:

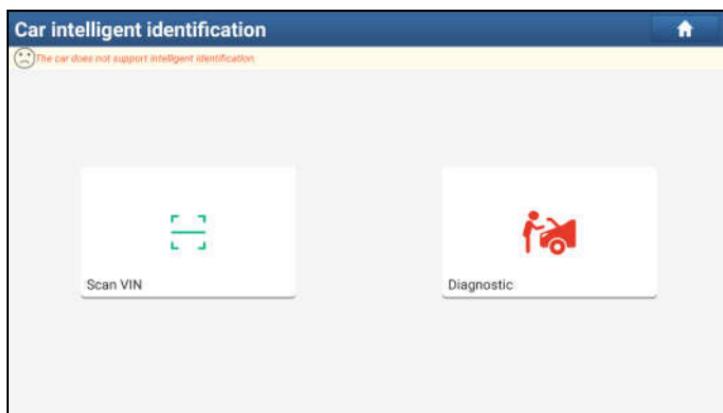


Fig. 5-7

- Tap “Diagnostic” to run the Local Diagnosis module and start a new diagnostic session. Refer to Chapter 5.2 for detailed diagnostic operations.

- Tap “Scan VIN”, a screen similar to the following appears:



Fig. 5-8

Place the VIN inside the viewfinder rectangle to scan it. The most recognizable location for this number is in the top left corner on the vehicle's dashboard. Other locations include the driver's door or post, and the firewall under the hood.

- If you have scanned the VIN of the vehicle, tap to choose it from the record list.
- In case the handset failed to identify it, tap to enter it manually.

Note: In general, vehicle identification numbers are standardized - all contain 17 characters. VIN characters may be capital letters A through Z and numbers 1 through 0; however, the letters I, O and Q are never used in order to avoid mistakes of misreading. No signs or spaces are allowed in the VIN.

- To turn the flash on, tap .

After scanning, the screen automatically displays the result.

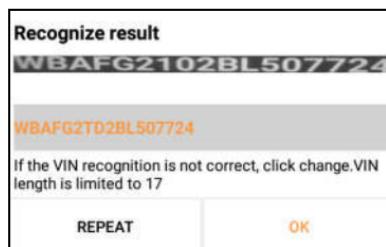


Fig. 5-9

- If the VIN scanned is incorrect, tap the result field to modify it and then tap “OK”. If the VIN exists on the remote server, the system will enter the vehicle information screen. See Fig. 5-5.
- To scan it again, tap “REPEAT”.

## 5.2 Local Diagnosis

Tap “Local Diagnosis” to enter the vehicle selection page.

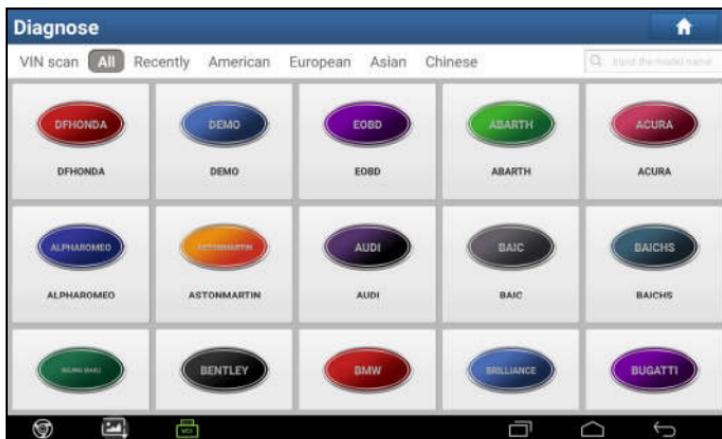


Fig. 5-10

2 approaches are provided for you to access the vehicle diagnostic software. Choose any one of the following ways:

1. VINSCAN enables you to access it more quickly.

In this case, automatic scan (OBD VIN) and manual input (INPUT VIN) are available.

In Fig. 5-10, tap “VINScan”, the screen displays as follows:



Fig. 5-11

A. Camera Scan: In this mode, the VCI connector should be plugged into the vehicle's DLC first, and then a Bluetooth communication should be established between ArtiPad I and the vehicle.

Tap “Camera Scan”, a screen similar to the following appears:

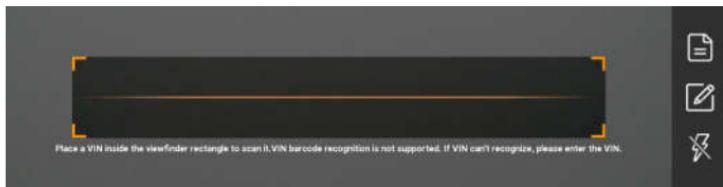


Fig. 5-12

Place the VIN inside the viewfinder rectangle to scan it. The most recognizable location for this number is in the top left corner on the vehicle's dashboard. Other locations include the driver's door or post, and the firewall under the hood.

- If you have scanned the VIN of the vehicle, tap  to choose it from the record list.
  - In case the handset failed to recognize it, tap  to enter it manually.
  - To turn the flash on, tap .

Once the test vehicle is successfully identified, ArtiPad I will jump to the function selection page directly.



Fig. 5-13

Tap the desired option to perform the corresponding function.

■ Note: Before using this function, the corresponding diagnostic software and Auto search file need to be downloaded on your tool first while downloading the diagnostic software.

B. INPUT VIN: In this mode, you need to input the VIN manually. In general,

vehicle identification numbers are standardized - all contain 17 characters. VIN characters may be capital letters A through Z and numbers 1 through 0; however, the letters I, O and Q are never used in order to avoid mistakes of misreading. No signs or spaces are allowed in the VIN.

Tap “INPUT VIN” and a screen similar to Fig. 5-14 will appear:

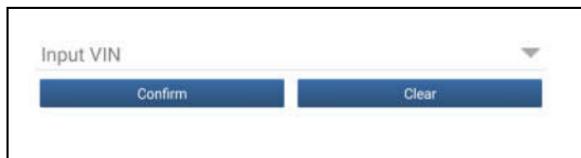


Fig. 5-14

Input the VIN, and tap “Confirm”, the system will automatically identify the vehicle model and directly navigate to the function selection page.

2. Tap a corresponding diagnostic software logo, and then follow the on-screen instruction to access the diagnostic software.

Take Demo as an example to demonstrate how to diagnose a vehicle.

- 1). Select diagnostic software version: Tap the “DEMO” to go to Step 2. (Note: If more than one version is available on this handset, it will be listed on the screen.)

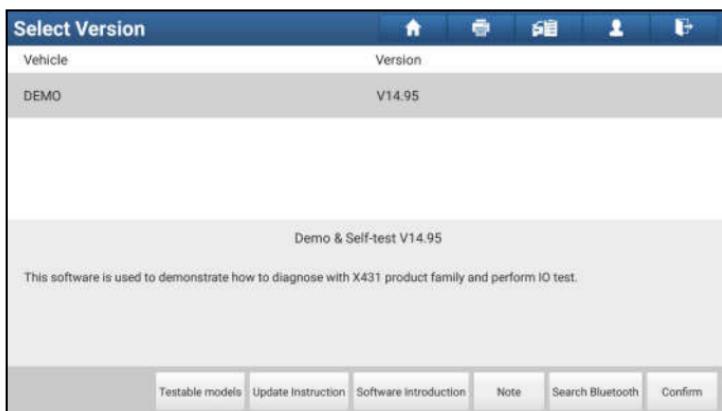


Fig. 5-15

#### On-screen Buttons:

**Testable models:** Tap to view the vehicle models that the current diagnostic software covers.

**Update instruction:** Tap to view the optimized items and enhancements.

**Software introduction:** Tap to check the software function list.

**Note:** Tap to read some precautions on using the current diagnostic software.

**Search Bluetooth:** Tap to search for the available VCI Bluetooth connector.

Notes:

- No Bluetooth connection is required for DEMO program.
- If a vehicle is tested and no Bluetooth connection is made before diagnosis, tap “Search Bluetooth”, a dialog box similar to the following appears:

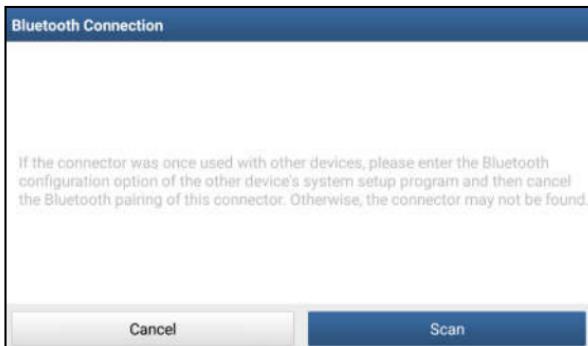


Fig. 5-16

Tap “Scan” to start searching for the VCI connector. Once it is found, tap it to start pairing.

If the ArtiPad I handset has paired with the VCI connector, it will enter Step 2 directly.

**Confirm:** Tap it to go to next step.

2). **Select test item:** Select the desired test item to proceed.

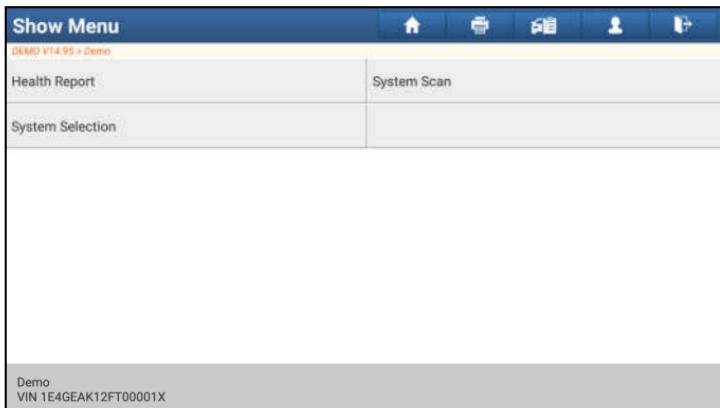


Fig. 5-17

### 5.2.1 Health Report (Quick Test)

This function varies from vehicle to vehicle. It enables you to quickly access all the electronic control units of the vehicle and generate a detailed report about vehicle health.

Tap “Health Report”, the system start scanning the ECUs and the screen displays as follows:



Fig. 5-18

(To stop the system scanning, tap “Pause”.)

Once the scanning is complete, a screen similar to the following appears:

Select Test Item	
DEMO V14.95 > Demo > Health Report	
System Name	Result
ECM(Engine Control Module)	Fault 4
TCM(Transmission Control Module)	Fault 3
ABS(Anti-lock Braking System)	Fault 2
SRS(Supplemental Inflatable Restraint System)	Fault 3
BCM(Body Control Module)	Fault 3
IMM(Immobilizer)	Fault 3
BMS(Battery Manager System)	OK
<b>Clear DTC</b>	<b>Fault Report</b>
Demo VIN 1E4GEAK12FT00001X	

Fig. 5-19

In Fig. 5-19, the tested system with fault code appears in red and the system with OK displays in black (normally).

#### On-screen Buttons:

**Clear DTC:** Tap to clear the existing diagnostic trouble codes.

**Fault Report:** Tap to view the health report in details.

Diagnostic Trouble Code	
DEMO V14.95 > Demo > Health Report	
Fault	Normal
System	State
ECM(Engine Control Module)	Abnormal ( 4 )
TCM(Transmission Control Module)	Abnormal ( 3 )
ABS(Anti-lock Braking System)	Abnormal ( 2 )
SRS(Supplemental Inflatable Restraint System)	Abnormal ( 3 )
BCM(Body Control Module)	Abnormal ( 3 )
IMM(Immobilizer)	Abnormal ( 3 )
Demo VIN 1E4GEAK12FT00001X	Search Report Help

Fig. 5-20

#### On-screen Buttons:

**Search:** Highlight a certain DTC item, and then tap it to launch the browser to

search for more detailed information about the selected DTC online.

**Report:** To save the current data in text format.



Fig. 5-21

Input the required information, and then tap “Confirm” to save it.

Alternatively you can also set the workshop information in “Personal Center” -> “Settings” -> “Print Information”. Once you configured the information, it will be automatically generated every time you saved the diagnostic report. All vehicle and workshop information will be appended to the diagnostic report.

To skip the workshop information, tap “Skip” to go to the next step.

All reports are saved under the tab “Diagnostic Report” in “My Report” from “Personal Center” menu. For details on report operations, please refer to Chapter 14.1 “My Report”.

### 5.2.2 System Scan

This option allows you to quickly scan which systems are installed on the vehicle.

In Fig. 5-17, tap “System Scan”, the system start scanning the systems. Once the scanning is complete, the screen will display the result. See Fig. 5-22.

Select Test Item	
DEMO V14.95 > Demo > System Scan	
System Name	Result
ECM(Engine Control Module)	Equipped
TCM(Transmission Control Module)	Equipped
ABS(Anti-lock Braking System)	Equipped
SRS(Supplemental Inflatable Restraint System)	Equipped
BCM(Body Control Module)	Equipped
IMM(Immobilizer)	Equipped
BMS(Battery Manager System)	Equipped
TPMS(Tire Pressure Monitoring System)	Equipped
Demo VIN 1E4GEAK12FT00001X	

Fig. 5-22

Tap the desired system to advance to the test function selection page. For detailed operations on test function, please refer to Chapter 5.2.3.

### 5.2.3 System Selection

This option allows you manually select the test system and function step by step. In Fig. 5-17, tap “System Selection”, the screen displays as follows:

Show Menu	
DEMO V14.95 > Demo > System Selection	
ECM(Engine Control Module)	TCM(Transmission Control Module)
ABS(Anti-lock Braking System)	SRS(Supplemental Inflatable Restraint System)
BCM(Body Control Module)	IMM(Immobilizer)
BMS(Battery Manager System)	TPMS(Tire Pressure Monitoring System)
SAS(Steering Angle System)	

Fig. 5-23

Swipe the screen from the bottom to view the vehicle system on the next page. Tap the desired system (take “ECM” for example) to jump to the test function page.



Fig. 5-24

Note: Different vehicle has different diagnostic menus.

#### A. Version Information

This function is used to read the version information of system mode, vehicle VIN, software and ECU.

In Fig. 5-24, tap “Version Information”, the screen displays as Fig. 5-25.

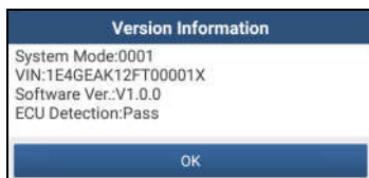


Fig. 5-25

Tap “OK” to confirm and exit.

#### B. Read Fault Code

This function displays the detailed information of DTC records retrieved from the vehicle's control system.

In Fig. 5-24, tap “Read DTC”, the screen will display the diagnostic result.



Fig. 5-26

**On-screen Buttons:**

**Freeze Frame:** When an emission-related fault occurs, certain vehicle conditions are recorded by the on-board computer. This information is referred to as freeze frame data. Freeze frame data includes a snapshot of critical parameter values at the time the DTC is set.

**Help:** Tap to view the help information.

**Related Search:** Tap it to search for more information about the current DTC online.

**Report:** To save the current data in text format. All reports are saved under the tab “Diagnostic Report” in “My Report” from “Personal Center” menu. For details on report operations, please refer to Chapter 15.1 “My Report”.

### C. Clear Fault Memory

After reading the retrieved codes from the vehicle and certain repairs have been carried out, you can use this function to erase the codes from the vehicle. Before performing this function, please be sure the vehicle's ignition key is in the ON position with the engine off.

In Fig. 5-24, tap “Clear Fault Memory”, a confirmation dialog box pops up on the screen.



Fig. 5-27

Tap “Yes”, the system will automatically delete the currently existing trouble code.

**Note:** The trouble code will not disappear until the trouble was completely cleared.

#### D. Read Data Stream

This option retrieves and displays live data and parameters from the vehicle's ECU. In Fig. 5-24, tap “Read Data Stream”, the system will display data stream items.

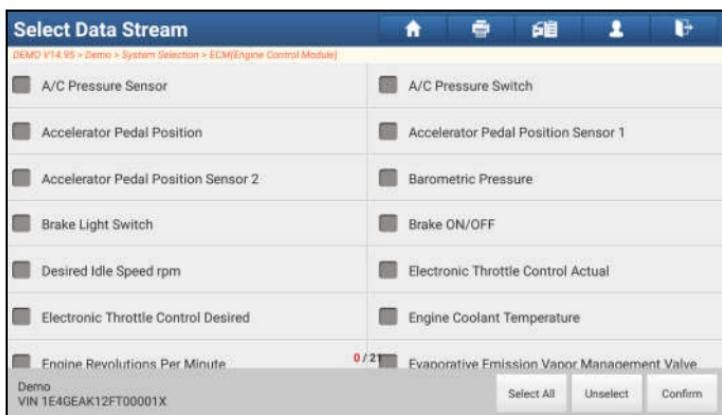


Fig. 5-28

#### On-screen Buttons:

**Select All:** Tap it to select all items of the current page. To select certain data stream item, just check the box before the item name.

**Unselect:** Tap it to deselect all data stream items.

**Confirm:** Tap it to confirm and jump to the next step.

After selecting the desired items, tap “Confirm” to enter the data stream reading page.

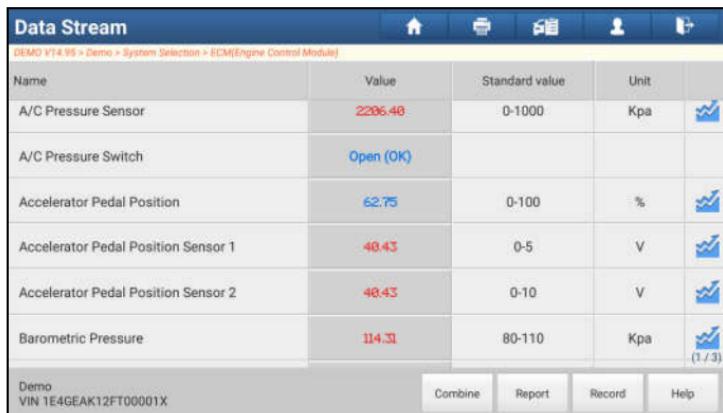


Fig. 5-29

**Notes:**

1. If the value of the data stream item is out of the range of the standard (reference) value, the whole line will display in red. If it complies with the reference value, it displays in blue (normal mode).
2. The indicator 1/X shown on the bottom of the screen stands for the current page/total page number. Swipe the screen from the right/left to advance/return to the next/previous page.

There are 3 types of display modes available for data viewing, allowing you to view various types of parameters in the most suitable way.

- ✓ Value – this is the default mode which displays the parameters in texts and shows in list format.
- ✓ Graph – displays the parameters in waveform graphs.
- ✓ Combine – this option is mostly used in graph merge status for data comparison. In this case, different items are marked in different colors.

**On-screen Buttons:**

**Combine:** This option is mostly used in graph merge status for data comparison. In this case, different items are marked in different colors. Tap it to select the desired items, and then tap "Confirm" to view the merged items in graph. See Fig. 5-30 & Fig. 5-31.

Data Stream				
DEMO V14.95 > Demo > System Selection > ECM(Engine Control Module)				
Name	Value	Standard value	Unit	
<input checked="" type="checkbox"/> A/C Pressure Sensor	236.72	0-1000	Kpa	
<input type="checkbox"/> A/C Pressure Switch	Open (OK)			
<input checked="" type="checkbox"/> Accelerator Pedal Position	65.88	0-100	%	
<input checked="" type="checkbox"/> Accelerator Pedal Position Sensor 1	42.43	0-5	V	
<input checked="" type="checkbox"/> Accelerator Pedal Position Sensor 2	42.43	0-10	V	
<input type="checkbox"/> Barometric Pressure	117.69	80-110	Kpa	 (1/3)

Demo  
VIN 1E4GEAK12FT00001X

Confirm Back

Fig. 5-30



Fig. 5-31

**Report:** To save the current data in text format. All reports are saved under the tab “Diagnostic Report” in “My Report” from “Personal Center” menu. For details on report operations, please refer to Chapter 15.1 “My Report”.

**Record:** Tap to start recording diagnostic data for future playback and analysis. The saved file follows the naming rule: It begins with vehicle type, and then the record starting time and ends with .x431 (To differentiate between files, please configure the accurate system time). The file is stored in “My Report” under “Personal Center” menu.

**Help:** Tap to view the help information.

 **Graph:** Tap it to view the waveform.




Fig. 5-32

## E. Actuation Test

This option is used to access vehicle-specific subsystem and component tests. Available test vary by vehicle manufacturer, year, and model.

During the actuation test, the ArtiPad I handset outputs commands to the ECU in order to drive the actuators, and then determines the integrity of the system or parts by reading the ECU data, or by monitoring the operation of the actuators, such as switching a injector between two operating states.

In Fig. 5-24, tap "Actuation Test", the system will display as follows:

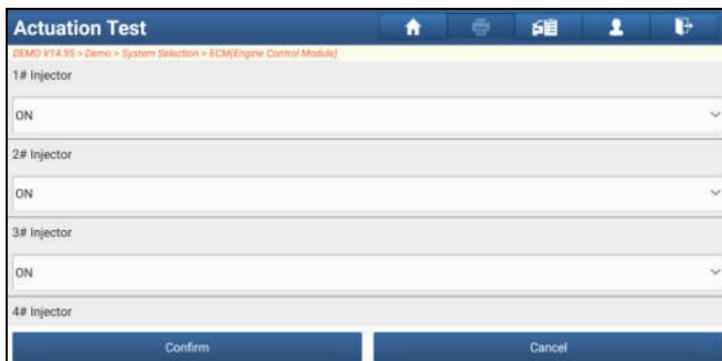

The screenshot shows the 'Actuation Test' interface. At the top, there's a header bar with icons for home, system selection, user profile, and settings. Below the header, the title 'Actuation Test' is displayed, followed by the path 'DEMO V14.95 > Demo > System Selection > ECM(Engine Control Module)'. The main area lists four injectors: '1# Injector', '2# Injector', '3# Injector', and '4# Injector', each followed by a dropdown menu with the option 'ON'. At the bottom, there are two large blue buttons: 'Confirm' on the left and 'Cancel' on the right.

Fig. 5-33

Simply follow the on-screen instructions and make appropriate selections to complete the test. Each time when an operation is successfully executed, “Completed” displays.

## 5.3 Remote Diagnosis

This option aims to help repair shops or technicians launch instant messaging and remote diagnosis, making the repair job getting fixed faster.

Tap “Remote Diagnosis” on the Job menu, the screen appears blank by default.

### 5.3.1 Interface Layout



Fig. 5-34

1	Search bar	Directly input the username of the ArtiPad I to start searching, and then tap the desired one to add it into your friend list.
2	Home button	Tap it to navigate to the Job menu screen.
3	Message tab	Once an incoming message reaches, a red dot will appear on the upper right corner of the tab.
4	Contact tab	Tap to enter the friend list.
5	WEB Remote switch	Tap to slide the switch to ON, the ArtiPad I keeps online and becomes visible on the web client. In this case, inform

the technician of your product S/N, and he/she will control your ArtiPad I remotely.

### 5.3.2 Add Friends

Tap “Contact” to enter the contact page. By default it appears blank.

In the search bar, input the partner's username and tap “Search” button next to the search bar to starts searching for it from golo business database.

The partner must be the users who have registered their diagnostic tools. They may be the following:

- Workshop
- Technician
- golo users

Once the result matches the keyword, a screen similar to the following will appear:

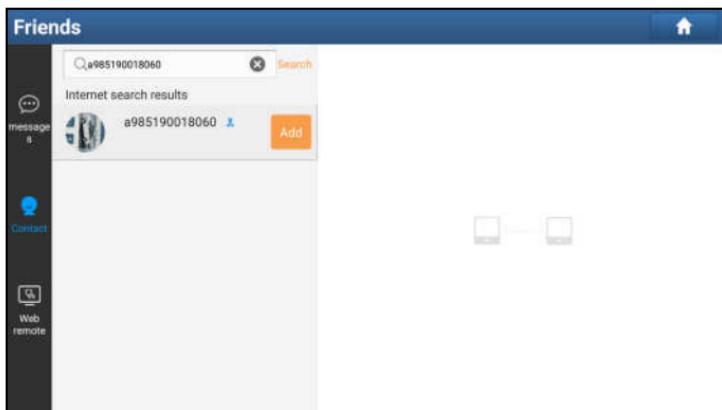


Fig. 5-35

Tap “Add”, a dialog box pops up:

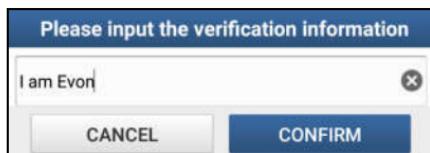


Fig. 5-36

Tap “CONFIRM” to send your request.

Once the partner receives the request, a beep will sound. Tap the “Message” tab:

- Once the partner agreed your request, he/she will automatically be listed in the Contact tab.
- If a technician sent you a friend request, you can tap “Agree” to confirm and his/her name will appear in the friend list (Contact). Or tap “Ignore” to ignore this request.

### 5.3.3 Start Instant Messaging

Note: The I/M (Instant Messaging) function is open to all users who had a diagnostic tool equipped with this module.

After adding your friends, tap the desired one's photo to enter a screen similar to the following:

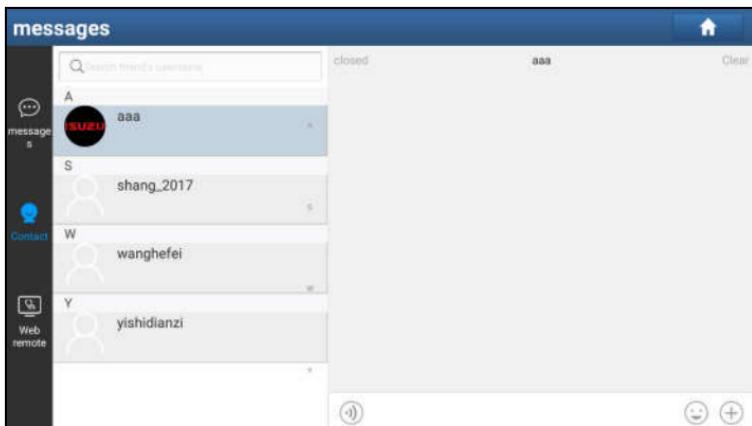


Fig. 5-37

Tap the input field and use the on-screen keyboard to enter the text message, and then tap “Send” to send it.

Tap to send the voice message.

Tap to send the emoji.

Tap to call out more function options.

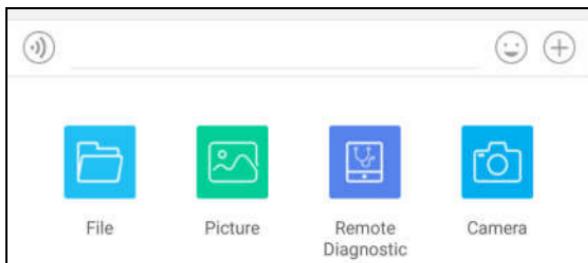


Fig. 5-38

File: Choose diagnostic reports or local files to send.

Picture: Choose screenshots or pictures to send.

Remote Diagnostic: To start a remote diagnostic session. For details, refer to Chapter 5.3.4.

Camera: Open camera to take pictures.

#### 5.3.4 Launch Remote Diagnosis (Device-To-Device)

The ArtiPad I handset is allowed to launch remote diagnosis with other diagnostic tools (including but not limited to the ArtiPad I), which are equipped with this module.

\* Note: Before performing this operation, please make sure the following no matter which side sends the remote request:


- Turn on the vehicle power supply.
- Throttle should be in a closed position.
- The ArtiPad I should be properly connected to the vehicle's DLC and a successful communication is required.

In Fig. 5-38, tap “Remote Diagnostic”, a pull-down menu including the following options appears:




Fig. 5-39

These options are defined as follows:

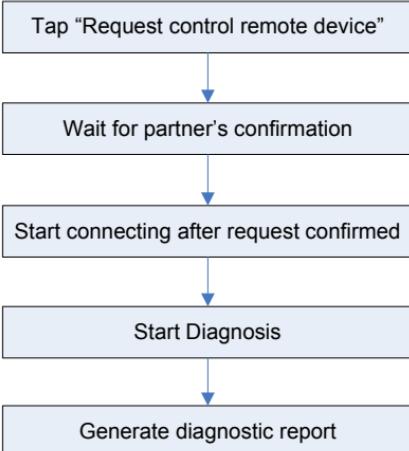Actions	Results
Send remote diagnostic reservation	<p>Tap it and input the reservation title or scheduled date of the remote diagnosis, and then tap “Confirm” to send.</p>
Request control remote device	<p>Request to control the partner's device remotely to help him diagnose the vehicle.</p> <p>*Notes:</p> <ul style="list-style-type: none"> <li>• Remote diagnosis has the same diagnostic steps as manual diagnosis.</li> <li>• In process of remote diagnosis, tap the  button to send a voice message.</li> <li>• Once vehicle diagnosis is complete, a report will be created. Input your comments on this report, and then tap “Send Report” to send it to the partner.</li> </ul>
Invite remote diagnostic assistant	 <pre> graph TD     A[Tap "Request control remote device"] --&gt; B[Wait for partner's confirmation]     B --&gt; C[Start connecting after request confirmed]     C --&gt; D[Start Diagnosis]     D --&gt; E[Generate diagnostic report]   </pre> <p>If you need support, just use this option to invite a technician to perform a remote control on your tool.</p> <p>*Notes:</p> <ul style="list-style-type: none"> <li>• Remote diagnosis has the same diagnostic steps as manual diagnosis.</li> </ul>

- In process of remote diagnosis, tap the  button to send voice message.
- Once you received the report from the partner, tap “View Report” to view details. All diagnostic reports are saved under the “Remote Diagnostic Reports” tab of “My Reports” in “Personal Center”.

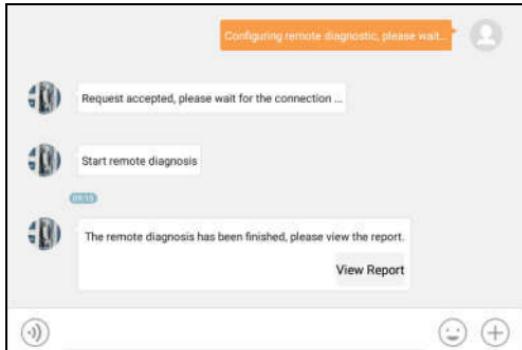

Tap “Invite remote diagnostic assistant”

Choose the desired diagnostic software

Wait for partner’s confirmation

Start connecting after request confirmed

Start Diagnosis

Generate diagnostic report

Cancel

To cancel this operation.

### 5.3.5 Launch Remote Diagnosis (Device-To-PC)

Except that the remote diagnosis can be done between different diagnostic tools that come loaded with the module, user also can ask for remote control from PC client technician.

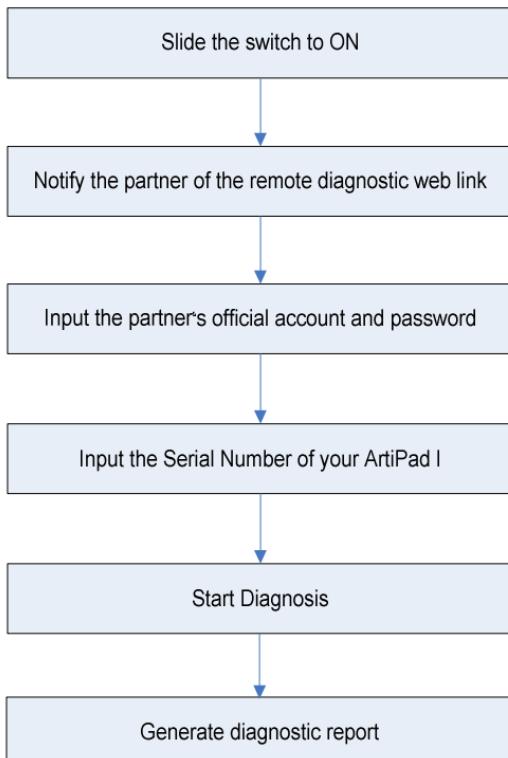


Fig. 5-40

Tap the “Web Remote” tab, the screen displays as follows:

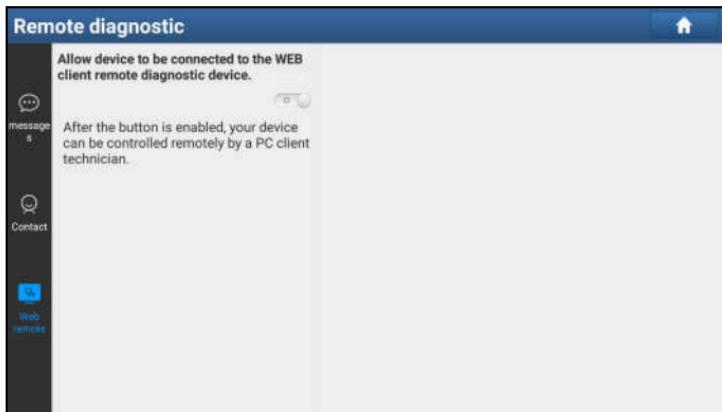


Fig. 5-41

1. Slide the switch “Allow device to be connected to the WEB client remote diagnostic device” to ON so that the partner can find and connect to this device while using the PC.
2. Notify the partner of the PC client website <http://remote.x431.com/cn/>. When the partner accesses the link, the PC displays as below:

\*Note: Before processing remote diagnosis, please make sure the ArtiPad I handset is properly connected to the vehicle.

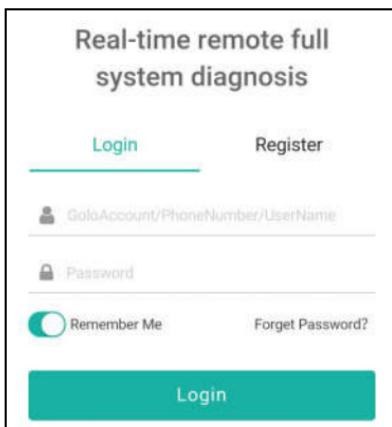


Fig. 5-42

3. Tell the partner to input his own official technician account and password, and then tap “Login” to navigate to the following figure.

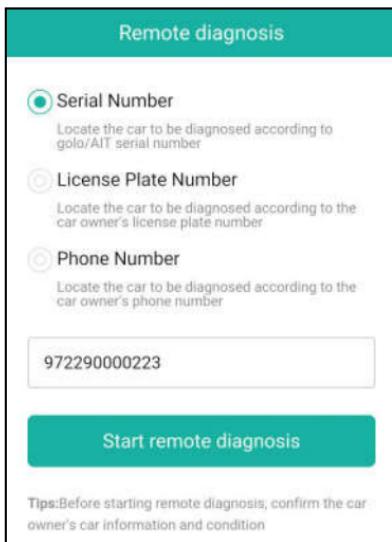


Fig. 5-43

4. Tell the partner to check the box “Series number” and enter the Serial Number provided by you, and then tap “Start remote diagnosis” to control your device remotely.

In process of remote diagnosis, please note the following things:

- 1) You are not suggested to execute any actions.
- 2) The partner is not allowed to save any diagnostic reports or records on your handset.

The operations in remote diagnosis are same as those in local diagnosis. Once the session is complete, a remote diagnostic report will be automatically generated.

## 5.4 How to view diagnostic history?

Generally once a vehicle diagnosis is performed, ArtiPad I will record the every details of diagnostic process. The History function provides direct access to the previously tested vehicles and users can resume from the last operation, without the necessity of starting from scratch.

Tap “Diagnostic History” on the Job menu screen, all diagnostic records will be listed on the screen in date sequence.

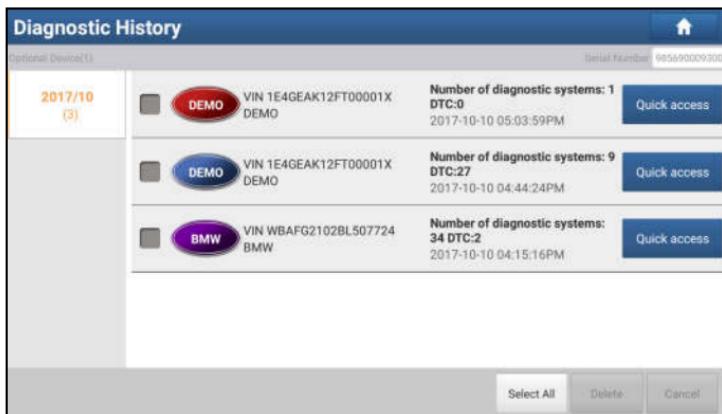


Fig. 5-44

- Tap certain vehicle model to view the details of the last diagnostic report.
- To delete certain diagnostic history, select it and then tap “Delete”. To delete all historical records, tap “Select All” and then tap “Delete”.
- Tap “Quick access” to directly navigate to the function selection page of last diagnostic operation. Choose the desired option to proceed.

## 6 Special (Reset) Function

In addition to amazing & powerful diagnostic function, ArtiPad I also features various service functions. The most commonly performed service functions contain:

- Oil Reset Service
- Electronic Parking Brake Reset
- Steering Angle Calibration
- ABS Bleeding
- TPMS (Tire Pressure Monitor System) Reset
- Gear Learning
- IMMO Service
- Injector Coding
- Battery Maintenance System
- Diesel Particulate Filter (DPF) Regeneration
- Electronic Throttle Position Reset

There are two methods to reset service lamp: Manual reset or Auto reset. Auto reset follows the principle of sending command from the tool to vehicle's ECU to do resetting. While using manual reset, users just follow the on-screen instructions to select appropriate execution options, enter correct data or values, and perform necessary actions, the system will guide you through the complete performance for various service operations.

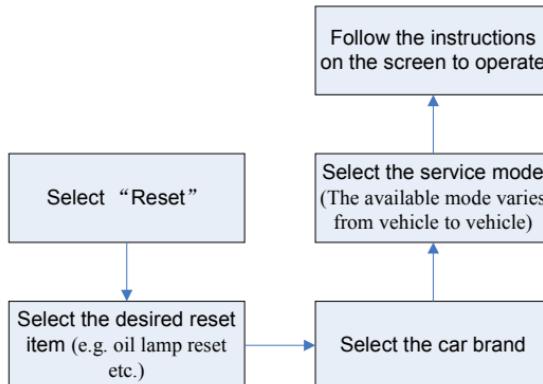


Figure 6-1

## 6.1 Oil Reset Service

This function allows you to perform reset for the engine oil life system, which calculates an optimal oil life change interval depending on the vehicle driving conditions and climate.

This function can be performed in the following cases:

1. If the service lamp is on, you must provide service for the car. After service, you need to reset the driving mileage or driving time so that the service lamp turns off and the system enables the new service cycle.
2. After changing engine oil or electric appliances that monitor oil life, you need to reset the service lamp.

## 6.2 Electronic Parking Brake Reset

1. If the brake pad wears the brake pad sense line, the brake pad sense line sends a signal sense line to the on-board computer to replace the brake pad. After replacing the brake pad, you must reset the brake pad. Otherwise, the car alarms.
2. Reset must be performed in the following cases:
  - a) The brake pad and brake pad wear sensor are replaced.
  - b) The brake pad indicator lamp is on.
  - c) The brake pad sensor circuit is short, which is recovered.
  - d) The servo motor is replaced.

## 6.3 Steering Angle Calibration

To reset the steering angle, first find the relative zero point position for the car to drive in straight line. Taking this position as reference, the ECU can calculate the accurate angle for left and right steering.

After replacing the steering angle position sensor, replacing steering mechanical parts (such as steering gearbox, steering column, end tie rod, steering knuckle), performing four-wheel alignment, or recovering car body, you must reset the steering angle.

## 6.4 ABS Bleeding

This function allows you to perform various bi-directional tests to check the operating conditions of Anti-lock Braking System (ABS).

1. When the ABS contains air, the ABS bleeding function must be performed to bleed the brake system to restore ABS brake sensitivity.
2. If the ABS computer, ABS pump, brake master cylinder, brake cylinder, brake line, or brake fluid is replaced, the ABS bleeding function must be performed to bleed the ABS.

## 6.5 Tire Pressure Monitor System Reset

This function allows you to quickly look up the tire sensor IDs from the vehicle's ECU, as well as to perform TPMS replacement and sensor test.

1. After the tire pressure MIL turns on and maintenance is performed, the tire pressure resetting function must be performed to reset tire pressure and turn off the tire pressure MIL.
2. Tire pressure resetting must be performed after maintenance is performed in the following cases: tire pressure is too low, tire leaks, tire pressure monitoring device is replaced or installed, tire is replaced, tire pressure sensor is damaged, and tire is replaced for the car with tire pressure monitoring function.

## 6.7 Gear Learning

The crankshaft position sensor learns crankshaft tooth machining tolerance and saves to the computer to more accurately diagnose engine misfires. If tooth learning is not performed for a car equipped with Delphi engine, the MIL turns on after the engine is started. The diagnostic device detects the DTC P1336 'tooth not learned'. In this case, you must use the diagnostic device to perform tooth learning for the car. After tooth learning is successful, the MIL turns off.

After the engine ECU, crankshaft position sensor, or crankshaft flywheel is replaced, or the DTC 'tooth not learned' is present, tooth learning must be performed.

## 6.7 IMMO Service

An immobilizer is an anti-theft mechanism that prevents a vehicle's engine from starting unless the correct ignition key or other device is present. Most new vehicles have an immobilizer as standard equipment. An important advantage of this system is that it doesn't require the car owner to activate it since it operates automatically. An immobilizer is considered as providing much more effective anti-theft protection than an audible alarm alone.

As an anti-theft device, an immobilizer disables one of the systems needed to

start a car's engine, usually the ignition or the fuel supply. This is accomplished by radio frequency identification between a transponder in the ignition key and a device called a radio frequency reader in the steering column. When the key is placed in the ignition, the transponder sends a signal with a unique identification code to the reader, which relays it to a receiver in the vehicle's computer control module. If the code is correct, the computer allows the fuel supply and ignition systems to operate and start the car. If the code is incorrect or absent, the computer disables the system, and the car will be unable to start until the correct key is placed in the ignition.

To prevent the car being used by unauthorized keys, the anti-theft key matching function must be performed so that the immobilizer control system on the car identifies and authorizes remote control keys to normally use the car.

When the ignition switch key, ignition switch, combined instrument panel, ECU, BCM, or remote control battery is replaced, anti-theft key matching must be performed.

## 6.8 Injector Coding

Write injector actual code or rewrite code in the ECU to the injector code of the corresponding cylinder so as to more accurately control or correct cylinder injection quantity.

After the ECU or injector is replaced, injector code of each cylinder must be confirmed or re-coded so that the cylinder can better identify injectors to accurately control fuel injection.

## 6.9 Battery Maintenance System Reset

This function enables you to perform a resetting operation on the monitoring unit of vehicle battery, in which the original low battery fault information will be cleared and battery matching will be done.

Battery matching must be performed in the following cases:

- Main battery is replaced. Battery matching must be performed to clear original low battery information and prevent the related control module from detecting false information. If the related control module detects false information, it will invalidate some electric auxiliary functions, such as automatic start & stop function, sunroof without one-key trigger function, power window without automatic function.
- Battery monitoring sensor. Battery matching is performed to re-match the control module and motoring sensor to detect battery power usage more

accurately, which can avoid an error message displaying on the instrument panel.

## 6.10 Diesel Particulate Filter (DPF) Regeneration

DPF regeneration is used to clear PM (Particulate Matter) from the DPF filter through continuous combustion oxidation mode (such as high temperature heating combustion, fuel additive or catalyst reduce PM ignition combustion) to stabilize the filter performance.

DPF regeneration may be performed in the following cases:

- a) The exhaust back pressure sensor is replaced.
- b) The PM trap is removed or replaced.
- c) The fuel additive nozzle is removed or replaced.
- d) The catalytic oxidizer is removed or replaced.
- e) The DPF regeneration MIL is on and maintenance is performed.
- f) The DPF regeneration control module is replaced.

## 6.11 Electronic Throttle Position Reset

This function enables you to make initial settings to throttle actuators and returns the “learned” values stored on ECU to the default state. Doing so can accurately control the actions of regulating throttle (or idle engine) to adjust the amount of air intake.

## 7 Software Update

If you did not download the software in process of product registration or a pop-up message prompting you that some new software can be updated, you may use this option to download it or keep it synchronized with the latest version.

Tap “Software Upgrade” on the Job menu to enter the update center.

By default, all diagnostic software is selected. To deselect certain software, tap “Unselect”, and then check the box next to vehicle model. Tap “Update” to start downloading. It may take several minutes to finish it, please be patient to wait. To pause downloading, tap “Stop”. To resume it, tap “Continue”. If network connection failure occurs, tap “Retry” to try again.

Once download is finished, the software packages will be installed automatically.

## 8 How to feedback diagnostic logs?

This item allows you to feedback your diagnostic problems to us for analysis and troubleshooting.

Tap “Feedback”, a pop-up message will appear:

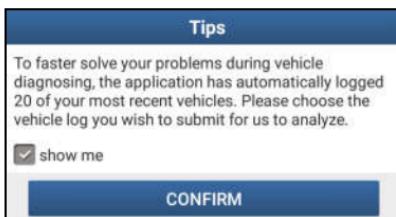


Fig. 8-1

Tap “CONFIRM” to choose the vehicle diagnostic record page.



Fig. 8-2

- Tap the desired vehicle to enter the diagnostic log selection page.

The screenshot shows a table titled "Feedback" with columns for "Vehicle", "File Name", and "Date". There are five entries, all for BMW vehicles, with file names starting with "985690009300\_BMW\_20171010170606" and dates ranging from 2017-10-10 17:06:06 to 2017-10-10 16:10:25. At the bottom right of the table are three buttons: "Select All", "Submit", and "History".

Vehicle	File Name	Date
BMW	985690009300_BMW_20171010170606	2017-10-10 17:06:06
BMW	985690009300_BMW_20171010170520	2017-10-10 17:05:20
BMW	985690009300_BMW_20171010161503	2017-10-10 16:15:03
BMW	985690009300_BMW_20171010161240	2017-10-10 16:12:40
BMW	985690009300_BMW_20171010161025	2017-10-10 16:10:25

Fig. 8-3

Select the check box and tap “Submit”. A screen similar to the following will appear:

This screenshot shows a form for submitting feedback. It includes sections for selecting a failure type (radio buttons 1-7), entering a problem description (text area), inputting vehicle information (text area), and providing contact details (dropdown for China/Email and text for Telephone). At the bottom are "Cancel" and "Submit Result" buttons.

Fig. 8-4

Choose the failure type and fill in the detailed failure description in the blank text box and telephone or email address. After inputting, tap “Submit Result” to send it to us.

B). Tap “History”, the diagnostic logs marked with different color indicate the process status of the diagnostic feedback. Green/Red/Blue means the diagnostic feedback is fixed/pending/in process respectively.

## 9 Sensorbox (Toolbox)

### 9.1 Product Summary

ArtiPad I provides an optional function of automotive sensor simulation test. "Sensor" function is specially designed to diagnose and simulate vehicle sensor faults quickly and conveniently, including "DC voltage simulation", "Fixed frequency simulation", "Predefined waveform simulation" and "Hand-painted waveform simulation".

Vehicle sensors are the signal input devices for electrical control systems, which can transform all kinds of running parameters, such as vehicle speed, coolant temperature, engine RPM, air flow, throttle opening, etc., into the electronic signal for the vehicle computer who can optimize the engine running status per the above-mentioned parameters to keep the engine working in a prime status.

Meanwhile, it integrates the functions of automobile multimeter (For detailed operations on multimeter, please refer to Chapter 10), which enables users to perform voltage, resistance and frequency test. (The function utilizes the same hardware device as the sensor module)

It features automotive sensor simulation test and multimeter test function.

#### Sensorbox

Parameters	Scope
Precision	±5%
Voltage range	-5V~+5V
Max output current	70mA
Predefined frequency range	0~150Hz
Square-wave signal pulse frequency	0~15KHz
Square-wave signal duty ratio	10%~90%

#### Multimeter

Parameters	Scope
Precision	±5%

Voltage test	Testing range	DC-400V~+400V
	Input impedance	10Mohm
Resistance test	Testing range	0~40Mohm
Frequency test	Testing range	0~25KHz
	Input impedance	1000Gohm
	Input voltage	1~12V

## 9.2 Structure & Accessories

### 9.2.1 Sensorbox structure

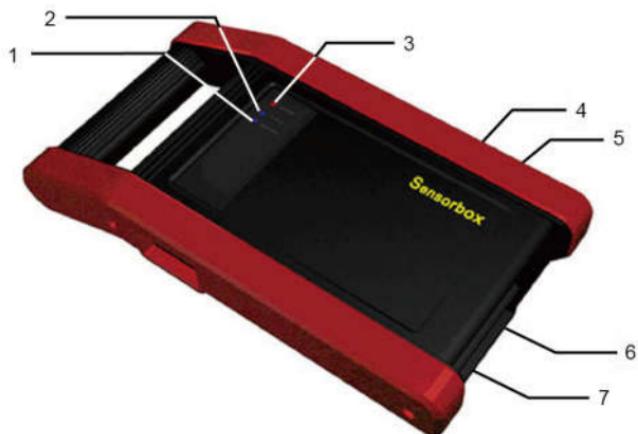


Fig. 9-1 Structural diagram of Sensorbox

Table 9-1 shows the ports and indicators for ArtiPad I sensorbox

No.	Name	Description
1	Data receiving indicator	Indicator (green) for receiving data from main unit.
2	Data sending indicator	Indicator (green) for sending data to main unit.
3	Power indicator	It keeps steady on (red) after the sensorbox is powered on.

4	Type-B USB port	Connect to main unit with USB cable when it is applied as separated USB device.
5	Power connector	Connect to power supply through the power adaptor.
6	COM	Common terminal of multimeter
7	VΩHz	Testing terminal of multimeter

### 9.2.2 Sensorbox accessories

The sensorbox accessories include sensor test cable, probe etc. See Table 9-2. As the product configuration can be different, the accessories included with the product may differ from the accessories listed on this manual. Please see the packing list attached to the product for the detailed accessories.

Table 9-2 Accessory checklist

No.	Name	Picture
1	Sensor test cable	
2	Sensor probe	
3	Multimeter probe	
4	Electronic control converting cable 1	
5	Electronic control converting cable 2	
6	Electronic control converting cable 3	
7	Electronic control converting cable 4	

## 9.3 Sensor Simulation

### 9.3.1 Connections

- Firstly, power the ArtiPad I tablet on.

2. Plug one end of the sensor test cable (black) into the "COM" interface of the sensorbox, and then the other end to the test probe or electronic control converting cable.
3. Connect one end of the sensor test cable (red) into the "VΩHz" interface of the sensorbox, and then the other end to the test probe or electronic control converting cable.

Note: Choose corresponding cables and test probes according to different terminals.

### 9.3.2 Simulation test

Simulation test enables users to exactly judge if the sensor is good or not to avoid replacing components blindly. For example, the trouble code indicates the fault is in water temperature sensor itself. But we need to confirm whether the fault results from water temperature sensor or the connections between ECU and sensors, or ECU itself. In this case, we can make full use of simulation test to input the signal of simulating water temperature sensor, instead of water temperature sensor, to the microcomputer. If the engine works better and the fault vanishes, the fault is in the water temperature sensor. If the fault still occurs, input the signal to the corresponding terminals of ECU. Consequently, if the fault disappears, the fault lies in the connection between water temperature sensor and ECU, otherwise, the fault exists in ECU.

After all connections are properly made (refer to Chapter 9.3.1 for details), tap the ArtiPad I application to enter the Job menu interface, then tap "Toolbox" -> "Sensor" to enter the test selection screen. See Fig. 9-2.



Fig. 9-2

#### 1. DC voltage simulation

In Fig. 9-2, tap [Current voltage], then tap "+" or "-" to adjust the output voltage

value. Alternatively, user can also tap edit box, then use the on-screen keyboard to input the desired value directly. After selecting or inputting the desired voltage based on the working characteristics of sensor, tap the  button, then the ArtiPad I will begin to output the simulation voltages. Please note the red probe is the output terminal of simulation voltage.

## 2. Fixed frequency simulation

This option enables you to simulate the square wave signal of pulse frequency of 0.1 ~ 15 kHz, amplitude range of -5V ~ +5V and duty cycle 10% ~ 90%.

In Fig. 9-2, tap “Fixed frequency simulation” to enter a screen similar to Fig. 9-3.

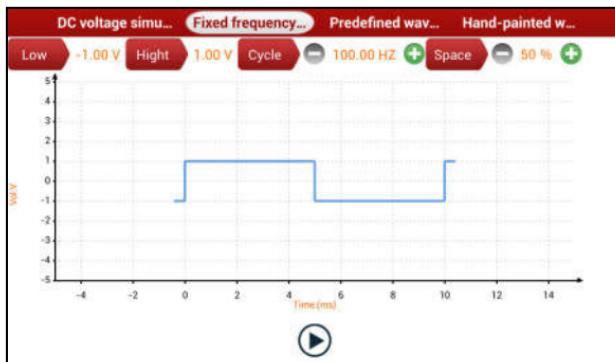


Fig. 9-3

Tap the setting option tab, then tap “+” or “-” to adjust the output. After setting, tap  to perform the test.

## 3. Predefined waveform simulation

ArtiPad I provides some common sensor waveforms which have been predefined to facilitate users to simulate sensor signals. As long as you call out the predefined waveform, then tap  to start simulating output of corresponding sensor waveform and no more parameter settings of simulation waveform are required.

In Fig. 9-3, tap “Predefined waveform simulation” to enter the screen shown as Fig. 9-4.



Fig. 9-4

Here, tap button, a screen similar to Fig. 9-5 will appear.

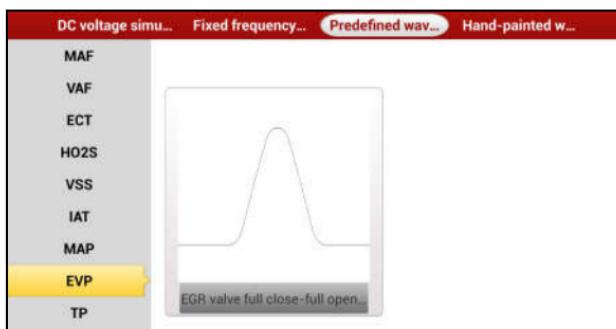


Fig. 9-5

In Fig. 9-5, the left setting column stands for sensor types and the right area displays waveform. The sensor types are explained as below:

ECT: Coolant Temperature Sensor

EVP: EGR Valve Position Sensor

HO2S: Heated Oxygen Sensor

IAT: Intake Air Temperature Sensor

MAF: Mass Air Flow Sensor

MAP: Manifold Absolute Pressure Sensor

TP: Throttle Position Sensor

VAF: Volume Air Flow Sensor

VSS: Vehicle Speed Sensor

For example, tap "ECT" – "Warm (NTC Thermistor)" in Fig. 9-5, the right screen will display the waveform of the sensor.

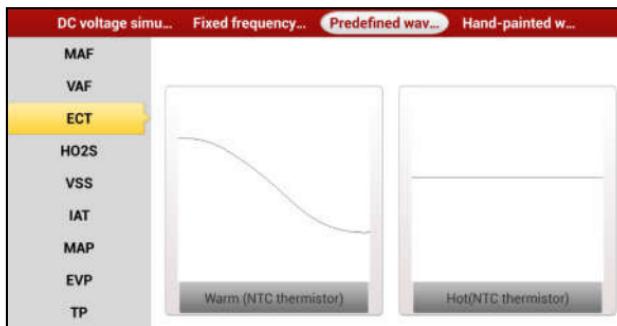


Fig. 9-6

In Fig. 9-6, tap the waveform, then the pre-defined waveform has been set.



Fig. 9-7

In Fig. 9-7, tap button to perform simulation test.

#### **4. Hand-painted waveform simulation**

This option offers great convenience for users to simulate special waveform or fault wave. Users only draw the shape of waveform which needs to be simulated in central drawing area, and then configure some parameters on the top, namely high level, low level, and cycle of waveform, then tap , ArtiPad I will output a waveform as desired.

**⚠ Warning:** Just draw a complete periodic waveform (when it is output, the system will regard the waveform in the drawing area as a periodic one). Users should draw as large as wave in drawing zone so that the system can sample more points to reduce tolerance.

In Fig. 9-2, tap “Hand-painted waveform simulation”, a screen similar to Fig. 9-8 will appear.

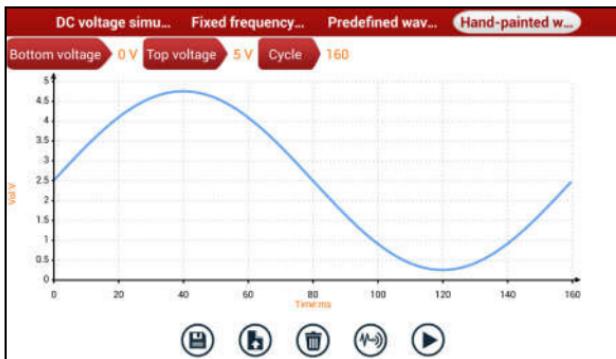


Fig. 9-8

Button descriptions:

- []: Save the current waveform.
- []: Loads the previously saved hand-drawn waveform.
- []: Clear all hand-drawn waveform.
- []: Click to call out the predefined waveform for reference.
- []: Continues the following operation.

### 9.3.3 Precautions on checking vehicle sensor

- Hold the connector when plugging or unplugging it. Do not pull the cable for unplugging.
- At first check the fuse, fusible line and terminals. Then check others after eliminating these faults.
- When measuring voltage, the ignition switch should be on and the battery voltage should not be less than 11V.
- When measuring voltage, please shake the lead lightly in the vertical and horizontal direction for more precision.
- When checking whether there is open in the line, disconnect the CEU and the relevant sensor at first, then measure the resistance among the ports of sensor in order to determine whether open-circuit / contact fault exists or not.
- When checking if there is a short in the line, please disconnect the CEU and the relevant sensor, then measure the resistance value of the ports between the connected port and the vehicle body. If the resistance value is more than  $1M\Omega$ , no fault occurs.

- Before disassembling the engine electrical control system cable, cut off the power supply, that is, turn the ignition switch OFF and disconnect the cables on the battery poles.
- Contact the test probe and the two terminals/ the two leads to be measured when measuring the voltage between the two terminals or the two leads.
- Contact the red test probe to the terminal/ the cable to be measured, and the black probe to the ground when measuring voltage of one terminal/ one cable.
- When checking the continuity of the terminals, contacts and leads, the method for measuring their resistances can be used.
- Check the faults in the terminals of the CEU to sensors, relays, etc.
- There are two test probes in the testing wire. The black one is the common signal terminal (signal GND); the red one is the input terminal for voltage, resistance, and frequency test and output terminal for simulation voltage, simulation frequency and oxygen sensor. Please choose the correct probes to match the different terminals.

## 10 Multimeter (Toolbox)

### 10.1 Main Menu

Make sure the ArtiPad I handset and the sensorbox are properly connected (Refer to Chapter 9.3.1 Connections for details), tap the ArtiPad I application and then tap “Toolbox” -> “Multimeter” to display the test menu.

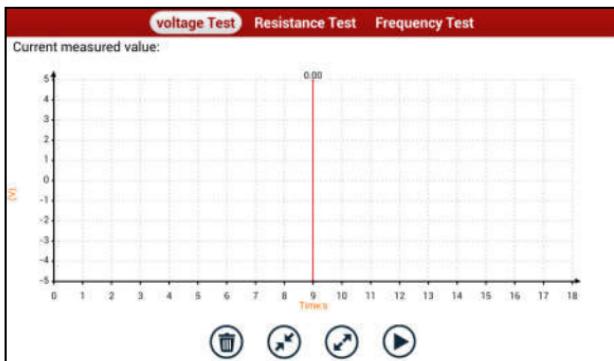


Fig. 10-1

Tap the desired test to perform related test.

The operation method on **Resistance Test** and **Frequency Test** is identical to that of **Voltage Test**. Here take Voltage test as an example for demonstration.

Tap “Voltage Test”, a screen similar to Fig. 10-2 appears:

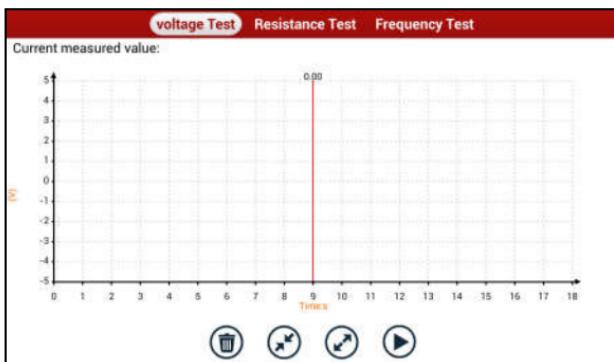


Fig. 10-2

The following operations can be done:

[]: Erases the currently displayed waveform and display it starting from the left.

[]: Reduces the range and zoom in the waveform.

[]: Increase the range and zoom out the waveform.

[]: Starts or stops the testing process.

## 10.2 Test Sample

### Knock sensor testing

#### (1) Resistance test for knock sensor

Switch ignition “OFF”, unplug the wire connector of knock sensor, test the resistance between the wire terminal and the case of knock sensor with “Resistance test” function, it shall be  $\infty$  (disconnected), and if it is  $0\Omega$ (conductive), which means the knock sensor shall be replaced. For the magnetostriction knock sensor, it can also test the resistance by the “Resistance measurement” function; the resistance shall be compliant with the specified value (see specific service manual for the detailed data), otherwise, the knock sensor shall be replaced.

#### (2) Checking for the output signal of knock sensor

Unplug the wire connector of knock sensor, check voltage between knock sensor connector terminal and ground wire of knock, it should be output pulse voltage; otherwise, the knock sensor shall be replaced.

### Coolant temperature sensor testing

#### (1) Resistance test for coolant temperature sensor

##### On vehicle testing:

Switch ignition “OFF” and unplug the wire connector of coolant temperature sensor, then use the “Resistance measurement” to test the Resistance between two terminals of sensor. The relationship between the resistance and the temperature is in inversely proportion (negative temperature coefficient), which shall be less than  $1k\Omega$  during warming up.

##### Independent testing:

Unplug the wire connector of coolant temperature sensor, then remove the sensor from the engine; place the sensor into a breaker with water and heat the water, then use the “Resistance measurement” to test the Resistance between two terminals of coolant temperature sensor at different water temperature. Compared the measured value with the standard value, if the Resistance is not

compliant with the standard, then the coolant temperature sensor shall be replaced.

(2) Output signal voltage testing for coolant temperature sensor

After installing the coolant temperature sensor, plug the wire connector of sensor, and then switch ignition ON, test the output signal voltage between the two terminals of wire connector. The tested voltage shall be in inverse proportional with the coolant temperature. When the harness of coolant temperature sensor is disconnected, the voltage shall be about 5V if the ignition switch is ON.

## 11 Batterybox (Toolbox)

### 11.1 Product Summary

ArtiPad I provides an optional function of automotive battery test, which adopts the latest state-of-the-art conductance testing technology in the world and can test vehicle's battery status. Two testing environments (Inside the Vehicle and Outside the Vehicle) are available and applicable to battery test. In addition to battery test, charging system and actuation system test can be done while Inside the Vehicle is selected.

It supports various battery standards and specifications, including CCA, DIN, IEC, EN, JIS, SAE and GB etc. It is specifically designed to help car owner, repair workshop, battery factory use battery test instrument properly and determine whether the battery is normal or not.

Battery test aims to check starting plumbic acid storage batteries for vehicles, ship, boats and aviations, etc. It can test all kinds of batteries complying with CCA, DIN, JIS, EN, GB and SA standards. For detailed test standards, please refer to Table 11-1.

Table 11-1 Test standard

Standards	Standard (Full name)	Test capacity range
CCA	Battery Council International	100~1700
DIN	Deutsche Industry Normen	100~1200
JIS	Japanese Industry Standard	26A17~245H52
EN	Europe Norm	100~1700
IEC	National Electrical Commission	100~1200
GB	Chinese National Standard	100~1200
SAE	Society of Automotive Engineers	100~1700

## 11.2 Test Environment

### 11.2.1 Test environment

Inside the vehicle test indicates that the battery connects to loading devices, such as engine, etc. After doing battery test, it can perform charging system and actuation system test, which is proceeded as a whole simultaneously. Charging system and actuation system test is not required but must not be performed before battery test. Because it is difficult for vehicle technicians to judge where is faulty exactly if they have the faintest idea of battery's status itself.

Outside the vehicle test indicates that the battery is disconnected from all loading devices on vehicles. Therefore, only battery test is supported in this condition.

### 11.2.2 Battery status and description

There are mainly 5 states as follows:

No.	States	Descriptions
1	Good battery	Indicates battery is normal.
2	Replace battery	Indicates that battery is aged or becomes rejected, or battery life cycle approaches to be exhausted. In this case, battery voltage appears to be normal, but battery itself is not well, i.e. battery polarity board has been completely vulcanized or aged. Please replace battery immediately.
3	Good-recharge	Stands for low battery. The battery is good itself.
4	Charge-retest	It is better for a few batteries to be fully charged before testing in order to avoid judging in error under special conditions.
5	Bad cell	Indicates one of the battery cells is bad and cannot work normally, but for which one is bad, it can't be verified. In this case, battery voltage is generally lower than 11V, mainly resulting from internal circuitry damage, such as short circuit, open circuit, dummy weld etc.

## 11.3 Batterybox Structure & Accessories

### 11.3.1 Batterybox structure



Fig.11-1 Batterybox structure diagram

1. Battery connector: Connect to vehicle's battery for battery test.
2. B type USB terminal: Connect to the ArtiPad I tablet with a B-shaped USB cable.

### 11.3.2 Test accessories



Fig. 11-2 Kelvin clip



Fig. 11-3 A/B cable

## 11.4. Connections & Operations

### 11.4.1 Connection

Connect one end of the A/B cable to the B type USB terminal of the batterybox, and then connect the other end to the USB port of ArtiPad I tablet. This connection applies to outside the vehicle test and inside the vehicle.

Notes:

1. Wait about 10 seconds and begin to communicate since the batterybox needs to

initialize after connection is complete, otherwise, communication may fail.

- Red lamp on the batterybox means it has been successfully powered up; If the green light is always on, it indicates the clip is well connected; while the green light blinks, it indicates that the clip has poor contact. Do not perform any test until the clip and A/B cable are properly connected.

#### 11.4.2 Inside the vehicle test

Battery test and charging system & actuation system test can be done in this mode.

##### 1. Battery test

Enter battery test main menu, and select a desired test environment as shown in Fig. 11-4.

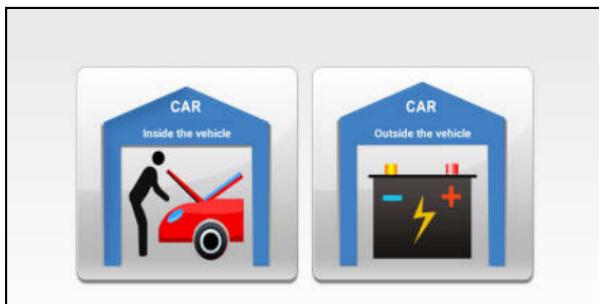


Fig. 11-4

**Notes:** The sequences of inside the vehicle and outside the vehicle test are almost the same, but under inside the vehicle condition, all loads in vehicles must be powered off for getting an exact test value.

- Firstly, the system detects whether floating electricity exists or not before testing. If yes, turn on the headlamp to remove it. Otherwise, the system starts test program directly.
- Tap [Inside the vehicle], the system starts detecting floating electricity automatically. If floating electricity is detected, it will prompt you to turn on the headlamp.
- Follow the on-screen instructions to turn on headlamp, the system starts removing floating electricity.
- Once the floating electricity is removed, a prompt message box "The floating electricity has been removed, please turn off the headlamp to continue the testing" will appear on the screen.

5. Follow the on-screen instructions to turn off the headlamp and tap [OK], the system will continue the testing. Tap , it will enter testing standard selection screen.

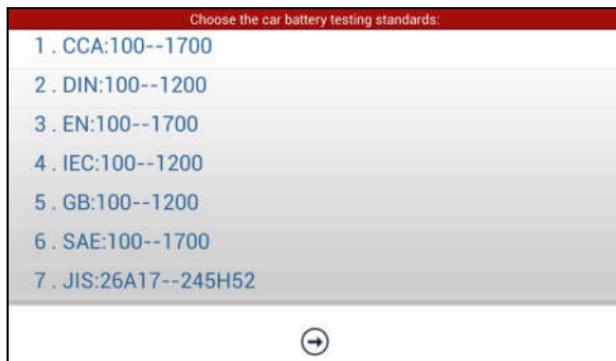


Fig. 11-5

6. Select a testing standard except for JIS and tap , a screen similar to Fig. 11-6 will appear. Users can adjust capacity size by tapping on < or > or by dragging the slider on the bar.

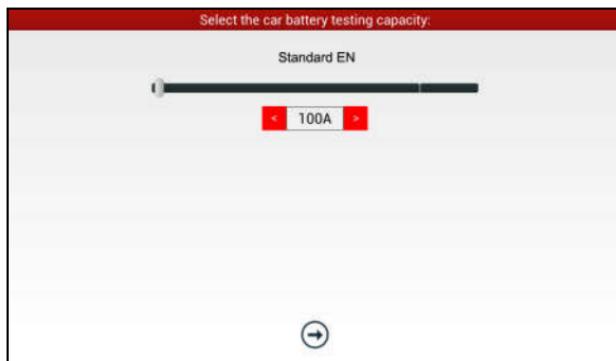


Fig. 11-6

If JIS is selected, tap , the system will enter Select testing capacity screen. Users can select corresponding standard capacity value according to battery model marked on battery.

7. Tap  and the testing result will appear on the screen.

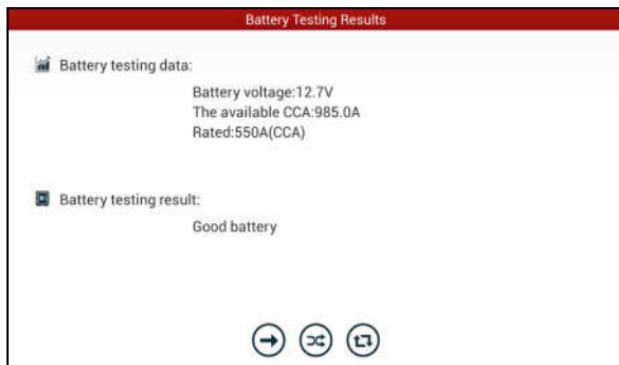


Fig. 11-7

[]: Tap it to perform the charging system and starting system test.

[]: Tap to test it again.

[]: Tap it to reset the test.

## 2. Charging system and starting system test

While performing this test, the battery's charging voltage value and starting voltage can be obtained in case of engine starting and accelerating. Based on the data, the system will judge whether battery's charging and actuation status is normal or not.

Tap in Fig. 11-7, a dialog box will pop up as Fig. 11-8.

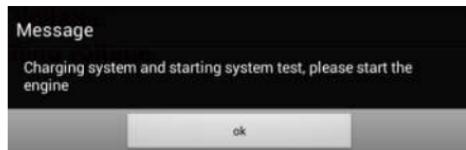


Fig. 11-8

After detecting engine starting, follow the instructions on the screen to increase the speed.

The system begins to receive test data information after acceleration was detected, as shown in Fig. 11-9.

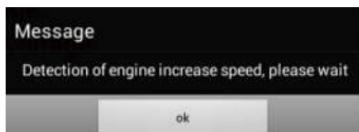


Fig. 11-9

Tap [OK], test data will be shown on the screen.

**Notes:** It is unnecessary to perform charging system and start system test after finishing battery test, but battery test must be done before undergoing charging system and starting system test.

#### 11.4.3 Outside the vehicle test

It only applies to battery test and detecting floating electricity will be ignored while performing battery test.

On Fig. 11-4, tap [Outside the vehicle] to select battery test standard.

The following operation steps are identical to Steps 6~7 in Chapter 11.4.2 Battery test. Please refer to it for details.

### 11.5 Precautions On Battery Test

For the purpose of getting accurate test results, unless otherwise special required, all loads need to be power off such as headlamp, engine etc. before testing battery.

The operating time required for charging system and actuation system test varies from person to person. If the engine does not start or accelerate within 30 seconds, the system will prompt you "receiving timeout" and return to the initial status.

Whether Engine is off or not has no influence on charging and actuation test result after increased speed is detected, but other loads need to be powered off.

The accuracy of battery voltage, charging voltage, start voltage is 0.01V in test results; CCA (Cold Cranking Amps) precision is 5CCA.

Generally, charging voltage value is greater than starting voltage.

Charging voltage range is as follows: 13.8~14.5V for domestic vehicle; 13.3~15.5V for imported vehicles. The voltage varies with different car models, so you have to judge based on related vehicle models. In general, the DC voltage is stable, but it also varies with different revolution speed.

Starting voltage range: The value higher than 9.6V is regular, otherwise it is too low. Due to different situations, whether the starting voltage is higher or not does not mean the vehicles or batteries are faulty. For detailed faults, other special

equipments are needed. To validate the accuracy of the value, the best method is to collect the signals of starting and charging voltage and observe it on an oscilloscope.

Generally, the voltage is lower than 11V for the bad cell battery, but it is possible that the battery is completely exhausted or has a serious low capacity. In this case, just recharge your battery. Bad cell always happens when the loads on a stopping vehicle are turned on for a long time.

Please note that it is normal for quick detecting of "Increase speed" because it follows the theory of detecting "Increase speed": If the detected voltage is higher than the previous battery test voltage, the system will prompt you a message of "Engine has been speeded"

It has no influence on test result in the event that engine's output voltage or engine revolution is not very stable. No matter whether the vehicle is accelerated or not, the output voltage only differs within 0.2V.

While doing inside the vehicle test, Kelvin clip is always found to be in poor contact. To remain it in good contact, please shake it several times before testing. Take down the battery connector, and test it again, the value probably varies. The deviation may arise from battery connector.

Pay more attention to connect the clip. The battery poles connect with conductor, which makes the clip has a poor connection when testing battery. A tolerance of dozens of CCA occurs if the clip is out of position, or oil, dust attaches on the pole. The gear and main body of clip should be fully matched with battery poles.

#### Notes:

1. Battery poles inside the vehicle are enveloped by connectors, which may produce some errors for test results. The tolerance results from the resistance of connectors. The greater the resistance value is, the greater the tolerance becomes. But generally, the tolerance does not affect the test conclusion.
2. Testing the battery separately generates an exact test result. The battery box is a very useful auxiliary tool for quick test. If any problems were found, test it separately for getting an exact test result.

## 12 Oscilloscope (Toolbox)

### 12.1 Introduction

The Scopebox is an optional add-on module of ArtiPad I, including automotive oscilloscope and automotive ignition waveform.

Automotive oscilloscope can make the auto repair technician quickly judge the faults on automotive electronic equipment and wiring, and the oscilloscope sweep speed is far greater than the signal frequency of such vehicles, usually 5-10 times of the measured signal. The automotive oscilloscope not only can quickly acquire the circuit signal, but also can slowly display the waveform to observe and analyze. It can also record and store the tested signal waveform which can be recalled to observe for the fast signal, having great convenience to failure analysis. Either high-speed signal (e.g.: Injection nozzle, intermittent fault signal) or the slow-speed signal (e.g. the throttle position change and the oxygen sensor signal) can be observed through automotive oscilloscope in an appropriate waveform.

The electronic signal can be compared and judged via measuring five parameters indexes. The five parameters are the amplitude (the maximum voltage of signal), the frequency (the cycle time of signal), the shape (the appearance of signal), the pulse width (the duty cycle or the time range of signal), and the array (the repetition characteristic of signal), which can be tested, displayed, saved by the automotive oscilloscope. Via the waveform analysis can further detect the circuit fault on sensors, actuators, circuits, and electronic control units, etc.

## 12.2 Structure & Accessories

### 12.2.1 Scopebox structure



Fig 12-1 Scopebox Structure Diagram

Table 12-1 shows the ports and indicators for the Scopebox.

No.	Name	Description
1	Fixed signal generator	Generate a square signal with fixed 1K frequency.
2	CH1	Channel 1
3	CH2	Channel 2
4	CH3	Channel 3
5	CH4	Channel 4
6	External trigger	External trigger signal
7	B-shaped USB interface	Connect main unit via USB cable as separated individual USB devices.
8	Power interface	Connect to power supply via the power adapter.
9	Communication indicator	It blinks in process of data communication.

10	Running indicator	It remains steady green after the Scopebox is running.
11	Power indicator	It keeps steady red after the Scopebox is powered on.

### 12.2.2 Scopebox accessories

The Scopebox includes the secondary pickup cable for 4-channel oscilloscope, crocodile clips for 4-channel oscilloscope, etc. See Table 12-2.

As the product configuration can be different, the accessories included with the product may differ from the accessories listed on this manual. Please see the packing list attached to the product for the detailed accessories.

Table 12-2 Accessory checklist

No.	Name	Picture
1	Secondary ignition pickup for 4-channel oscilloscope	
2	Crocodile clips for 4-channel oscilloscope	
3	Direct ignition extension cable	
4	6-way universal guide line for 4-channel oscilloscope	
5	BNC to 4mm connector test cable	

6	Pin connector suite for 4-channel oscilloscope	
---	--	---

## 12.3 Connection & Initial Use

### 12.3.1 Connection

The Scopebox should work with the ArtiPad I tablet.

1. Firstly, power on the ArtiPad I tablet.
2. Then plug one end of ground cable of the Scopebox into external trigger channel (GND), and the other end should be grounded.
3. Connect one end of probe cable to the CH1, CH2, CH3, or CH4 on the Scopebox, and the other end to related signal terminal.

Warning: Please use the specific capacitance probe when diagnosing the ignition high voltage line. Never connect the Scopebox to the ignition secondary circuit directly.

### 12.3.2 Initial interface introduction

Fig. 12-2 displays the initial interface of the Scopebox.

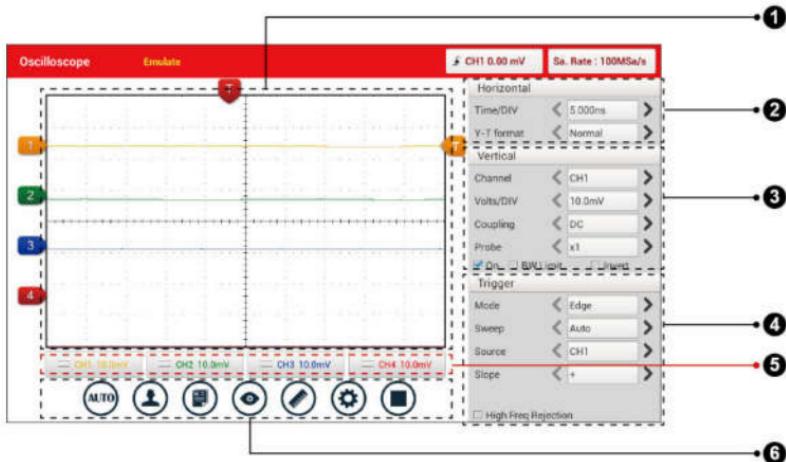


Fig. 12-2

No.	Descriptions
1	Signal display area
2	Horizontal Settings: Controls the time base.
3	Vertical Settings: Controls the amplitude of the displayed signal.
4	Trigger Settings: Controls the start event of the sweep.
5	Channel Selection Button
6	<p>Function Menu</p> <ul style="list-style-type: none"> <li> [Auto]: It indicates auto trigger setting.</li> <li> [Ref]: There are expert reference and base reference available. Expert reference enables you to recall your customized expert database, whereas base reference provides automatic pre-setting function of specialized sensors.</li> <li> [File]: Provides save snapshot, snapshot manager, waveform record and waveform replay.</li> <li> [View]: Calibration and display settings are available.</li> <li> [Measure]: Includes signal source measurement, horizontal measurement, vertical measurement and clear measurement.</li> <li> [Settings]: Shows/hides the parameter settings area including horizontal settings, vertical settings and trigger settings.</li> <li> [Start/Stop]: Starts/stops collecting waveforms.</li> </ul>

## 12.4 Operations

### 12.4.1 Channel selection and attributes setting

#### <1> Channel selection

There are two ways available for channel selection:

- Select from the channel tab shown at the bottom of the waveform display area
- Select from Vertical settings

Note: For better comparison and identification, each channel and waveform are marked in different colors.



Fig. 12-3

## <2> Channel attributes & trigger setting

Channel attributes can be set via horizontal settings and vertical settings.

### Horizontal Settings

User can make some settings directly by tapping < or > next to options.

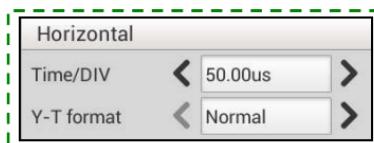


Fig. 12-4

Options descriptions:

Menu	Comments/Settings
Time/DIV	Horizontal scale. If the waveform acquisition is stopped (using the  button), the Time/DIV selector expands or compresses the waveform.
Y-T format	The conventional oscilloscope display format. It shows the voltage of a waveform record (on the vertical axis) as it varies over time (on the horizontal axis).

### Vertical Settings

The trigger determines when the Scopebox starts to acquire data and display a waveform. When a trigger is set up properly, it can convert unstable displays or

blank screens into meaningful waveforms.

When the Scopebox starts to acquire a waveform, it collects enough data so that it can draw the waveform to the left of the trigger point. The Scopebox continues to acquire data while waiting for the trigger condition to occur. After it detects a trigger, the Scopebox continues to acquire enough data so that it can draw the waveform to the right of the trigger point.

User can make some settings directly by tapping < or > next to options.

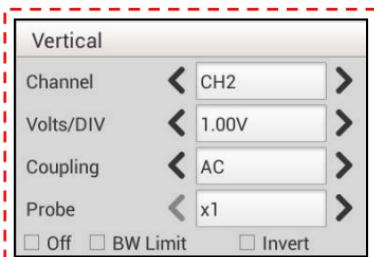


Fig. 12-5

Options descriptions:

Menu	Comments/Settings
Channel	To select the channel source.
Volts/DIV	It is defined as “Volts/Division” and mainly used to change the resolution.
Coupling	Trigger coupling determines what part of the signal passes to the trigger circuit. AC, DC and Ground are included: <u>AC</u> : Blocks the DC component of the input signal. <u>DC</u> : Passes both AC and DC components of the input signal. <u>Ground</u> : Disconnects the input signal.
Probe	When using a probe, the Scopebox allows you to select the attenuation factor for the probe. The attenuation factor changes the vertical scaling of the Scopebox so that the measurement results reflect the actual voltage levels at the probe tip.
BW Limit	<u>ON</u> : Limits the channel bandwidth to 20MHz to reduce

	display noise. <u>OFF</u> : Get full bandwidth.
Invert	<u>ON</u> : Turn on the invert function. <u>OFF</u> : Restore to the original display of the waveform.

### **Trigger setting**

Trigger indicates that when certain waveform meets the conditions that are predefined according to the requirements, the Scopebox acquires the waveform and its adjacent section, and then presents it on the screen.

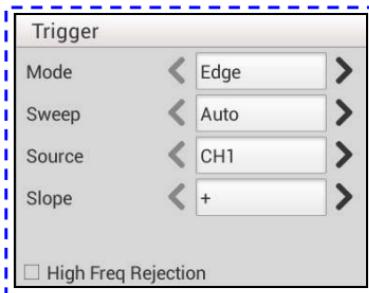


Fig. 12-6

**1) If Edge trigger is selected (An edge trigger determines whether the Scopebox finds the trigger point on the rising or the falling edge of a signal.):**

Menu	Comments/Settings
Sweep	<p>The sweep mode determines how the Scopebox behaves in the absence of a trigger event. The Scopebox provides three trigger modes: Auto, Normal, and Single.</p> <p><u>Auto</u>: It allows the Scopebox to acquire waveforms even when it does not detect a trigger condition. If no trigger condition occurs while the Scopebox is waiting for a specific period, it will force itself to trigger.</p> <p>When forcing invalid triggers, the Scopebox can not synchronize the waveform, and then waveform seems to roll across the display. If valid triggers occur, the display becomes stable on the screen.</p> <p><u>Normal</u>: This mode allows the Scopebox to acquire a waveform only when it is triggered. If no trigger occurs,</p>

	the Scopebox keeps waiting, and the previous waveform, if any, will remain on the display. <u>Single</u> : In this mode, it only acquires the waveform that generates for the first time the trigger conditions are met, and then stops after finishing capture.
Source	Select which channel as trigger signal.
Slope	+ : Trigger on rising edge - : Trigger on falling edge
High Freq Rejection	Reject high frequency signals when selected.

2) If **Pulse Width** trigger is selected (Pulse trigger occurs according to the width of pulse. The abnormal signals can be detected through setting up the pulse width condition):

Menu	Comments/Settings
Sweep	The sweep mode determines how the Scopebox behaves in the absence of a trigger event. The Scopebox provides three trigger modes: Auto, Normal, and Single. <u>Auto</u> : It allows the Scopebox to acquire waveforms even when it does not detect a trigger condition. If no trigger condition occurs while the Scopebox is waiting for a specific period, it will force itself to trigger. When forcing invalid triggers, the Scopebox can not synchronize the waveform, and then waveform seems to roll across the display. If valid triggers occur, the display becomes stable on the screen. <u>Normal</u> : This mode allows the Scopebox to acquire a waveform only when it is triggered. If no trigger occurs, the Scopebox keeps waiting, and the previous waveform, if any, will remain on the display. <u>Single</u> : In this mode, it only acquires the waveform that generates for the first time the trigger conditions are met, and then stops after finishing capture.
Source	Select which channel as trigger signal.
Condition	To select pulse condition.

Pulse Width	Set required pulse width.
High Freq Rejection	Reject high frequency signals when selected.

### 12.4.2 Auto

The Scopebox has an Auto feature that sets up the Scopebox automatically to display the input signal in a best fit.

Tap  , the Scopebox may change the current settings to display the signal. It automatically adjusts the vertical and horizontal scaling, as well as the trigger coupling, position, slope, level and mode settings.

### 12.4.3 View Settings

#### <1> Calibration

This option adjusts the Scopebox's internal circuitry to get the best accuracy. Use this function to calibrate the Scopebox's vertical and horizontal systems.

Tap  and then tap [Calibration], a dialog box similar to Fig. 12-7 will appear.

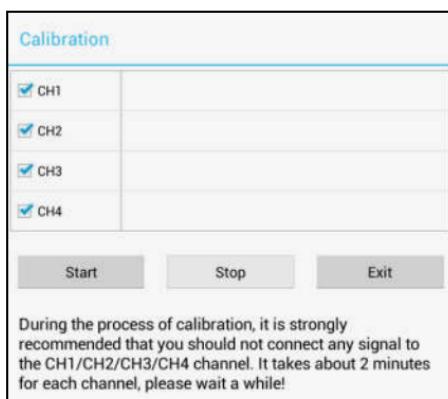


Fig. 12-7

Check the box before the channel to select it. To deselect it, just uncheck it. After choosing the desired channel(s), tap [Start] to start calibration and [Start] button will be temporarily invalid during calibrating. Tap [Stop] to stop calibrating. Once it becomes active, it indicates calibration has completed.

Note: In process of calibration, make sure CH1/CH2/CH3/CH4 has no signal input.

Moreover, calibration may take several minutes and please be patient to wait.

## <2> REF settings

Reference waveforms are saved waveforms to be selected for display. The reference function will be available after saving the selected waveform to non-volatile memory.

Tap and then [REF] to enter the REF setting screen.



Fig. 12-8

Tap < or > to select the desired reference value for time/DIV and volts/DIV. To show or hide the REF, just check/uncheck the box before On/Off.

## <3> Display settings

Tap and then [Display settings] to enter the setting screen.



Fig. 12-9

Select “Vectors” or “Dots” to display waveforms as vectors or dots. Check / uncheck the box before Grid to turn on/off grid display.

### 12.4.4 Measure

#### <1> Channel source

Tap and then [Source], a screen similar to Fig. 12-10 will appear.



Fig. 12-10

## <2> Horizontal / Vertical measure

Horizontal Measure / Vertical Measure are used to measure voltage parameter and time parameter respectively. Drag A line upwards or downwards to control voltage. Move A line left or right to fine-tune timebase. A line is a solid line and B line is a dotted line.

Tap and then [Horizontal Measure], a screen similar to Fig. 12-11 will appear.



Fig. 12-11

Note: If no desired channel is selected, the system will take the current source as the default channel.

## <3> Clear measure

Tap and then [Clear Measure], the system will clear the measurement result on screen.

### 12.4.5 File management

#### <1> Save snapshot

While viewing sampling data, tap  and then [Save Snapshot] to store the current screen.

#### <2> Snapshot manager

While viewing sampling data, tap  and then [Snapshot Manager] to enter. View, delete and edit operations are supported.

#### <3> Record waveform

This function is used to record input waveforms that are acquired by the Scopebox at a specific period, and save it as waveform file which can be recalled in future.

It can be performed only when the Scopebox is collecting data in Normal mode.

Tap , then select [Record] from the pop-up menu to start recording.

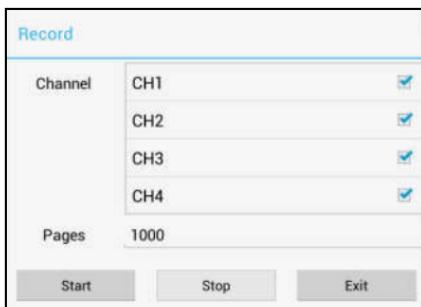


Fig. 12-12

Tap [Start] to start recording with a minimum record length of 10 frames, and [Stop] to stop recording. While recording, the recorded pages will be shown on the screen.

#### <4> Load waveform for playback

The Import function enables you to import the stored waveform file for playback and review. During replaying, the Scopebox stops collecting data automatically.

Tap , then select [Waveform replay] from the pop-up menu to enter:



Fig. 12-13

Select the file first, and then tap to open the waveform file. Tap to start the playback and tap to stop it.

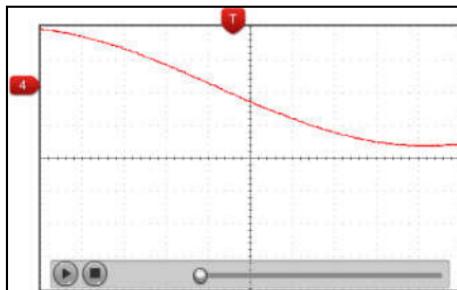


Fig. 12-14

To delete the waveform file, tap .

Tap to return to the previous screen.

#### 12.4.6 Expert reference

##### <1> Expert Reference

By default, it appears blank. As a matter of fact, Expert reference database is generated by doing the following:

1. Open and edit a snapshot;
2. Select “Joint the expert database” (refer to the following illustration), and then tap to save the waveform being displayed on the screen as REF.

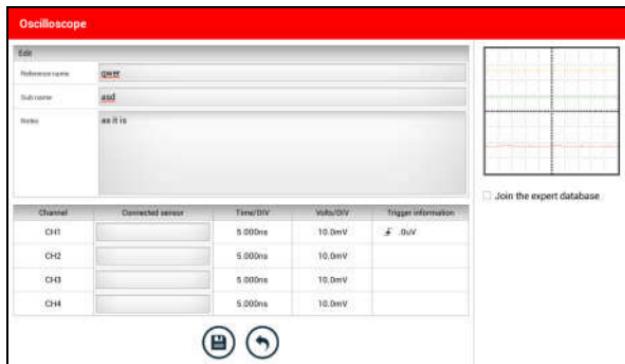


Fig. 12-15

Tap and then [Expert Reference] to enter, the following operation can be done:

- To load and recall the selected file.
- To delete the selected file.
- To edit the selected file.

## <2> Base Reference

Preset waveforms of some sensors are available for your reference.

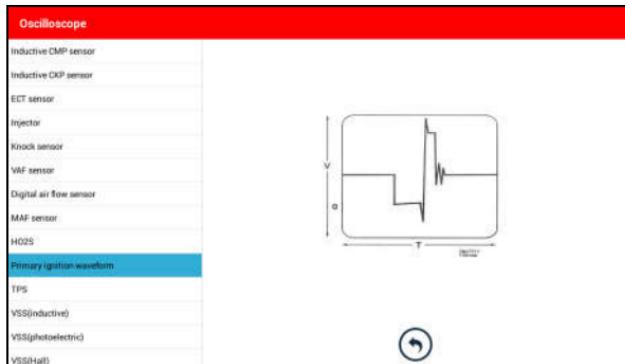


Fig. 12-16

## 13 Automotive Ignition waveform

The ignition system is the system which has greatest impact on the performances of gasoline engine, as the statistical data shows that nearly half of the failures are caused by poor work of electrical system. And the performance tests of engine often start from the ignition system. Nowadays ignition system includes distributor and distributorless. Distributorless includes independent ignition and simultaneous ignition.

1. Distributor ignition system i.e. contact breaker with contact-controlled ignition system (commonly known as the platinum) and contact breaker with noncontact-controlled ignition system combined with magnet, hall components or infrared.
2. Independent ignition system: crankshaft sensor send out the ignition timing signal and cylinder identification signal so that the ignition system can send out ignition signal to specified cylinder in specified time, each cylinder has its independent ignition coil.
3. Simultaneous ignition system: two cylinders share one ignition coil, when two cylinder pistons reach top dead center at the same time (one is compression, another is the exhaust), two spark plugs will be ignited at the same time, at this time, the ignition for the former cylinder is in high-pressure low temperature gas mixture, the ignition is valid, while for the latter one is in low-pressure high temperature exhaust gas, the ignition is invalid.

ArtiPad I can test and analyze the secondary signal for various engine ignition systems.

### 13.1 Secondary-distributor ignition analysis

Connections: Plug the BNC end of secondary ignition pickup into CH1/CH2/CH3/CH4 channel of Scopebox, then connect the high-voltage clip to high-voltage line, and crocodile clips to ground.

Tips: Common ignition sequence (the specific sequence is subject to the actual engine ignition sequence)

Four-stroke in-line four-cylinder: 1-2-4-3, or 1-3-4-2

Four-stroke in-line six-cylinder: 1-5-3-6-2-4, or 1-4-2-6-3-5

Four-stroke in-line eight-cylinder: 1-8-4-3-6-5-7-2

Five-cylinder: 1-2-4-5-3

V 6 engine: generally speaking, based on the person sitting on the driver cab, if the right side cylinder numbers on the right side, from the front to the back are as follows: 1, 3, 5; and the cylinder numbers on the left side, from the front to the back are as follows: 2, 4, 6; then the ignition sequence is: 1 - 4 - 5 - 2 - 3 - 6. If the cylinder numbers on the right side, from the front to the back are as follows: 2, 4, 6; and cylinder numbers on the left side, from the front to the back are as follows: 1, 3, 5; then the ignition sequence is: 1 - 6 - 5 - 4 - 3 - 2.

Figure 13-1 below shows the normal ignition waveform of distributor ignition system, the upper one is the secondary waveform, and the lower one is the primary waveform.

### The secondary waveform

A section is contact open period; B section is make contact period, which is the magnetizing field of ignition coil.

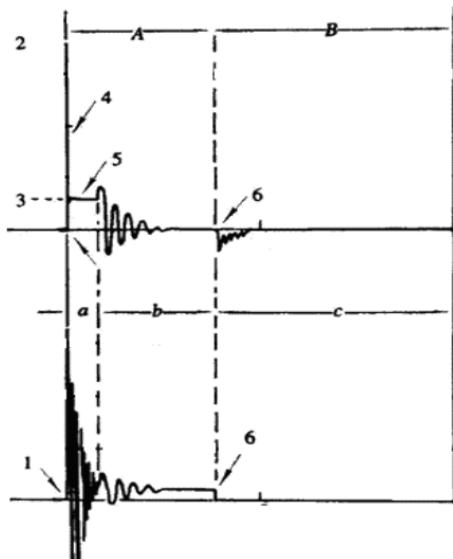


Fig. 13-1

- 1) Contact break point: the primary circuit of ignition coil cut off, the secondary

voltage was sensed and increased sharply

- 2) Ignition voltage: secondary coil voltage overcome the damper of high voltage line, the contact breaker gap and the spark plug gap to release magnetizing energy, 1-2 section is the breakdown voltage
- 3) Spark voltage: For the capacitor discharge voltage
- 4) Ignition voltage pulse: For the charge and discharge sections
- 5) Spark line: The inductance discharge process, i.e. the mutual inductance voltage of ignition coil maintains the conduction of secondary circuit
- 6) Contact point close the current flow into primary coil, the primary coil oscillates due to the mutual inductance.

### **Primary ignition waveform**

Section **a** shows the voltage oscillation on the primary circuit due to the magnetic induction of spark in the duration;

Section **b** shows the damped oscillation generated by remaining magnetic field energy after the spark;

Section **c** shows the make contact magnetizing period of primary coil.

Seen from the waveform, the amplitudes of breaker contact closed angle, break angle and breakdown voltage and spark voltage are very clear, besides, the spark delay period and two oscillations can also be tested. For the ignition system without faults, compared with the whole cycle, the contact closed angle just 45%-50% (four-cylinder), 63%-70% (six-cylinder), or 64%-71% (eight-cylinder); the breakdown voltage is over 15kv; the spark voltage is about 9kV, the spark period is greater than 0.8ms. If these values or waveform are abnormal, it means there is fault or the system needs to be adjusted.

### **13.2 Secondary-simultaneous ignition analysis**

Connections: Plug the BNC end of secondary ignition pickup into CH1/CH2/CH3 /CH4 channel of Scopebox, then connect the high-voltage clip to high-voltage line, and crocodile clips to ground.

Connection as shown in figure 13-2:



Fig. 13-2

Fig. 13-3 below shows the valid and invalid ignition waveforms. Under the working status of valid ignition, the breakdown voltage and spark voltage are higher because the cylinder is filled with fresh combustible mixture gas, which has a lower ionization level and vice versa.

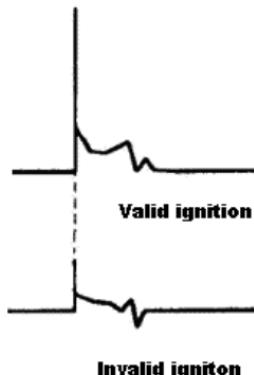


Fig. 13-3

### 13.3 Secondary-direct ignition analysis

Connection:

- 1) When the high-voltage wire is exposed, plug the BNC end of secondary ignition pickup into CH1/CH2/CH3/CH4 channel of Scopebox, then connect the high-voltage clip to high-voltage line, and crocodile clips to ground.
- 2) If no high-voltage wire exposes, dismantle ignition coil of tested cylinder and use direct ignition extension cord. Connect one end to ignition coil which should be grounded via direct ignition grounding wire, and insert the other end into cylinder to joint with spark plug. Then plug the BNC end of secondary ignition pickup into CH1/CH2/CH3/CH4 channel of Scopebox, then connect the high-voltage clip to high-voltage line, and crocodile clips to ground.

Connections are shown in Fig. 13-4:



Fig. 13-4

Fig. 13-5 shows the normal secondary (the upper one) and (the lower one) primary ignition waveform of direct ignition system. Because the on/off of primary circuit is not opening/closing of mechanical contact, but the conduction of transistor. The primary voltage has no obvious oscillations within the duration, but the voltage increases during the magnetization process due to current limiting, and this change can cause corresponding fluctuations of secondary

voltage line as a result of induction of ignition coil.

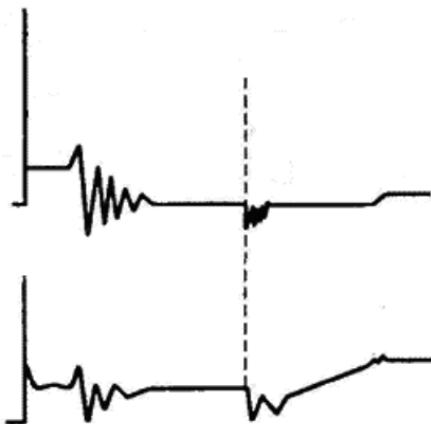


Fig. 13-5

#### 13.4 Waveform analysis mode

The ignition secondary single-cylinder waveform test is mainly used to:

- Analyze the ignition dwell angle of single cylinder.(ignition coil charging time)
- Analyze the capability of ignition coil and secondary high tension circuit (from ignition line to ignition voltage line).
- Find the improper mixture A/F ratio of single cylinder (from combustion line).
- Analyze the capability of capacitance (platinum or ignition system).
- Find the spark plug that causes misfire of the cylinder (from combustion line).

This test can provide very meaningful information about the combustion quality for each cylinder. If necessary, this test can also be performed during driving. Since the secondary ignition waveform is significantly affected by different engines, fuel systems and ignition conditions, it is useful for detecting the faults of engine mechanical parts, fuel system components, and ignition system components. Different parts of the waveform can specify that some components and systems on the specific cylinder have faults. Refer to the instructions for various parts of waveform for the related component working status of specific waveform section.

**Test methods and conditions:**

Start the engine or drive the vehicle according to the driving performance fault or poor ignition, etc. Confirm the consistency of judgement standard (the amplitude, frequency, shape and pulse width, etc., for each cylinder), check the fault of the waveform for corresponding components.

Waveform results: observe the ignition coil at the beginning of charging, the relative consistent falling edge represents the dwell angle and ignition timing of each cylinder are precise.

**Ignition line:**

Observe the height consistency of flashover voltage. Too high flashover voltage (even out of the oscilloscope screen) represents a high resistance existed in the ignition secondary circuit (for example, open circuit, or damaged spark plug or high voltage line, or too large time gap on spark plug), while the too short sparking voltage represents the resistance of ignition secondary circuit is lower than normal value (due to pollutant and broken spark plug or the high voltage line of spark plug has electrical leakage, etc.).

**Spark or combustion voltage:**

Observe the consistency of spark or combustion voltage, as it represents the consistency of spark plug and the air-fuel ratio of each cylinder. In case that the mixing ratio is too lean, the combustion voltage will be lower than normal value.

**Combustion line:**

Observe the spark or the combustion line which shall be clean with few clutter, as lots of clutter indicates the cylinder has poor ignition due to ignite too early, damaged nozzle, pollutant spark plug, or other reasons. The duration of combustion line indicates the mixing ratio of the cylinder is abnormal lean or rich. Too long combustion line (usually greater than 2ms) represents the mixing ratio is rich, whereas too short of combustion line (usually less than 0.75ms) represents the mixing ratio is lean.

**Ignition coil oscillation:**

Observe at least two oscillation waveforms after the combustion line, which will be better if more than three oscillation waveforms, as it represents the ignition coil and capacitor (on Platinum or ignition system) are normal.

**Primary voltage analysis**

According to the faulty primary voltage waveform collected by the ignition

analysis, the related components and mechanical equipment status of ignition system electrical circuit can be analyzed, which provides a reliable basis for the adjustment and maintenance of power circuit to avoid the blind demolition. The waveform shown on Fig. 13-6, appears a lot of clutter on the contact break point, which is obviously caused by the serious erosion on contact break point. It can be verified via burnishing the contact or changing the circuit breaker.

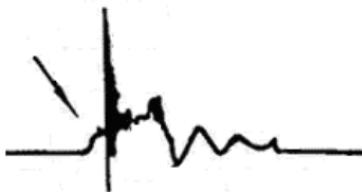


Fig. 13-6

For the primary voltage waveform shown on Fig. 13-7, the damped attenuation cycles obviously reduced on the spark period, the amplitude became lower, which is evidently caused by capacitor leakage.



Fig. 13-7

The waveform on Fig. 13-8 shows the accidental pumping during contact closing period. The irregular beating is caused by insufficient spring force.



Fig. 13-8

The curve on Fig. 13-9 shows the contact angle is too small during the

magnetizing period, which is caused by too large contact gap.



Fig. 13-9

A lot of clutter will be displayed on the horizontal section of primary waveform if contact has poor grounding, as shown below figure 13-10.

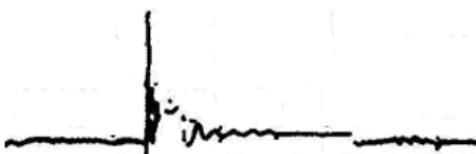


Fig. 13-10

Fig. 13-11 shows the fault of low-voltage waveform in electronic ignition system. The voltage does not rise during magnetizing, which indicates that the effect of limitation of the circuit failed and no components on distributorless ignition system can be adjusted. When this waveform is abnormal, you can only replace the ignition coils, igniter, ignition signal generator and cam position sensor, etc., one by one, to find out the faulty component or module.




Fig. 13-11

The secondary waveform is also affected by the spark plug, the combustion process, mixture gas composition, the engine thermal state of the ignition coil, etc., which is more complicated. The following lists a large number of measured


secondary faulty waveform for reference. Since various factors lead to the failures, Fig. 13-12 just shows the major possible factors for the failures.




Secondary circuit resistance is too large



Oil or coke was attached in spark plug



Spark plug gap is too large or mixture gas is too lean




Injector of electronic fuel injection poor work




Spark plug overheated or value guide leakage



Mixture ratio is too rich or spark plug leak electricity



Mixture ration is too lean or cylinder pressure is too low



Distributor cover or distributor lead is matched un-tightly

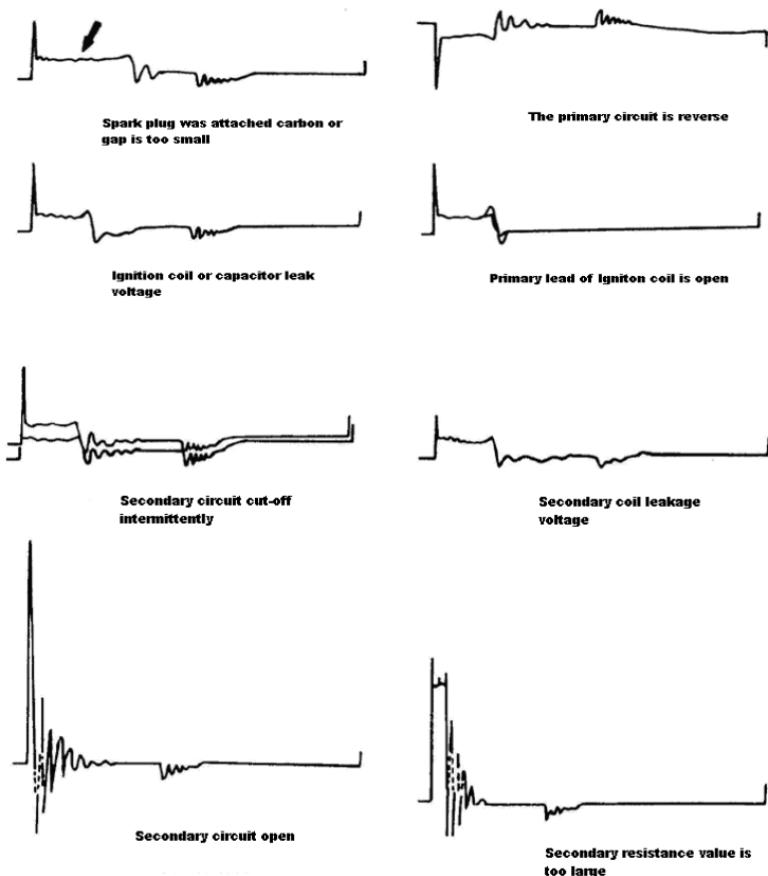


Fig 13-12

## 14 Personal Center

This function allows users to manage personal information and VCI connector.

### 14.1 My Report

This option is used to view, delete or share the saved reports.

Tap “**My Report**”, there are total 3 options available.

In case the DTC result is saved on Read Trouble Code page, the files will be listed under **Diagnostic Report** tab.

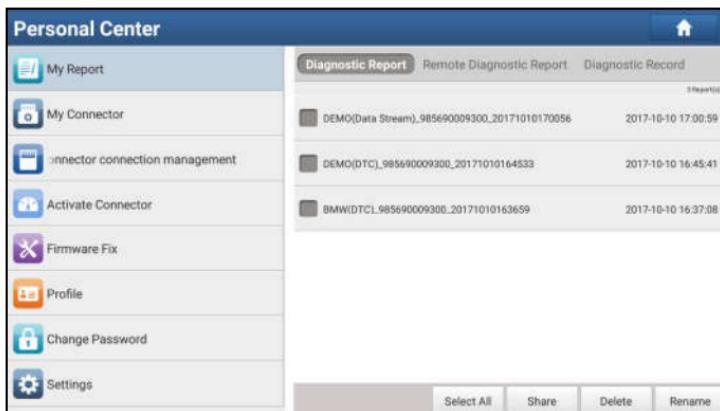


Fig. 14-1

- To select certain report, check the box before the report. To select all reports, tap “Select All”. To deselect all, tap “Unselect”.
- To share the report with others, select the desired one and then tap “Share”.
- Select the desired report and then tap “Delete” to delete it.
- To change the filename of report, tap “Rename”.

If user records the running parameters while reading data stream, it will be saved as .x431 file and appear under **Diagnostic Record** tab.

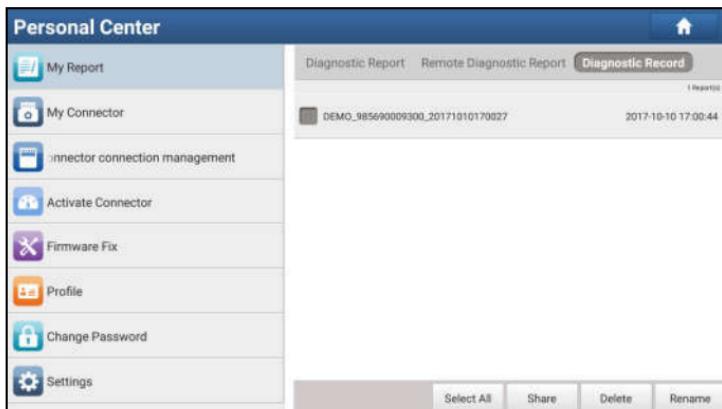


Fig. 14-2

Tap the desired one to enter:

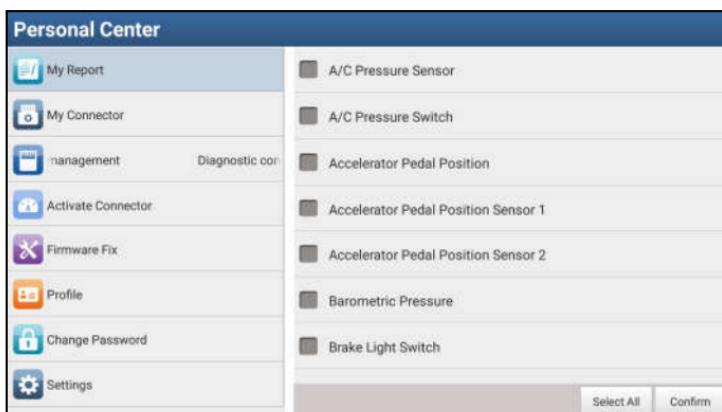


Fig. 14-3

Select the desired data stream items and tap "Confirm" to jump to the playback page:



Fig. 14-4

**On-screen Buttons:**

**Graph** – displays the parameters in waveform graphs.

**Value** – this is the default mode which displays the parameters in texts and shows in list format.

**Combine** – this option is mostly used in graph merge status for data comparison. In this case, different items are marked in different colors.

**Frame Playback** – plays back the recorded data stream items frame by frame. Once it is in frame playback mode, this button changes into "Auto Playback".

**Remote Diagnostic Report** lists all diagnostic reports generated in process of remote diagnosis.

## 14.2 My Connector

This option allows you to manage all your activated VCI connectors.

If several VCI connectors are activated on this tool, a list of connectors will be displayed on the screen. Once you choose the connector that belongs to other account, you have to log out, and then input the right account to continue.

## 14.3 Diagnostic Connector Connection Management

This option is used for ArtiPad I to deactivate pairing up with the VCI connector via Bluetooth.

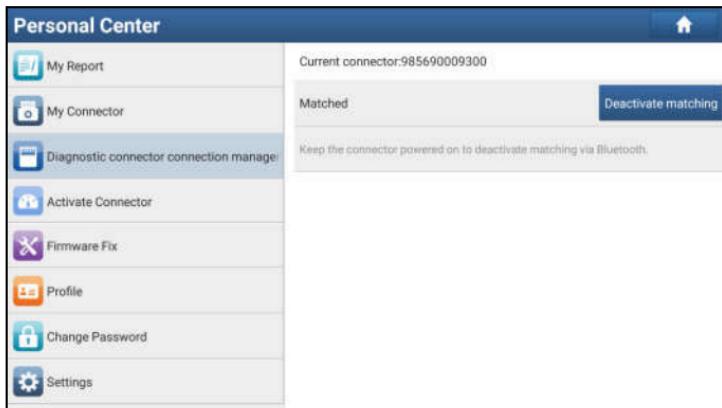


Fig. 14-5

\* Note: please be sure to keep the VCI connector powered on while performing the operation.

#### 14.4 Activate Connector

This item lets you to activate a new VCI connector.

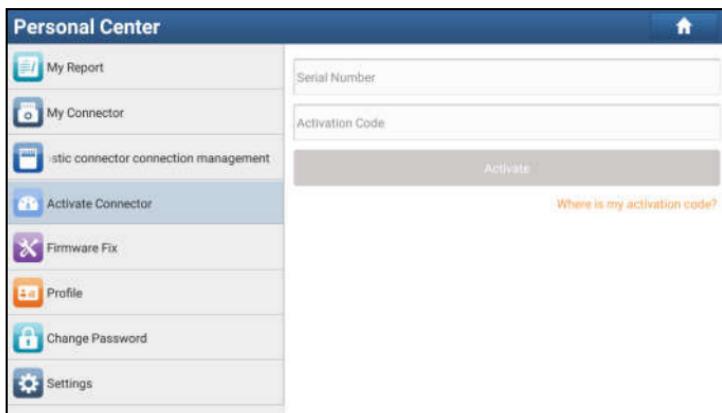


Fig. 15-6

Input the Serial Number and Activation Code, and then tap “Activate” to activate the connector.

For details on how to obtain Activation Code, tap the link below to get help.

## 14.5 Firmware Fix

Use this item to upgrade and fix diagnostic firmware. During fixing, please do not cut power or switch to other interfaces.

## 14.6 Profile

Use this item to view and configure personal information.

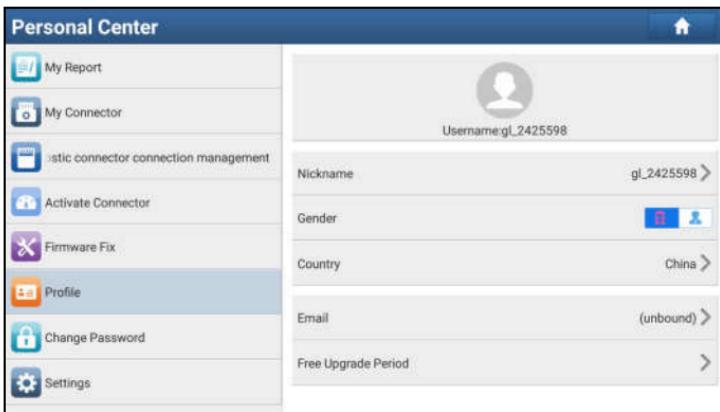


Fig. 14-7

- Tap the user image to change it.
- Tap > next to "Free Upgrade Period" to check the due date of all diagnostic software.

## 14.7 Change password

This item allows you to modify your login password.

## 15 Settings

It enables you to make some application settings and view software version information etc.

### 15.1 Units of Measurement

It is designed to configure the measurement unit. Metric System and English System are available.

### 15.2 Print Information

This option lets you define your print information. It mainly includes Workshop, Address, Telephone, Fax and License Plate.



Fig. 15-2

After inputting, tap "Save".

Once you saved the print information, it will be entered automatically in the "Add Information" box every time you save the diagnostic report.

### 15.3 Printer Set

This option is designed to establish a wireless connection between ArtiPad I and the Wi-Fi printer (sold separately) while performing printing operations.

Follow the steps below to connect the printer.

1. Tap "Printer Set".

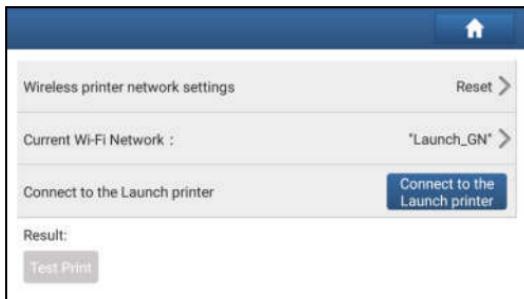


Fig. 15-2

- A. If it is the first time you have operated this printer, please proceed the following:
2. For initial use, you are suggested to reset the printer: Press and hold [MODE] & [FEED] for 8 seconds, the following resetting command will be printed out:  
at + default = 1  
ok  
at + reboot = 1  
rebooting...
  3. Tap “Reset” to configure Wi-Fi printer.

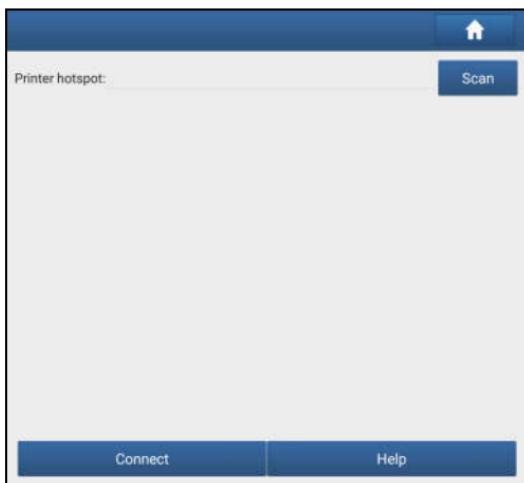


Fig. 15-3

**Step 1: Connect the printer:**

Tap “Scan” to start scanning and select the desired printer hotspot named with X-431PRINTER-XXXX (XXXX stands for 4 characters), and then tap “Connect” to enter Step 2.

**Step 2: Join the Wi-Fi printer into LAN:**

Tap “Scan” to select the desired local Wi-Fi network from the list, and type in the security password (If it is an open network, password is not required), and then tap “Confirm”.

4. Once the Wi-Fi network of the printer is connected and the printer is found, tap “Printing test” to test the printing.

Now you can use the Wi-Fi printer to print!

If the printer is not found, please reset the printer to default factory settings (refer to Step 2 for details) and check whether the current device and the printer are on the same LAN.

**B. If you have configured the Wi-Fi printer to the LAN:**

2. Tap “Connect to Printer”:

- a). If the local network remains as it is, tap “Test Print” directly to test the printing.
- b). If the local network changes, you have to reset the Wi-Fi printer.

## **15.4 Network test**

It enables you to test whether the current network environment is good or not. It is normal that you may encounter a logout while testing.

## **15.5 About**

The software version information and disclaimer are included.

## **15.6 Login/Exit from current account**

To logout the current user ID, tap “Exit from current account”.

To login the system again, tap “Login”.

# 16 Others

## 16.1 Email

The function allows you to send and receive email.

### 16.1.1 Configure an email account

**Note:** Before sending or receiving email, you have to set up an email account. In addition, this function required a stable network connection.

1. On the home screen, tap **Email**.
2. Choose the desired email account type.
3. Input email address and password, tap “Next”.

**Note:** If “Manual setup” is selected, please consult your email service provider for detailed parameter setting.

4. Follow the on-screen instructions to proceed until the system prompts you that the account setup has been finished.

### 16.1.2 Add an email account

1. Tap **Settings -> Accounts**.
2. Tap **Add account**.
3. Choose the desired account type.

## 16.2 Browser

### 16.2.1 Open browser

On the home screen, tap **Browser** to open the browser. You can choose the desired homepage or input the website address to browse.



Fig. 16-1

1 Return to the previous page.

2 Advance to the recently visited page.

- 
- 3 Refresh the current page.

---

  - 4 Close the current page.

---

  - 5 Create a new tab.

---

  - 6 Input a web address.

---

  - 7 Add the current page as bookmark.

---

  - 8 Open search bar.

---

  - 9 Open bookmark list.

---

  - 10 View more options.
- 

### 16.2.2 Download files

Files, pictures, and applications can be downloaded from the website in browser.

For example:

Tap and hold a picture, then choose “Save image” from pop-up menu to download it.

To download a link, tap and hold it, and then choose “Save link”.

To protect your ArtiPad I and personal data, please download applications from trusted sources. To configure it, tap **Settings -> Security**, and then slide the Unknown sources switch to off.

## 16.3 Synchronization

You can transfer media files and APK between the PC and ArtiPad I.

### 16.3.1 Connect to PC

- 1. Use the USB cable to connect the ArtiPad I to your PC.
- 2. Swipe from the top, a message “Connected as a media device” appears.

### 16.3.2 Run on PC

Perform the following steps:

- Locate the new disc.
- Copy the files.

### 16.3.3 Install an application

Do the following steps:

1. Tap **Settings** -> **Security**, and set the “Unknown sources” to ON, which allows you to install apps from unknown sources.
2. A dialog box appears on the screen, tap “OK” to confirm.
3. Set the tool as “Connected as a media device”, and copy the APK file from the PC to the tool.

## 16.4 Clear Cache

Doing so clears all browsing records and accounts and enables ArtiPad I to run smoothly and quickly.

1. Tap **Settings** -> **Apps**.
2. Tap  and select “Sort by size” to arrange all applications in size order.
3. Tap certain application, then tap “Clear Cache” to release the space these cache files are occupied.

## 17 FAQ

### **1. How to save power?**

- Please turn off the screen while ArtiPad I keeps idle.
- Set a shorter standby time.
- Decrease the brightness of the screen.
- If WLAN connection is not required, please turn it off.
- Disable GPS function if GPS service is not in use.

### **2. What should I do in case I forgot the screen lock?**

You can set screen lock as pattern or password. If you forgot the password, please consult your device provider or reset your device.

 Warning: Resetting may cause data loss. Before use, please make sure important data has been backed up.

### **3. How to do if the system runs slow?**

In this case, please do the followings:

- > Check all running applications and stop the unnecessary applications (Steps: Settings -> Apps -> Running -> Tap the desired application and then tap "Stop").
- > Check all installed applications, remove the unnecessary applications (Steps: Settings -> Apps -> Downloaded -> Tap the desired application and then tap "Uninstall").

If all steps mentioned above are finished and the system still works slowly. Please try to close the system and reboot your ArtiPad I.

### **4. How to reset ArtiPad I?**

 Resetting may cause data loss. Before doing so, please make sure important data and information has been backed up.

Do the following to reset ArtiPad I:

1. Tap "Settings" -> "Back & Reset".
2. Tap "Factory data reset".
3. Tap "Reset tablet".

4. Tap "Clear all data" to start resetting until the tool automatically reboots.

## **5. How to register your ArtiPad I or new VCI connector?**

Note: Before registration, please make sure the network is properly connected.

- A. If this is the first time using the handset, please refer to "Chapter 4.2.1" in the user manual for product registration.
- B. If you have activated a VCI connector before, but bought a new VCI connector due to the loss or other reasons, please follow the below steps to activate:
  1. Tap the application icon on the home screen to run it.
  2. Tap "Personal Center" -> "Activate Connector".
  3. Input product S/N and activation code, which can be found from the included password envelope, then tap "Activate".
  4. After activation completed, tap "Personal Center" -> "My Connector" to check if the activated VCI connector is displayed in the connector list or not. Multiple VCI connectors can be bound to one tool. If you intend to use one of the VCI connectors to diagnose or test a vehicle, just switch to the corresponding VCI connector.

## **6. How to update the APK and diagnostic software?**

1. Tap the application icon on the home screen to run it.
2. Tap "Software Upgrade".
3. Tap "Select all" if all the software needs to be downloaded. To cancel the selection of certain software, just click the check box before it. Tap "Update" on the bottom of the screen to start the download. During the upgrade, please make sure the handset has a stable network connection.

## **7. How to pair the VCI connector with the ArtiPad I handset?**

Users can pair the VCI connector with the ArtiPad I handset via Bluetooth when testing the vehicle or in system settings.

1. Turn the ignition on.
2. Plug the VCI connector (or use the OBD-II extension cable to connect the VCI connector and the VCI) into the vehicle's DLC.
3. On the home screen, tap **Setting -> Bluetooth**.
4. Set Bluetooth "ON". ArtiPad I will search for all the available Bluetooth devices automatically.
5. Tap the name of the connector (98\*\*\*\*\*00, where \*\*\*\*\* stands for 8 digits) to start pairing. Input the Bluetooth request code (default value: 0000 or 1234)

if necessary. Once the pairing is properly done, the system will display it as a paired device.

## **8. How to set up a network connection?**

There are 2 kinds of network connection available on ArtiPad I.

### **A. Wired Connection**

1. Connect the Ethernet cable to ArtiPad I directly.
2. On the home screen, tap **Settings** -> **Ethernet**, and slide the switch to On.

### **B. Connect to a Wi-Fi network**

ArtiPad I has built-in Wi-Fi that can be used to get online. Once you're online, you can register your ArtiPad I, browse the Internet, get and update apps and send email on your network.


Note: Once WLAN is set as ON, ArtiPad I will consume more power. While WLAN keeps unused, please turn it off to conserve battery power.

1. On the home screen, tap **Settings** -> **Wi-Fi**.
2. Tap or slide the Wi-Fi switch to ON, ArtiPad I starts searching all available wireless LANs.
3. Choose the desired Wi-Fi access point / network,
  - If the network you chose is open, you can connect directly;
  - If the selected network is encrypted, you have to enter the right security key (network password).

## **9. How to retrieve the login password?**

Please follow below steps to proceed in case you forgot the login password:

1. Tap the application icon on the home screen to run it.
2. Tap [Login] button on the upper right corner of the screen.

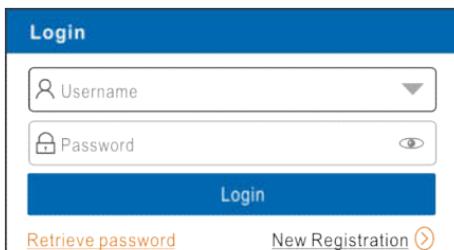

3. Tap "Retrieve password".

Please input product S/N	Username (automatically obtained)
Email address (automatically obtained)	
<input type="button" value="Get verification code by email"/>	<input type="text" value="Enter Validation Code"/>
New Password	Confirm Password
<input type="button" value="Reset Password"/>	

4. Input product S/N and follow the on-screen prompts to retrieve the password.

#### **10. The data and time of ArtiPad I can not be set.**

It is because Automatic date & time is set on your ArtiPad I. Tap Settings > Date & time, deselect “Automatic date & time” and then set the date and time manually.

---

## **Warranty**

THIS WARRANTY IS EXPRESSLY LIMITED TO PERSONS WHO PURCHASE TOPDON PRODUCTS FOR PURPOSES OF RESALE OR USE IN THE ORDINARY COURSE OF THE BUYER'S BUSINESS.

TOPDON electronic product is warranted against defects in materials and workmanship for one year from date of delivery to the user.

This warranty does not cover any part that has been abused, altered, used for a purpose other than for which it was intended, or used in a manner inconsistent with instructions regarding use. The exclusive remedy for any automotive meter found to be defective is repair or replacement, and TOPDON shall not be liable for any consequential or incidental damages.

Final determination of defects shall be made by TOPDON in accordance with procedures established by TOPDON. No agent, employee, or representative of TOPDON has any authority to bind TOPDON to any affirmation, representation, or warranty concerning TOPDON automotive meters, except as stated herein.

## **Disclaimer**

The above warranty is in lieu of any other warranty, expressed or implied, including any warranty of merchantability or fitness for a particular purpose.

## **Customer Service**

Any question during the operation, please call 86-755-23576169.

If your unit requires repair service, return it to the manufacturer with a copy of the sales receipt and a note describing the problem. If the unit is determined to be in warranty, it will be repaired or replaced at no charge. If the unit is determined to be out of warranty, it will be repaired for a nominal service charge plus return freight. Send the unit pre-paid to:

Attn: Customer Service Department

TOPDON TECH. CO., LTD.

Huafeng Bao'an Zhigu Innovation Park,

Room 701,7/F,G Building,

Yintian 4th Road, Xixiang Street,

Bao'an, Shenzhen, Guangdong

P.R.China, 518128

Topdon website: [www.topdon.com](http://www.topdon.com)

---

**Statement:**

We reserve the rights to make any change to product designs and specifications without notice. The actual object may differ a little from the descriptions in the manual in physical appearance, color and configuration. We have tried our best to make the descriptions and illustrations in the manual as accurate as possible, and defects are inevitable, if you have any question, please contact local dealer or after-sale service center.