


AUTEL[®]

MaxiAP AP2500E DONGLE

Quick Reference Guide

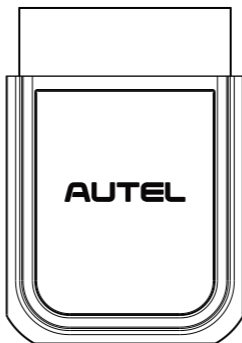

Thank you for purchasing this AUTEL tool. This tool is manufactured to a high standard and will provide years of trouble-free performance when used in accordance with these instructions and properly maintained.

Getting Started



IMPORTANT: Before operating this unit, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Failure to use this product properly may cause damage and/or personal injury and will void the product warranty.



NOTE:

- The interfaces and illustrations depicted in this Quick Reference Guide may differ slightly from the actual products.
- The user interfaces for iOS & Android devices might be slightly different. The screenshots in this Quick Reference Guide are based on the iOS app.

1

Download & install app


- Scan the QR code or search for the Autel **MaxiAP Diag** in the Apple App Store or Google Play Store to download and install the app to your device.



2

Register & log in

- Open the MaxiAP Diag app and tap **Register**. Follow the on-screen instructions to complete your registration.
- Log in with your registered phone number/ email and password.

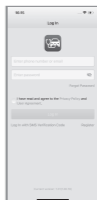

3

Key On


- Turn the vehicle ignition to the On position.



4

Locate the OBDII port

- Plug the Bluetooth dongle into the vehicle OBDII port. The vehicle OBDII port is generally located under the vehicle dashboard. Consult your vehicle user manual for the precise location.

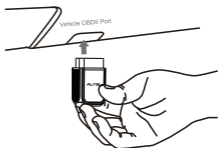

5

Add the Bluetooth dongle

- On the Main Job, tap **Me > Device Manager > Add Device** to add the AP2500E dongle to your Device Manager on the MaxiAP Diag app.



6

Enable Bluetooth to connect your device

- Launch the **Settings** on your phone and enable Bluetooth.
- Look for the serial number of your device in the list of available Bluetooth devices. Tap it to connect.
- After connecting, return to the MaxiAP Diag app.

NOTE: For Android devices, tap Me > Device Manager > Add Device > AP2500E in the MaxiAP Diag app. Tap the device name with its serial number to directly connect the Bluetooth dongle.



7

Connect device

- After the device is connected via Bluetooth, the connection status is shown as “Connected” in the MaxiAP Diag app. Tap **Finish** on the upper-left corner to proceed.



8

Bind your VCI with your account


- Tap the **Bind Device** button on the bottom of the screen to automatically bind the dongle to your account.



9

Finish Installation

- Your MaxiAP AP2500E dongle is now ready for use.



UPDATING YOUR VCI FIRMWARE

Tap **Me > Device Manager** in the MaxiAP Diag app. Select **AP2500E** from the device list and then tap **Firmware Upgrade** to upgrade the firmware when a new version becomes available.